



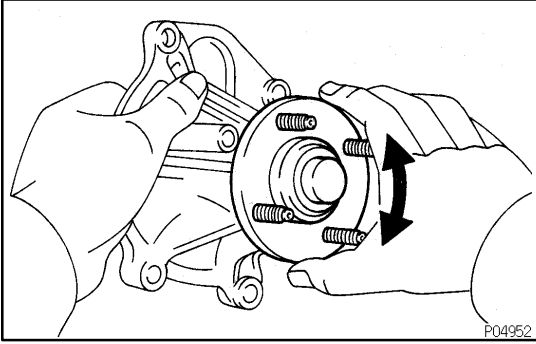

## INSPECTION

### 1. INSPECT WATER PUMP

- (a) Visually check the drain holes for coolant leakage. If leakage is found, replace the water pump.
- (b) Turn the pulley seat, and check that the water pump bearing moves smoothly and quietly. If necessary, replace the water pump.

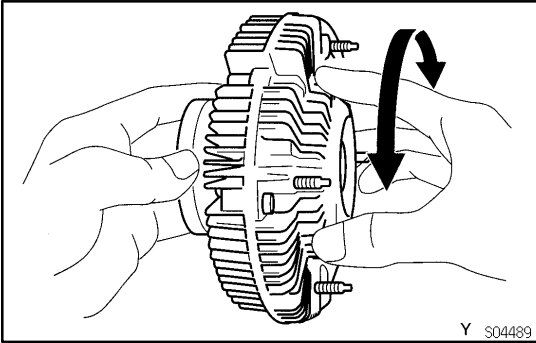

### 2. INSPECT FLUID COUPLING

Check the fluid coupling for damage and silicon oil leakage. If necessary, replace the fluid coupling.