

CIRCUIT DESCRIPTION

If trouble occurs in the ABS pump motor, the ECU cuts off current to the ABS control (solenoid) relay and prohibits ABS control.

[illegible]