


Stop Light Switch Circuit

CIRCUIT DESCRIPTION

This stop light switch senses whether the brake pedal is depressed or released, and sends the signal to the ECU.

WIRING DIAGRAM

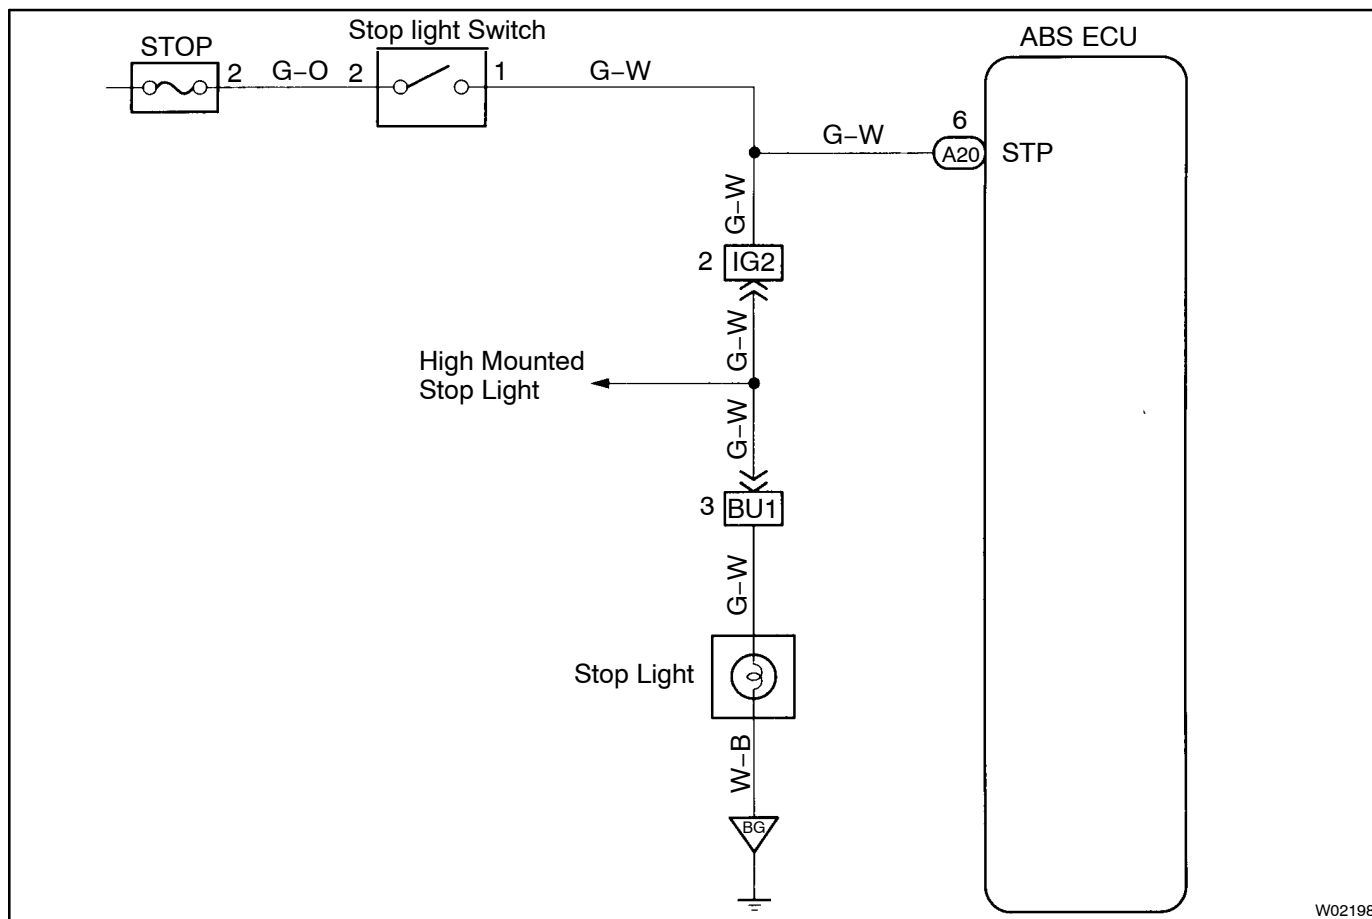

INSPECTION PROCEDURE

1	Check operation of stop light.
---	--------------------------------


CHECK:

Check that stop light lights up when brake pedal is depressed and turns off when brake pedal is released.

NG

Repair stop light circuit (See page [BE-42](#)).

OK

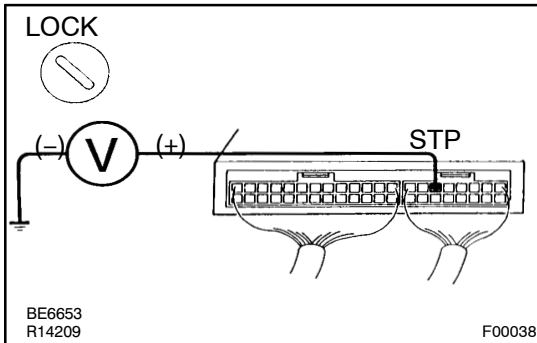2**Check voltage between terminal STP of ABS ECU and body ground.****PREPARATION:**

Remove ABS ECU with connectors still connected.

CHECK:

Measure voltage between terminal STP of ABS ECU and body ground when brake pedal is depressed.

OK:**Voltage: 8 - 14 V****OK**Proceed to next circuit inspection shown on problem symptoms table (See page [DI-201](#)).**NG****3****Check for open in harness and connector between ABS ECU and stop light switch (See page [IN-27](#)).****NG**

Repair or replace harness or connector.

OK**Check and replace ABS ECU.**