


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check.

Connecting terminals Ts and E₁ of the DLC1 in the engine compartment starts the check.


WIRING DIAGRAM

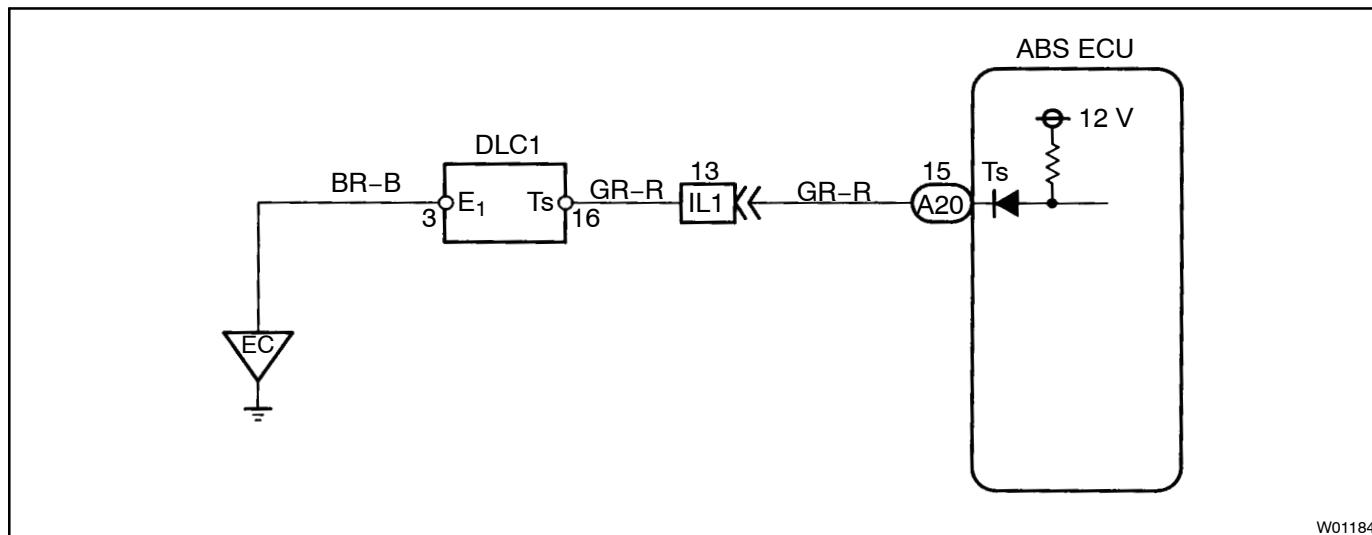

W01184

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Ts and E ₁ of DLC1. |
|---|--|

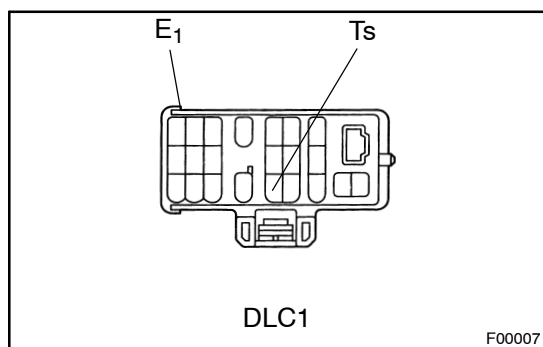

CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminals Ts and E₁ of DLC1.

OK:

Voltage: 10 - 14 V

OK

If ABS warning light does not blink even after Ts and E₁ are connected, the ECU may be defective.

NG

2	Check for open and short in harness and connector between ABS ECU and DLC1, DLC1 and body ground (See page IN-27).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.