


TERMINALS OF ECM

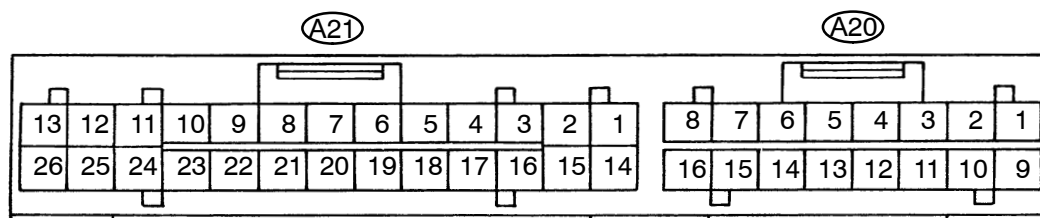

Symbols (Terminals No.)	STD Voltage (V)	Condition	R00463
BAT (A21 – 25) – GND (A21 – 2, 15)	10 – 14	Always	
IG1 (A21 – 12) – GND (A21 – 2, 15)	10 – 14	IG switch ON	
SR (A21 – 11) – R– (A21 – 24)	9 – 14	IG switch ON, ABS warning light OFF	
MR (A21 – 23) – R– (A21 – 24)	Below 1.0	IG switch ON	
SFR (A21 – 1) – GND (A21 – 2, 15)	10 – 14	IG switch ON, ABS warning light OFF	
SFL (A21 – 13) – GND (A21 – 2, 15)	10 – 14	IG switch ON, ABS warning light OFF	
SRR (A21 – 26) – GND (A21 – 2, 15)	10 – 14	IG switch ON, ABS warning light OFF	
AST (A21 – 18) – GND (A21 – 2, 15)	10 – 14	IG switch ON, ABS warning light OFF	
WA (A20 – 13) – GND (A21 – 2, 15)	Below 2.0	IG switch ON, ABS warning light ON	
	10 – 14	IG switch ON, ABS warning light OFF	
PKB (A20 – 14) – GND (A21 – 2, 15)	Below 1.5	IG switch ON, PKB switch ON	
	8 – 14	IG switch ON, PKB switch OFF	
STP (A20 – 6) – GND (A21 – 2, 15)	Below 1.5	Stop light switch OFF	
	8 – 14	Stop light switch ON	
Tc (A21 – 5) – GND (A21 – 2, 15)	8 – 14	IG switch ON	
Ts (A20 – 15) – GND (A21 – 2, 15)	8 – 14	IG switch ON	
FR+ (A21 – 16) – FR– (A21 – 3)	AC generation	IG switch ON Slowly turn right front wheel	
FL+ (A21 – 9) – FL– (A21 – 22)	AC generation	IG switch ON Slowly turn left front wheel	
RR+ (A20 – 8) – RR– (A20 – 16)	AC generation	IG switch ON Slowly turn right rear wheel	
RL+ (A20 – 9) – RL– (A20 – 1)	AC generation	IG switch ON Slowly turn left rear wheel	
GS1 (A20 – 12) – GND (A21 – 2, 15)	4 – 6 or 7 – 11	IG switch ON	
GS2 (A20 – 3) – GND (A21 – 2, 15)	4 – 6	IG switch ON	