

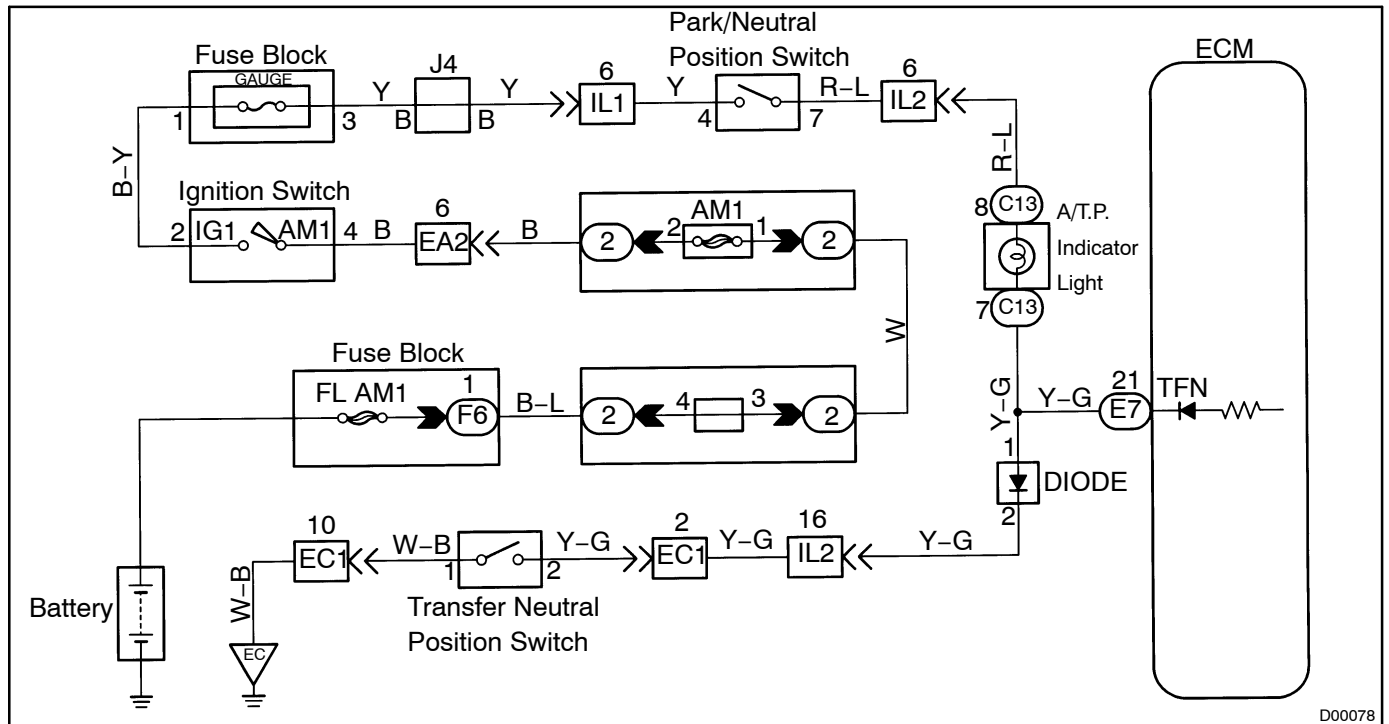
A/T. P. (Automatic Transmission Parking) Indicator Circuit

CIRCUIT DESCRIPTION

The propeller shaft and wheels are free even when the transmission shift lever is set to P as long as the transfer shift lever is in Neutral position. The A/T.P. indicator light lights up to warn the drive that the propeller shaft and wheels are not locked.

If the A/T.P. indicator light goes on, the transfer shift lever should be shifted out of N position.

WIRING DIAGRAM



INSPECTION PROCEDURE

- 1 Check park/neutral position switch (See page [DI-173](#)).

NG

 
Replace the park/neutral position switch.

OK

2	Check transfer neutral position switch (See page TR-40).
---	---

OK

 
Replace the transfer neutral position switch.

NG

3	Check combination meter (See page BE-51).
---	--

NG

Repair or replace the combination meter.

OK

Check and replace the harness and connector (See page [IN-27](#)).