


Diagnosis Circuit

CIRCUIT DESCRIPTION

This circuit sends a signal to the ECU that DTC output is required.


WIRING DIAGRAM

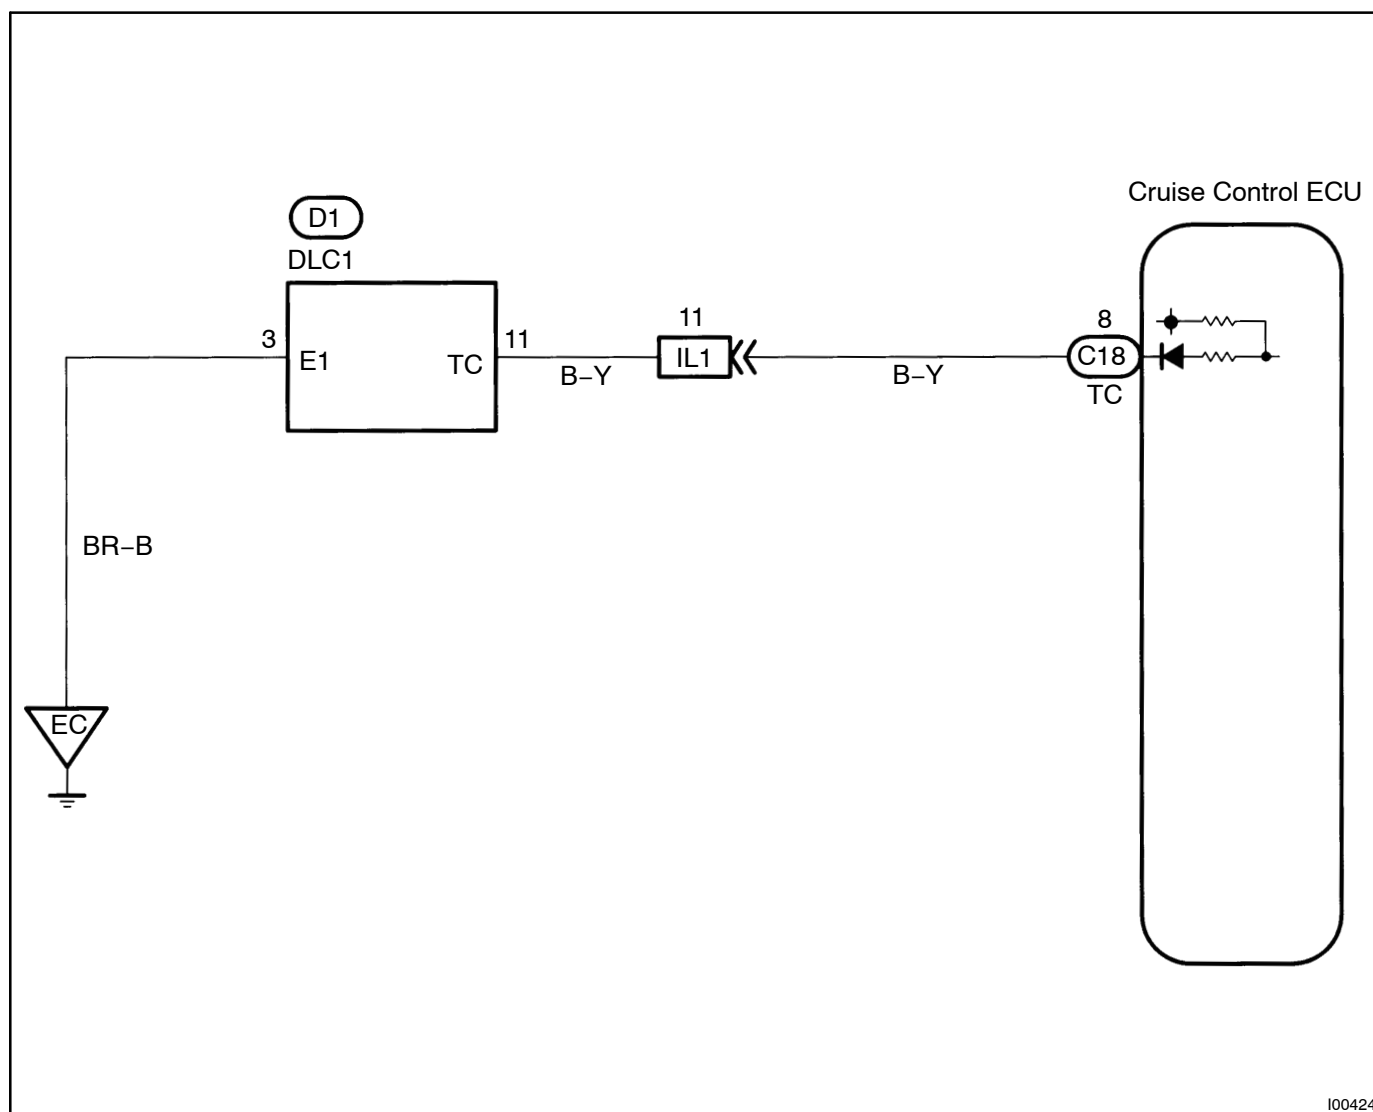

I00424

INSPECTION PROCEDURE

- 1** Check voltage between terminals Tc and E₁ of DLC1.

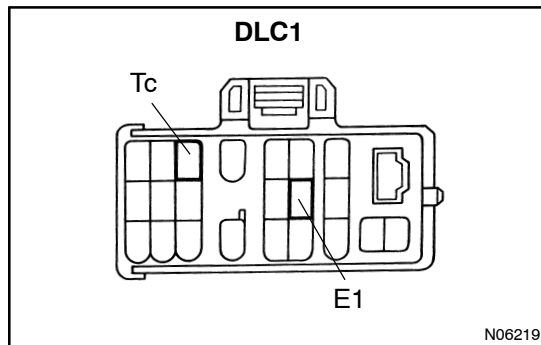**PREPARATION:**

Turn ignition switch ON.

CHECK:

Measure voltage between terminals Tc and E₁ of DLC1.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-297](#)).

NG

- 2** Check harness and connector between cruise control ECU and DLC1, DLC1 and body ground (See page [IN-27](#)).

NG

Repair or replace harness or connector.

OK

Check and replace cruise control ECU (See page [IN-27](#)).