


CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.


WIRING DIAGRAM

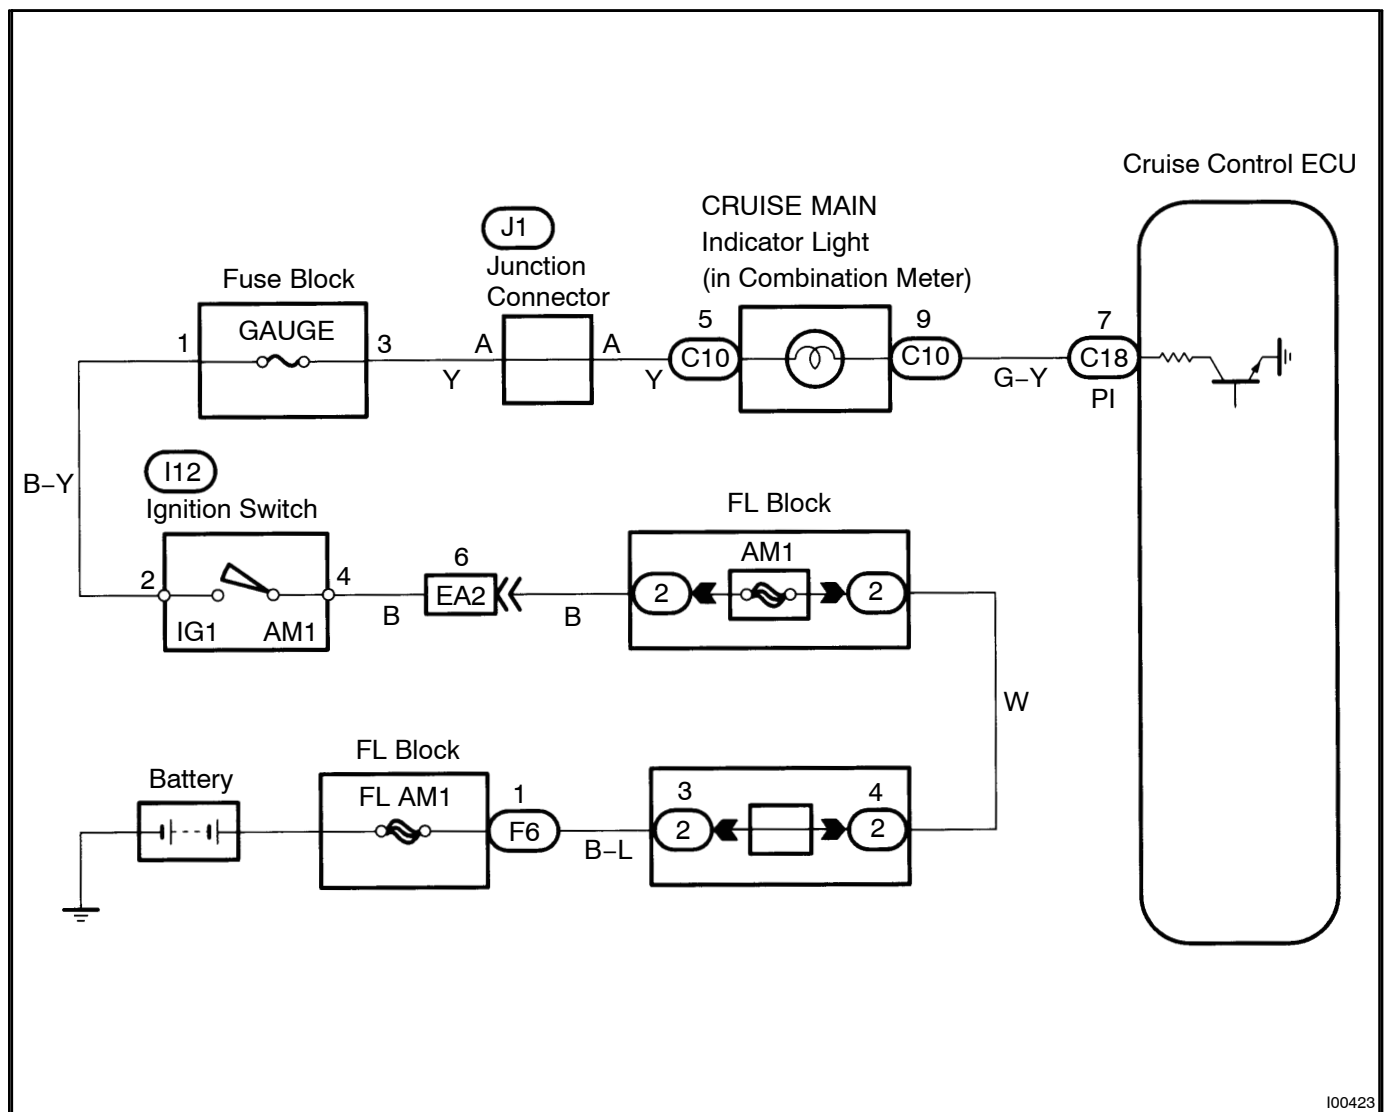

I00423

INSPECTION PROCEDURE

1	Check voltage between terminals PI and GND of cruise control ECU connector.
---	---

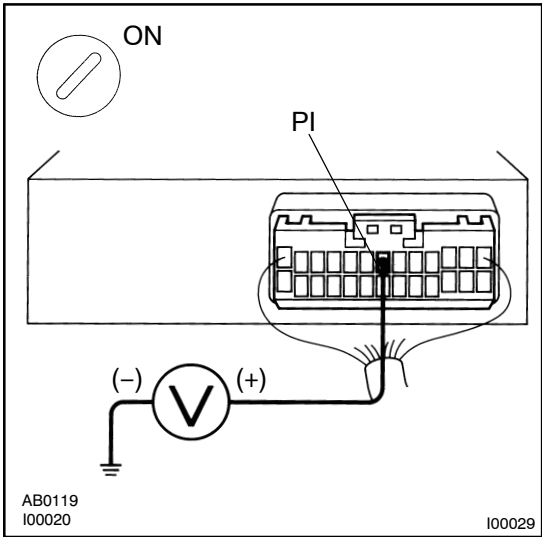

PREPARATION:

Tun ignition switch ON.

CHECK:

Measure voltage between terminals PI and GND of ECU connector when main switch on and off.

OK:

Switch position	Voltage
OFF	10 - 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-297](#)).

NG

2	Check combination meter (See page BE-54).
---	--

NG

Replace combination meter.

OK

Check and replace cruise control ECU (See page [IN-27](#)).