

## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

| DTC No.<br>(See Page) | Circuit inspection                   | Trouble Area                                                                                                                                                                                                                                                                                   |
|-----------------------|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11<br>(DI-298)        | Actuator Motor Circuit               | <ul style="list-style-type: none"> <li>• Actuator motor</li> <li>• Harness or connector between cruise control ECU and actuator motor</li> <li>• Cruise control ECU</li> </ul>                                                                                                                 |
| 12<br>(DI-300)        | Actuator Magnetic Clutch Circuit     | <ul style="list-style-type: none"> <li>• STOP Fuse</li> <li>• Stop light switch</li> <li>• Actuator magnetic clutch</li> <li>• Harness or connector between cruise control ECU and actuator magnetic clutch, actuator magnetic clutch and body ground</li> <li>• Cruise control ECU</li> </ul> |
| 13<br>(DI-303)        | Actuator Position Sensor Circuit     | <ul style="list-style-type: none"> <li>• Actuator position sensor</li> <li>• Harness or connector between cruise control ECU and actuator position sensor</li> <li>• Cruise control ECU</li> </ul>                                                                                             |
| 14<br>(DI-306)        | Actuator Mechanical Malfunction      | <ul style="list-style-type: none"> <li>• Actuator motor (actuator lock: motor, arm)</li> <li>• Harness or connector between cruise control ECU and actuator motor</li> <li>• Cruise control ECU</li> </ul>                                                                                     |
| 21<br>(DI-308)        | Open in Vehicle Speed Sensor Circuit | <ul style="list-style-type: none"> <li>• Combination meter</li> <li>• Harness or connector between cruise control ECU and combination meter, combination meter and vehicle speed sensor</li> <li>• Vehicle speed sensor</li> <li>• Cruise control ECU</li> </ul>                               |
| 23<br>(DI-311)        | Vehicle Speed Signal Abnormal        | <ul style="list-style-type: none"> <li>• Vehicle speed sensor</li> <li>• Cruise control ECU</li> </ul>                                                                                                                                                                                         |
| 32<br>(DI-312)        | Control Switch Circuit               | <ul style="list-style-type: none"> <li>• Cruise control switch</li> <li>• Harness or connector between cruise control ECU and cruise control switch, cruise control switch and body ground</li> <li>• Cruise control ECU</li> </ul>                                                            |