

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
SET not occurring or CANCEL occurring. (DTC is Normal)	1. Main Switch Circuit (Cruise control switch) 2. Vehicle Speed Sensor 3. Control Switch Circuit (Cruise control switch) 4. Stop Light Switch Circuit 5. Park/Neutral Position Switch Circuit 6. Actuator Motor Circuit 7. Cruise Control Cable 8. Cruise Control ECU	DI-332 DI-308 DI-312 DI-315 DI-324 DI-298 DI-338 IN-27
SET not occurring or CANCEL occurring. (DTC does not output)	1. ECU Power Source Circuit 2. Cruise Control ECU	DI-327 IN-27
Actual vehicle speed deviates above or below the set speed.	1. Cruise Control Cable 2. Vehicle Speed Signal Abnormal 3. Electronically Controlled Transmission Communication Circuit 4. Actuator Motor Circuit 5. Idle Signal Circuit (Main throttle position sensor) 6. Cruise Control ECU	DI-338 DI-311 DI-321 DI-298 DI-318 IN-27
Gear shifting frequent between 3rd O/D when driving on uphill road. (Hurting)	1. Electronically Controlled Transmission Communication Circuit 2. Cruise Control ECU	DI-321 IN-27
Cruise control not cancelled, even when brake pedal is depressed.	1. Cruise Control Cable 2. Stop Light Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-338 DI-315 DI-298 IN-27
Cruise control not cancelled, even when transmission is shifted to "N" position.	1. Cruise Control Cable 2. Park/Neutral Position Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-338 DI-324 DI-298 IN-27
Control switch does not operate. (SET/COAST, ACC/RES, CANCEL not possible)	1. Cruise Control Cable 2. Control Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-338 DI-312 DI-298 IN-27
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less.	1. Cruise Control Cable 2. Vehicle Speed Signal Abnormal 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-338 DI-311 DI-298 IN-27
Poor response is ACCEL and RESUME modes.	1. Cruise Control Cable 2. Electronically Controlled Transmission Communication Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-338 DI-321 DI-298 IN-27
O/D does not RESUME, even though the road is not uphill.	1. Electronically Controlled Transmission Communication Circuit 2. Cruise Control ECU	DI-321 IN-27
DTC memory is erased.	1. Back-up Power Source Circuit 2. Cruise Control ECU	DI-330 IN-27
DTC is not output, or is output when it should not be.	1. Diagnosis Circuit 2. Cruise Control ECU	DI-336 IN-27
Cruise MAIN indicator light remains ON or fails to light up.	1. Cruise MAIN Indicator Light Switch Circuit	DI-334