

DTC	P1335	Crankshaft Position Sensor Circuit Malfunction (during engine running)
------------	--------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0335 on page [DI-62](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335	No crankshaft position sensor signal (NE signal) to ECM with engine speed 1,000 rpm or more	• Open or short in crankshaft position sensor circuit for NE signal • Crankshaft position sensor for NE signal • Starter • ECM

WIRING DIAGRAM

Refer to DTC P0335 on page [DI-62](#) for WIRING DIAGRAM and INSPECTION PROCEDURE.