


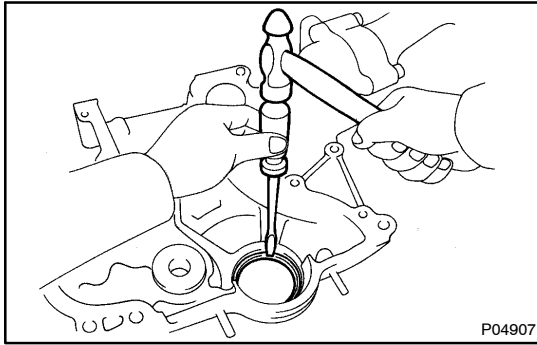


REPLACEMENT

HINT:

There are 2 methods to replace the oil seal which are as follows:

1. REPLACE CRANKSHAFT FRONT OIL SEAL

If timing chain cover is removed from cylinder block

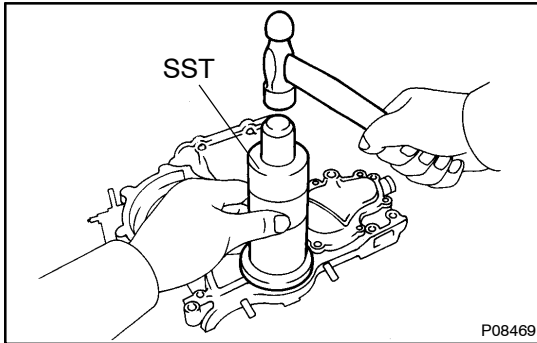

- (a) Using a screwdriver and a hammer, tap out the oil seal.
- (b) Using SST and a hammer, tap in a new oil seal until its surface is flush with the timing chain cover edge.


SST 09316-60010 (09316-00010, 09316-00050)

- (c) Apply MP grease to the oil seal lip.

NOTICE:

Do not let foreign matter get onto the lip of the oil seal.

If timing chain cover is installed to cylinder block:

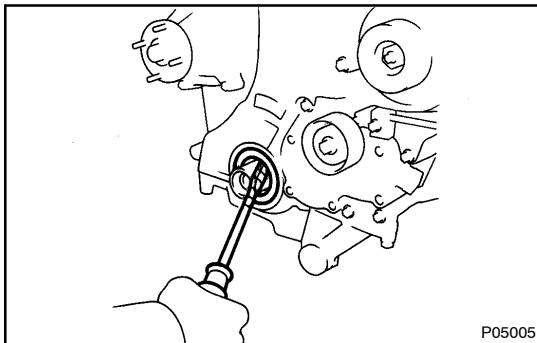

- (d) Using a screwdriver, pry out the oil seal.


NOTICE:

Be careful not to damage the crankshaft. Tape the screwdriver tip.

- (e) Apply MP grease to a new oil seal lip.

NOTICE:

Do not let foreign matter get onto the lip of the oil seal.

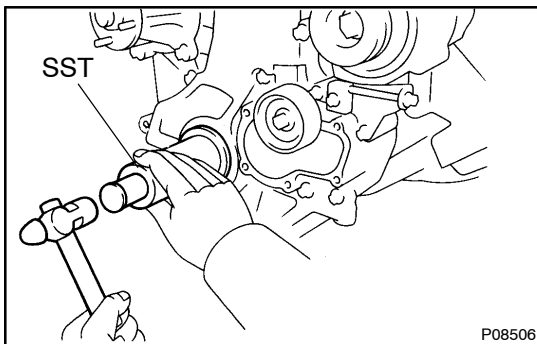

- (f) Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover edge.

SST 09316-60011 (09316-00011, 09316-00051)