
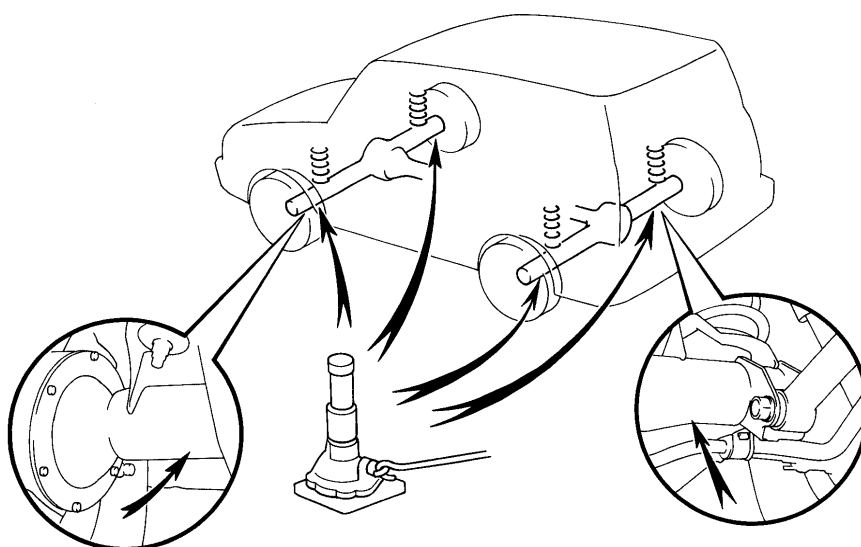


# VEHICLE LIFT AND SUPPORT LOCATIONS

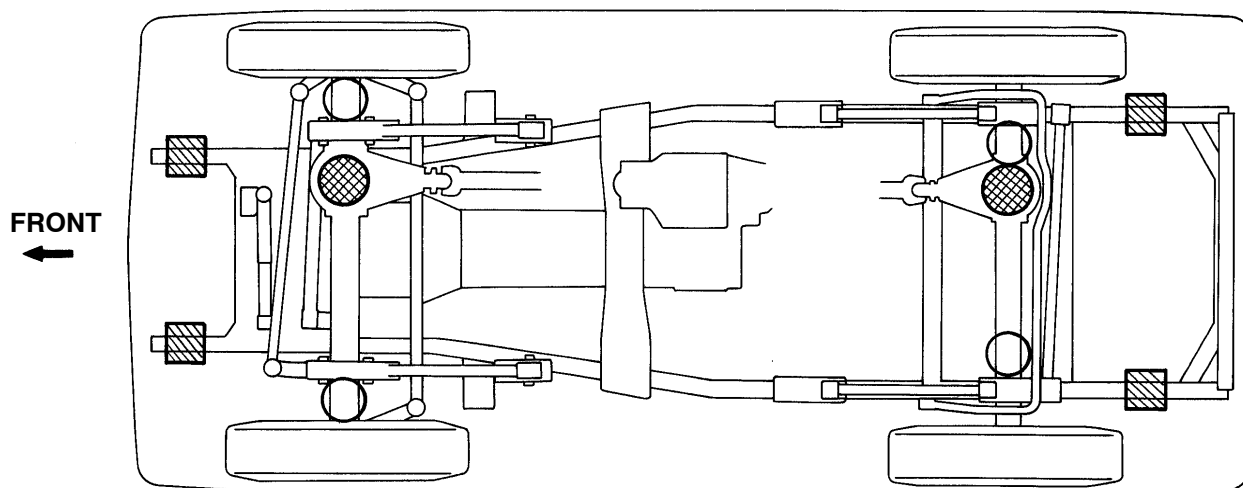

## JACK POSITION

Front

Rear

Engine under cover

Rear differential carrier

## SCREW TYPE JACK POSITION

## SUPPORT POSITION

Safety stand



Z00796