

ENGINE

INSPECTION

HINT:

Inspect these items when the engine is cold.

1. INSPECT AIR FILTER

(a) Visually check that the air cleaner element is not excessively dirty, damaged or oily.

If necessary, replace the air cleaner element.

(b) Clean the element with compressed air. First blow from the inside thoroughly, then blow off the outside of the element.

2. REPLACE TIMING CHAIN (See page EM-17)

3. INSPECT VALVE CLEARANCE

(See page EM-4)

4. INSPECT DRIVE BELT

(See page CH-2)

5. REPLACE ENGINE OIL AND OIL FILTER

(See page LU-2)

6. REPLACE ENGINE COOLANT

(See page CO-2)

7. INSPECT EXHAUST PIPES AND MOUNTINGS

Visually inspect the pipes, hangers and connections for severe corrosion, leaks or damage.

8. REPLACE AIR CLEANER FILTER

Replace the air cleaner filter with a new one.

9. INSPECT FUEL LINES, CONNECTIONS VALVE

(See page EC-6)

Visually inspect the fuel lines for cracks, leakage loose connections, deformation or tank band looseness.

10. INSPECT GASKET IN FUEL TANK CAP

(See page EC-6)

11. REPLACE SPARK PLUGS

(See page IG-1)

12. INSPECT CHARCOAL CANISTER

(See page EC-6)