

INSTALLATION

NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace with new parts.**
1. **INSTALL AIRBAG SENSOR ASSEMBLY**
 - **Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.**
 - **Never repair a sensor in order to reuse it.**
 - (a) Using a torx wrench, install the airbag sensor assembly with the 4 screws.
Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)
 - (b) Connect the connector.

NOTICE:

- **Installation of the connector is done with the sensor assembly installed.**
 - **Make sure the sensor assembly is installed to the specified torque.**
 - **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
 - **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
 - **After installation, shake the sensor assembly to check that there is no looseness.**
2. **INSTALL THE REMOVED PARTS**