

INSTALLATION

NOTICE:

Never use airbag parts from another vehicle.

When replacing parts, replace with new parts.

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY


Install the airbag door and front passenger airbag assembly to the instrument panel.

CAUTION:

- Make sure that no foreign objects are trapped between the airbag and the module.
- Do not damage the strap when installing the module. If the airbag door is cracked or its surface is peeling, always replace it with a new airbag door.

NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

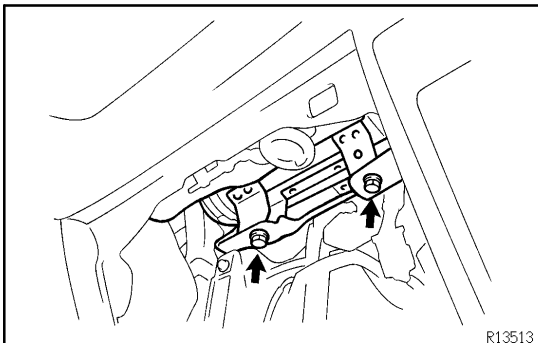

2. INSTALL INSTRUMENT PANEL


(See page [BO-103](#))

Install the 2 bolts to instrument panel reinforcement.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

NOTICE:

Make sure the front passenger airbag assembly is installed to the specified torque. When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.

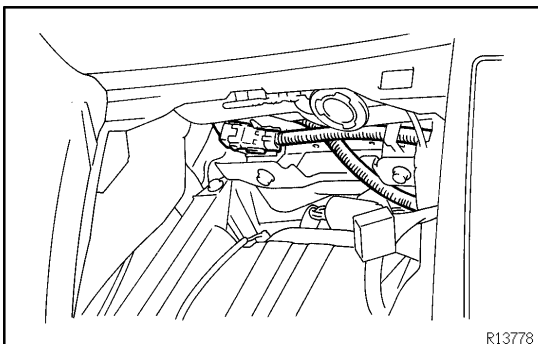

3. CONNECT AIRBAG CONNECTOR

- (a) Connect the airbag connector.
- (b) Install the airbag connector to the airbag bracket.
- (c) Install the glove compartment door.