


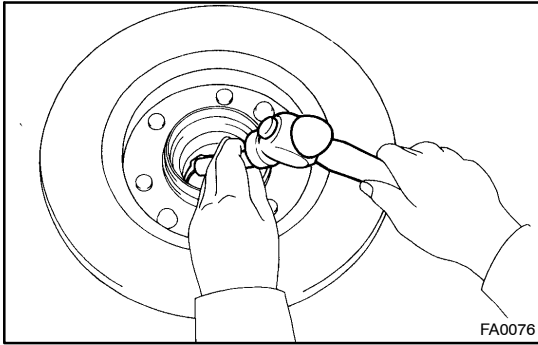


REPLACEMENT

1. INSPECT BEARINGS

Clean the 2 bearings and outer races and inspect them for wear or damage.

2. REPLACE BEARING OUTER RACES

- (a) Using a brass bar and hammer, remove the bearing outer races.

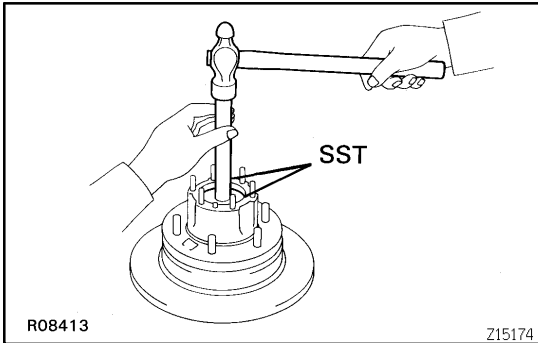

- (b) Outside race:

Using SST and a hammer, carefully install 2 new bearing outer races.

SST 09950-60020 (09951-00720),
09950-70010 (09951-07150)

- (c) Inside race:

Using SST and a hammer, carefully install 2 new bearing outer races.

SST 09950-60020 (09951-00810),
09950-70010 (09951-07150)