


## FRONT LATERAL CONTROL ROD REMOVAL

SA1UW-02

### 1. REMOVE FRONT WHEEL

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

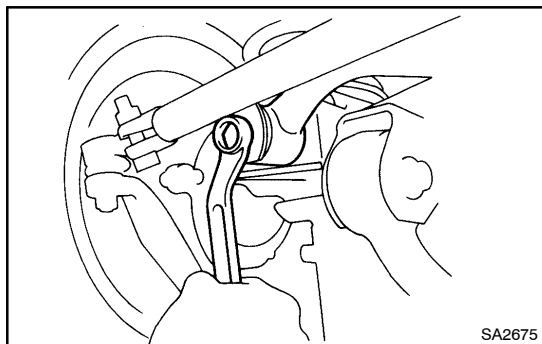


### 2. DISCONNECT LATERAL CONTROL ROD FROM AXLE HOUSING

Remove the bolt and disconnect the lateral control rod from the axle housing.

**Torque: 171 N·m (1,750 kgf·cm, 127 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.

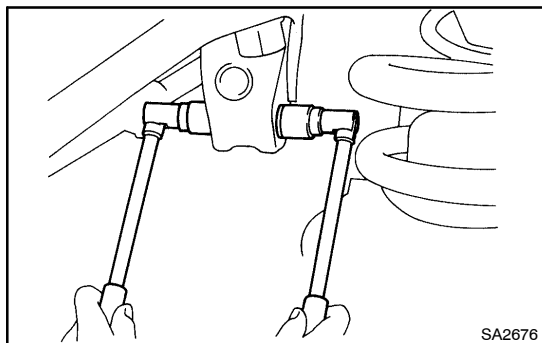

### 3. REMOVE LATERAL CONTROL ROD FROM FRAME

Remove the nut, bolt and lateral control rod.

**Torque: 171 N·m (1,750 kgf·cm, 127 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.