


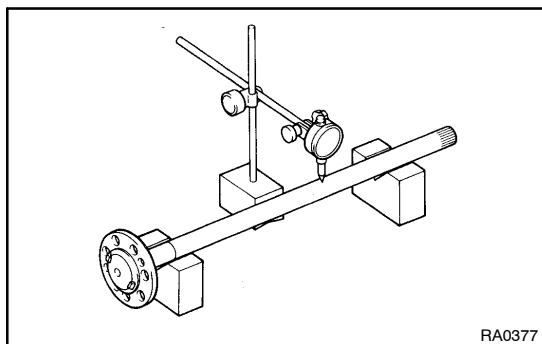


INSPECTION

1. INSPECT REAR AXLE SHAFT

- (a) Check for wear or damage.
- (b) Using a dial indicator, check the runout of axle shaft.


Maximum runout: 0.8 mm (0.031 in.)

If the runout is greater than the maximum, replace the axle shaft.

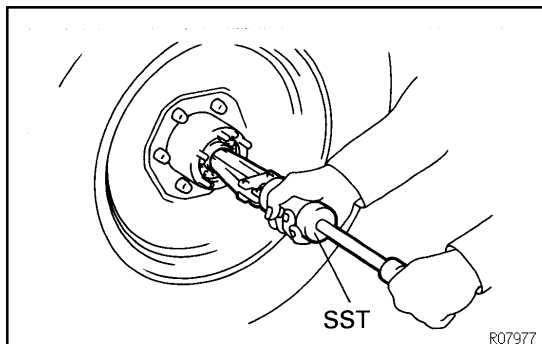

2. REPLACE OIL SEAL

- (a) Using SST, remove the oil seal.
SST 09308-00010

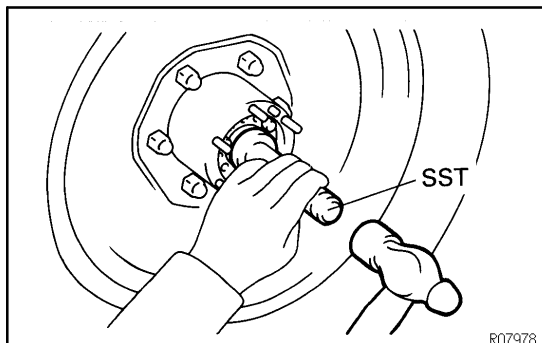

- (b) Using SST and a hammer, install a new oil seal into the hub.
SST 09517-36010
- (c) Apply MP grease to the oil seal lip.