


REAR UPPER AND LOWER CONTROL ARM REMOVAL

SA1VX-02

1. REMOVE REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

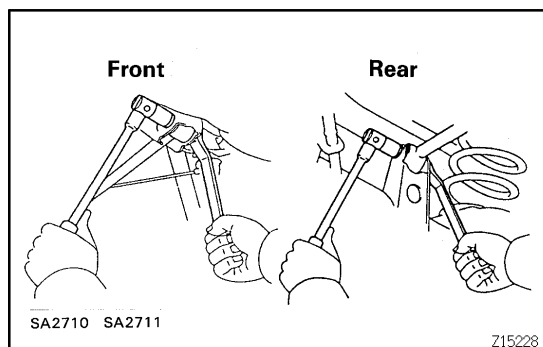


2. REMOVE UPPER CONTROL ARM

Remove the 2 bolts, plate washers, nuts and upper control arm from the frame.

Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)

HINT:

At the time of inatallation, after stabilizing the suspension, torque the bolt.

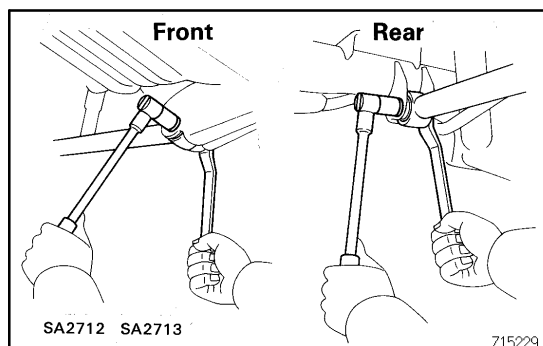

3. REMOVE LOWER CONTROL ARM

Remove the 2 bolts, plate washers, nuts and lower control arm from the frame.

Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)

HINT:

At time of installation, after stabilizing the suspension, torque the bolt.