


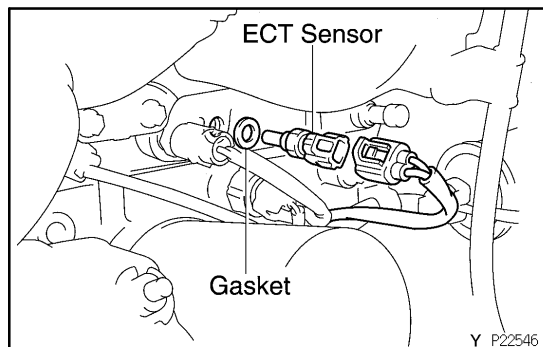

ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION

SF0PO-10

1. DRAIN ENGINE COOLANT

2. REMOVE ECT SENSOR

- Disconnect the sensor connector.
- Using a 19 mm deep socket wrench, remove the sensor and gasket.

3. INSPECT ECT SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the chart graph

If the resistance is not as specified, replace the sensor.

4. REINSTALL ECT SENSOR

- Using a 19 mm deep socket wrench, install a new gasket and ECT sensor.

Torque: 24.5 N·m (250 kgf·cm, 17.5 ft·lbf)

- Connect the sensor connector.

5. REFILL ENGINE COOLANT

