



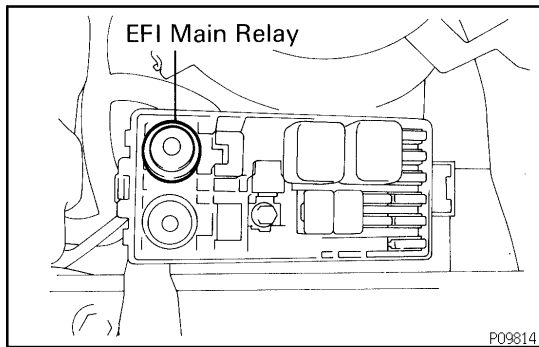

EFI MAIN RELAY INSPECTION

SF06G-12


1. REMOVE EFI MAIN RELAY (Marking: EFI MAIN)

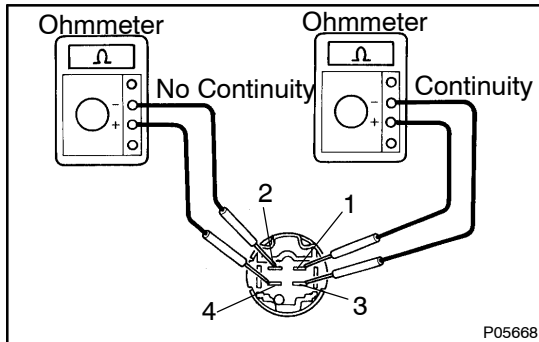

2. INSPECT EFI MAIN RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals 1 and 3. If continuity is not as specified, replace the relay.
- Check that there is no continuity between terminals 2 and 4.

If continuity is not as specified, replace the relay.

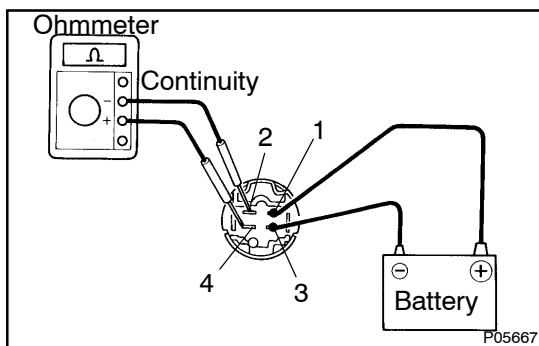

3. INSPECT EFI MAIN RELAY OPERATION

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.

4. REINSTALL EFI MAIN RELAY