


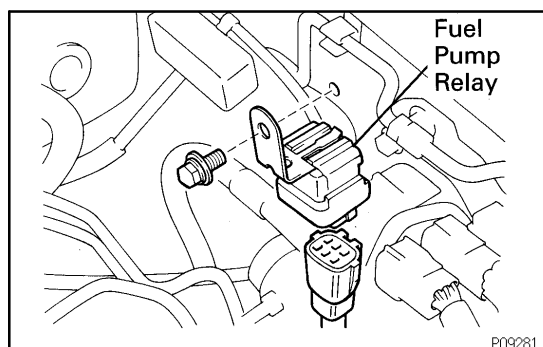


FUEL PUMP RELAY INSPECTION

SF1F7-02

1. REMOVE FUEL PUMP RELAY


- (a) Disconnect the fuel pump relay connector.
- (b) Remove the bolt and fuel pump relay.

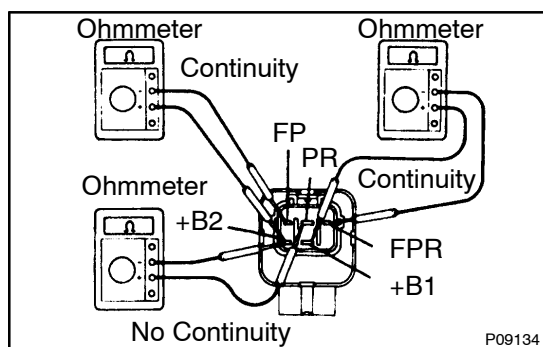

2. INSPECT FUEL PUMP RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals +B1 and FPR. If continuity is not as specified, replace the relay.
- (b) Check that there is continuity between terminals +B2 and FP. If continuity is not as specified, replace the relay.
- (c) Check that there is no continuity between terminals +B2 and PR.

If continuity is not as specified, replace the relay.

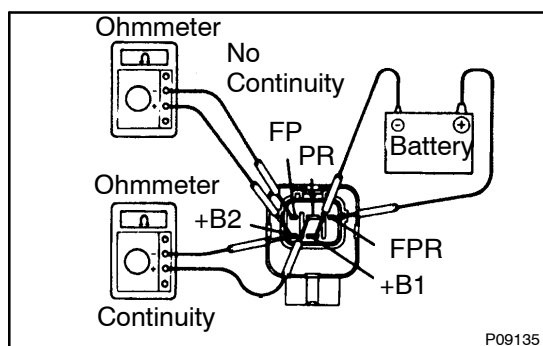

3. INSPECT FUEL PUMP RELAY OPERATION

- (a) Apply battery voltage across terminals +B1 and FPR.
- (b) Using an ohmmeter, check that there is no continuity between the +B2 and FP. If operation is not as specified, replace the relay.
- (c) Check that there is continuity between terminals +B2 and PR.

If operation is not as specified, replace the relay.

4. REINSTALL FUEL PUMP RELAY