



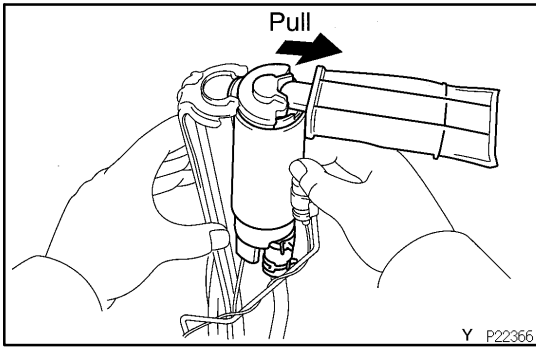

DISASSEMBLY

1. **REMOVE FUEL PUMP FROM FUEL PUMP BRACKET**
 - (a) Pull off the lower side of the fuel pump from the pump bracket.
 - (b) Disconnect the fuel pump connector.
 - (c) Disconnect the fuel hose from the fuel pump, and remove the fuel pump.
 - (d) Remove the rubber cushion from the fuel pump.

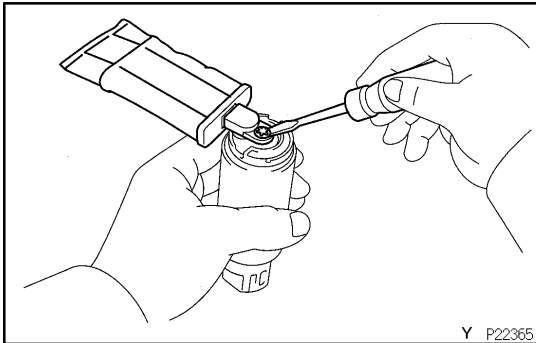


2. **REMOVE FUEL PUMP FILTER FROM FUEL PUMP**

- (a) Using a small screwdriver, remove the clip.

HINT:

Install the pump filter with a new clip.

- (b) Pull out the pump filter.

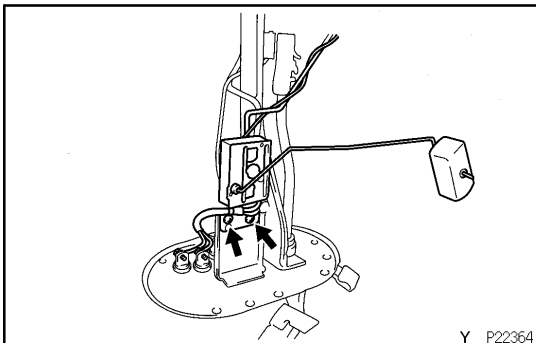

3. **REMOVE FUEL SENDER GAUGE FROM FUEL PUMP BRACKET**

- (a) Remove the 3 screws and disconnect the lead wires from the pump bracket.
- (b) Remove the 2 screws and sender gauge.