


## INSPECTION

1. REMOVE SECOND SEATS
2. REMOVE SCUFF PLATE
3. REMOVE SIDE GARNISH
4. REMOVE STEP PLATE
5. DISCONNECT FLOOR MATS
6. REMOVE FLOOR SERVICE HOLE COVER

Remove the 3 screws and service hole cover.

7. DISCONNECT FUEL PUMP AND SENDER GAUGE CONNECTOR

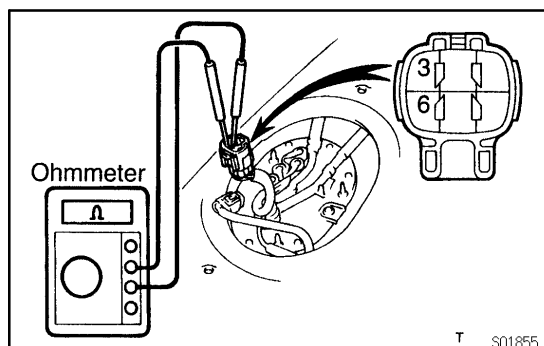


### 8. INSPECT FUEL PUMP RESISTANCE

Using an ohmmeter, measure the resistance between the terminals 3 and 6.

**Resistance: 0.2 – 3.0  $\Omega$**

If the resistance is not as specified, replace the fuel pump.

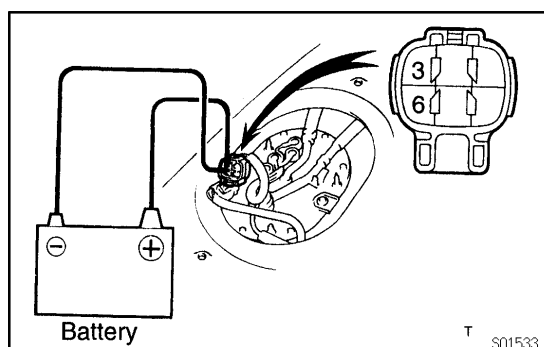

### 9. INSPECT FUEL PUMP OPERATION

Connect the positive (+) lead from the battery to terminal 3 of the connector, and the negative (-) lead to terminal 6. Check that the fuel pump operates.

#### NOTICE:

- These tests must be performed quickly (within 10 seconds) to prevent the coil from burning out.
- Keep the fuel pump as far away from the battery as possible.
- Always perform switching at the battery side.

If operation is not as specified, replace the fuel pump.

### 10. RECONNECT FUEL PUMP AND SENDER GAUGE CONNECTOR

### 11. REINSTALL FLOOR SERVICE HOLE COVER

Install the service hole cover with the 3 screws.

### 12. REINSTALL FLOOR MATS

### 13. REINSTALL STEP PLATE

### 14. REINSTALL SIDE GARNISH

15. REINSTALL SCUFF PLATE
16. REINSTALL SECOND SEATS