



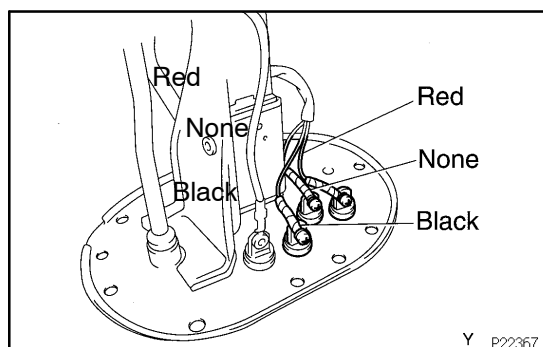

REASSEMBLY


1. INSTALL FUEL SENDER GAUGE TO FUEL PUMP BRACKET

- Install the sender gauge with the 2 screws.
- Connect the 3 lead wires to the pump bracket with the screws as shown in the illustration.

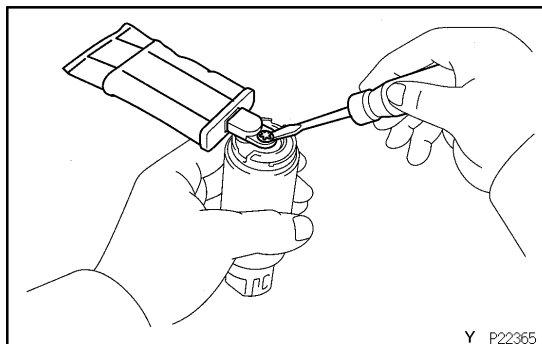

2. INSTALL FUEL PUMP FILTER TO FUEL PUMP

Install the pump filter with a new clip.

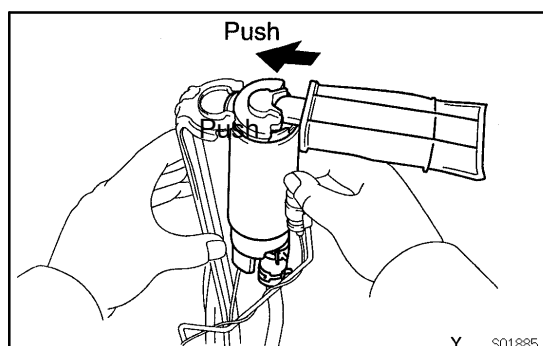

3. INSTALL FUEL PUMP TO FUEL PUMP BRACKET

- Install the rubber cushion to the fuel pump.
- Connect the fuel hose to the outlet port of the fuel pump.
- Install the fuel pump connector.
- Install the fuel pump by pushing the lower side of the fuel pump.