


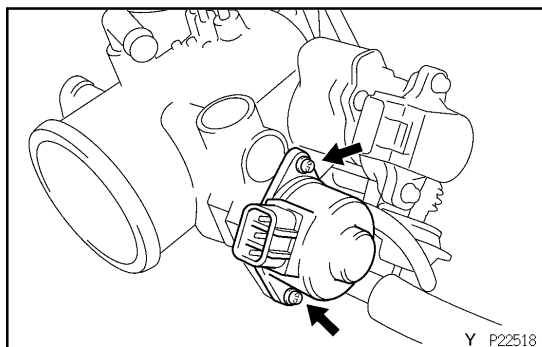

REMOVAL

1. REMOVE THROTTLE BODY (See page [SF-41](#))
2. REMOVE IAC VALVE

Remove the 2 screws, IAC valve and O-ring.