


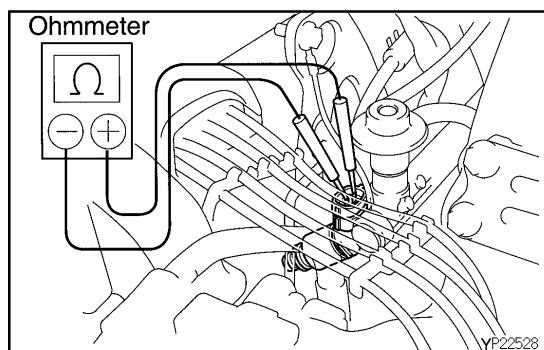

SF00R-06

INJECTOR

ON-VEHICLE INSPECTION

1. **REMOVE THROTTLE BODY** (See page [SF-41](#))
2. **INSPECT INJECTOR RESISTANCE**
 - (a) Disconnect the 6 injector connectors.
 - (b) Using an ohmmeter, measure the resistance between the terminals.
Resistance: 13.4 – 14.2 Ω at 20°C (68°F)
3. **REINSTALL THROTTLE BODY** (See page [SF-44](#))

If the resistance is not as specified, replace the injector.

- (c) Reconnect the 6 injector connectors.