

INSTALLATION

1. INSTALL MAF METER

Install the MAF meter and bracket with the 4 bolts.

Torque: 6.9 N·m (70 kgf·cm, 61 in·lbf)

2. INSTALL AIR CLEANER CAP AND MAF METER ASSEMBLY

- (a) Connect the MAF meter to the air cleaner hose.
- (b) Install the air cleaner cap and MAF meter assembly with the 3 clips and wing nut.
- (c) Tighten the air cleaner hose clamp.
- (d) Connect the cruise control actuator cable.
- (e) Connect the MAF meter connector and wire clamp.