



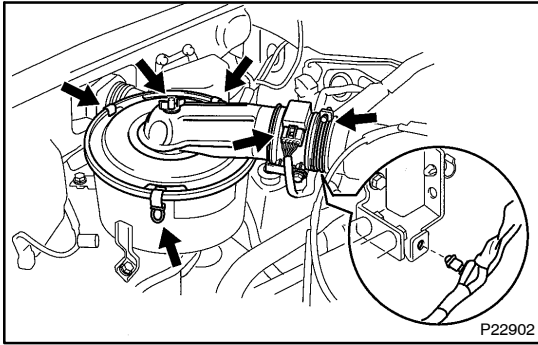

REMOVAL

1. REMOVE AIR CLEANER CAP AND MAF METER ASSEMBLY

- (a) Disconnect the MAF meter connector and wire clamp.
- (b) Disconnect the cruise control actuator cable. SF1ER-02
- (c) Loosen the air cleaner hose clamp.
- (d) Remove the wing nut.
- (e) Disconnect the 3 clips.
- (f) Disconnect the MAF meter from the air cleaner hose, and remove the air cleaner cap and MAF meter assembly.

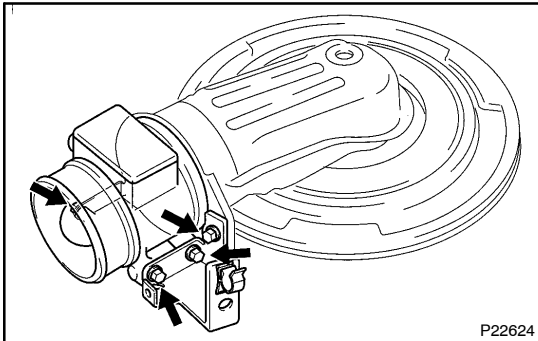

2. REMOVE MAF METER

Remove the 4 bolts, bracket and MAF meter.