


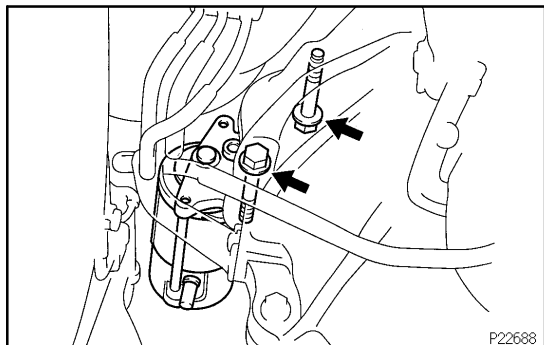

REMOVAL

REMOVE STARTER

- (a) Disconnect the starter connector.
- (b) Remove the nut, and disconnect the starter wire.

Torque: 8.8 N·m (90 kgf·cm, 70 in·lbf)

- (c) Remove the 2 bolts and starter.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)