


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

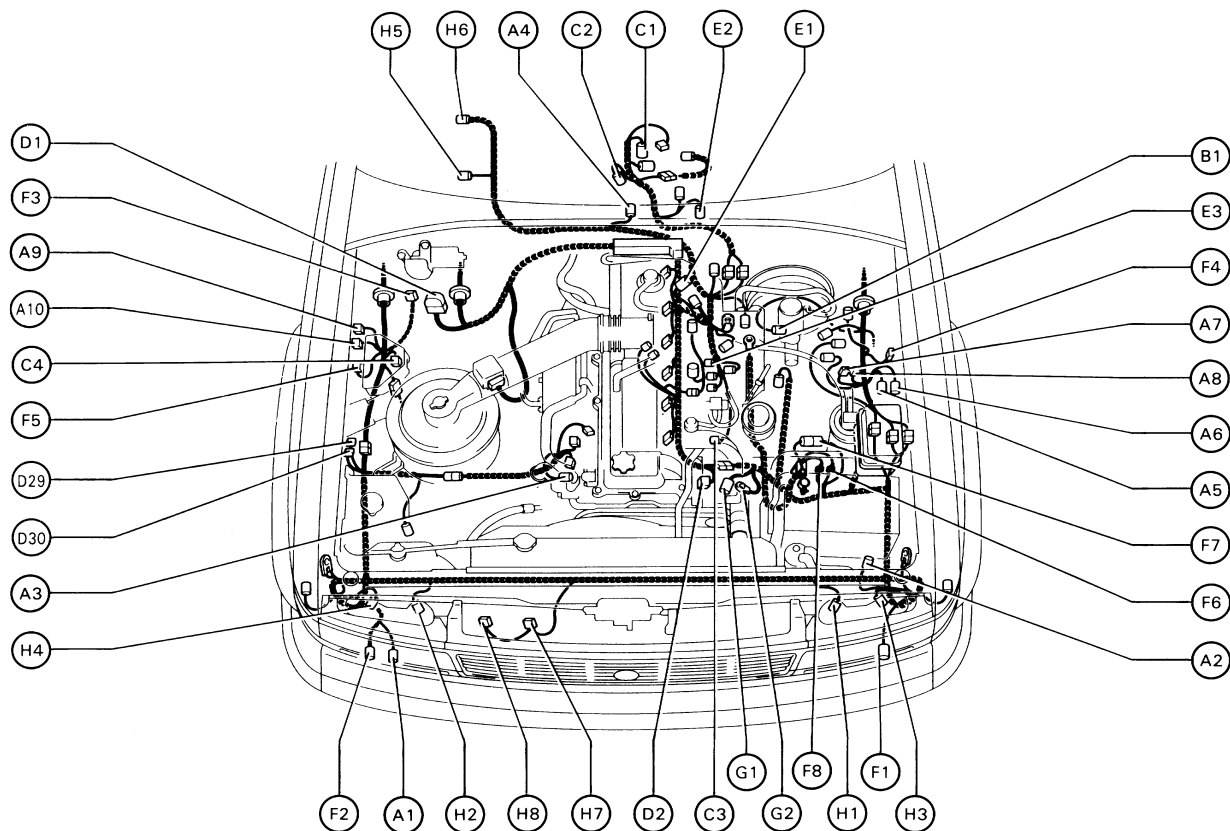

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Dual Pressure SW
 A 3 A/C Magnetic Clutch
 A 4 A/T Fluid Temp. Sensor
 A 5 ABS Actuator
 A 6 ABS Actuator
 A 7 ABS Relay
 A 8 ABS Relay
 A 9 Auto Antenna Relay
 A10 Auto Antenna Motor

B 1 Brake Fluid Level Warning SW

C 1 Center Diff. Lock Control Motor
 C 2 Center Diff. Lock Indicator SW
 C 3 Crankshaft Position Sensor
 C 4 Cruise Control Actuator

D 1 Data Link Connector 1
 D 2 Distributor
 D29 Daytime Running Light Relay No. 3
 D30 Daytime Running Light Relay No. 3


E 1 EGR Gas Temp. Sensor
 E 2 Electronically Controlled Transmission Solenoid
 E 3 Engine Coolant Temp. Sensor

F 1 Front Turn Signal Light RH
 F 2 Front Turn Signal Light RH
 F 3 Front Wiper Motor
 F 4 Fuel Pump Relay
 F 5 Fuel Pump Resistor
 F 6 Fusible Link (AM1)
 F 7 Fusible Link (AM2)
 F 8 Fusible Link (Main)

G 1 Generator
 G 2 Generator

H 1 Headlight Hi LH
 H 2 Headlight Hi RH
 H 3 Headlight Lo LH
 H 4 Headlight Lo RH
 H 5 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H 6 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H 7 Horn LH
 H 8 Horn RH

Position of Parts in Engine Compartment

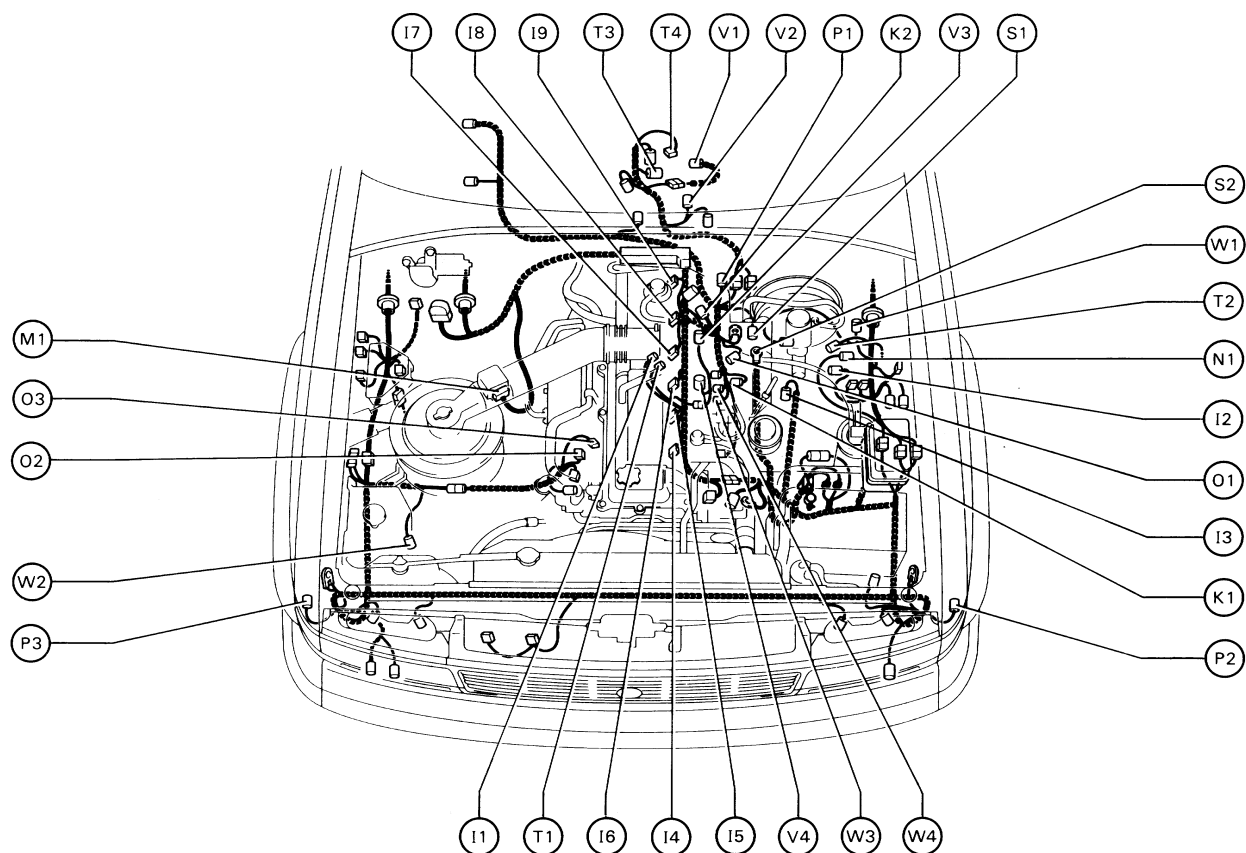

I 1 Idle Air Control Valve
 I 2 Igniter
 I 3 Ignition Coil
 I 4 Injector No. 1
 I 5 Injector No. 2
 I 6 Injector No. 3
 I 7 Injector No. 4
 I 8 Injector No. 5
 I 9 Injector No. 6

K 1 Knock Sensor 1
 K 2 Knock Sensor 2

M 1 Mass Air Flow Meter

N 1 Noise Filter (Ignition System)

O 1 Oil Level Warning SW
 O 2 Oil Pressure Sender
 O 3 Oil Pressure Sender

P 1 Park/Neutral Position SW, Back-Up Light SW and A/T Indicator SW

P 2 Parking Light LH
 P 3 Parking Light RH

S 1 Starter
 S 2 Starter


T 1 Throttle Position Sensor
 T 2 Theft Deterrent Buzzer (Piezo Buzzer)
 T 3 Transfer L4 Position SW
 T 4 Transfer Neutral Position SW

V 1 Vehicle Speed Sensor (Combination Meter)
 V 2 Vehicle Speed Sensor (Electronically Controlled Transmission)
 V 3 VSV (EGR)
 V 4 VSV (Fuel Pressure Control)

W 1 Washer Change Valve
 W 2 Washer Motor
 W 3 Water Temp. Sender
 W 4 Water Temp. SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

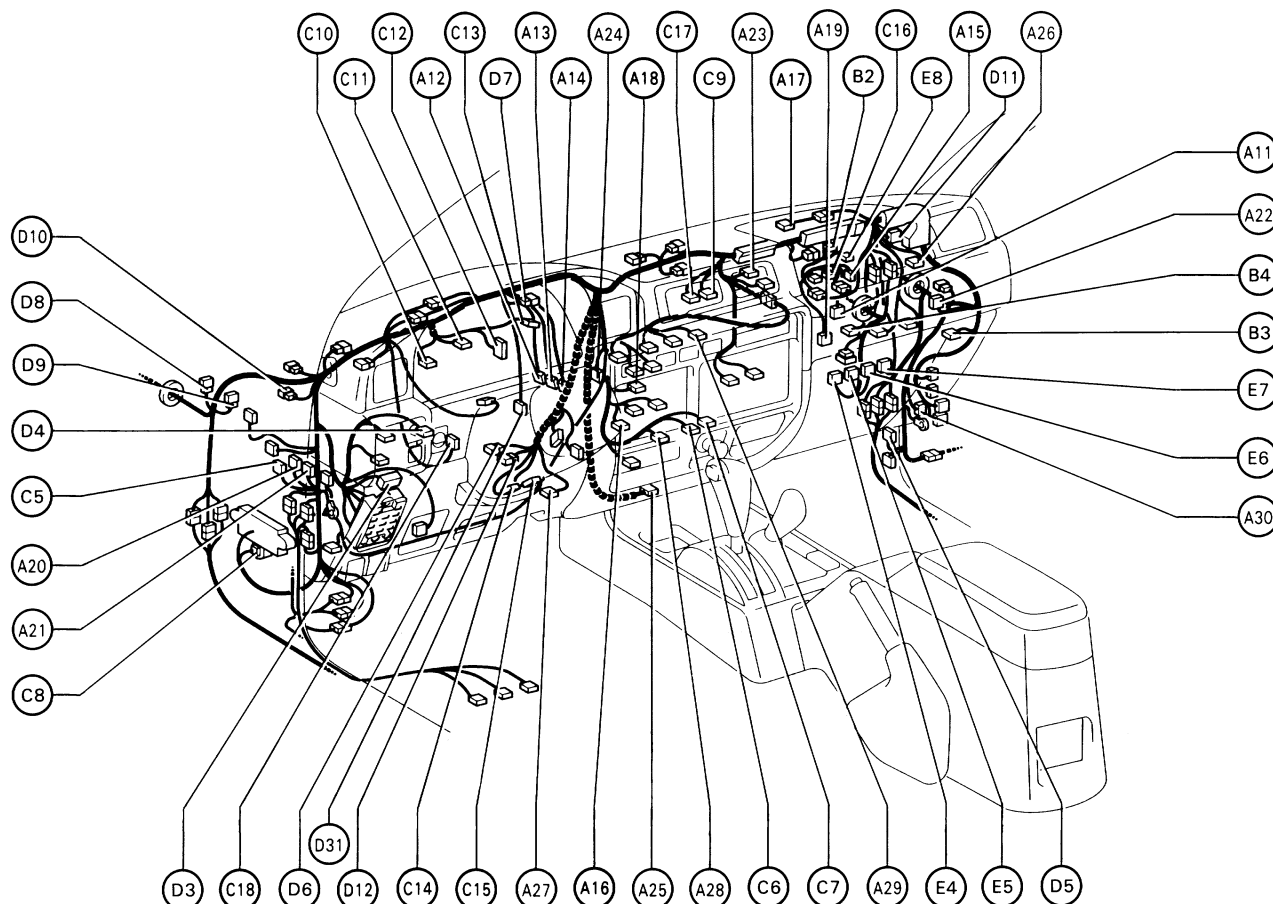

A11 A/C Amplifier
 A12 A/C Automatic Amplifier
 A13 A/C Automatic Amplifier
 A14 A/C Automatic Amplifier
 A15 A/C Power Transistor (Blower Control)
 A16 A/C Room Temp. Sensor
 A17 A/C Solar Sensor
 A18 A/C System Amplifier
 A19 A/C Thermistor
 A20 ABS ECU
 A21 ABS ECU
 A22 Air Inlet Control Servo Motor
 A23 Air Mix Control Servo Motor
 A24 Air Vent Mode Control Servo Motor
 A25 Airbag Sensor Assembly
 A26 Airbag Squib (Front Passenger's Airbag Assembly)
 A27 Airbag Squib (Steering Wheel Pad)
 A28 Ashtray Illumination
 A29 Auto Antenna Control SW
 A30 Auto Antenna ECU

B 2 Blower Hi Relay
 B 3 Blower Motor (A/C)
 B 4 Blower Resistor


C 5 Center Diff. Lock Control Relay
 C 6 Cigarette Lighter
 C 7 Cigarette Lighter Illumination
 C 8 Circuit Opening Relay

C 9 Clock
 C10 Combination Meter
 C11 Combination Meter
 C12 Combination Meter
 C13 Combination Meter
 C14 Combination SW
 C15 Combination SW
 C16 Compressor Relay
 C17 Cooling Fan (Radio and Player)
 C18 Cruise Control ECU

D 3 Data Link Connector 3
 D 4 Diff. Lock Control SW
 D 5 Diff. Lock ECU
 D 6 Diode (Front Washer)
 D 7 Diode (Headlight)
 D 8 Diode (Interior Light)
 D 9 Diode (Interior Light)
 D10 Diode (Interior Light)
 D11 Diode (Neutral Detection)
 D12 Diode (Rear Washer)
 D31 Daytime Running Light Relay (Main)

E 4 Engine Control Module
 E 5 Engine Control Module
 E 6 Engine Control Module
 E 7 Engine Control Module
 E 8 Engine Coolant Temp. Cut Relay

Position of Parts in Instrument Panel

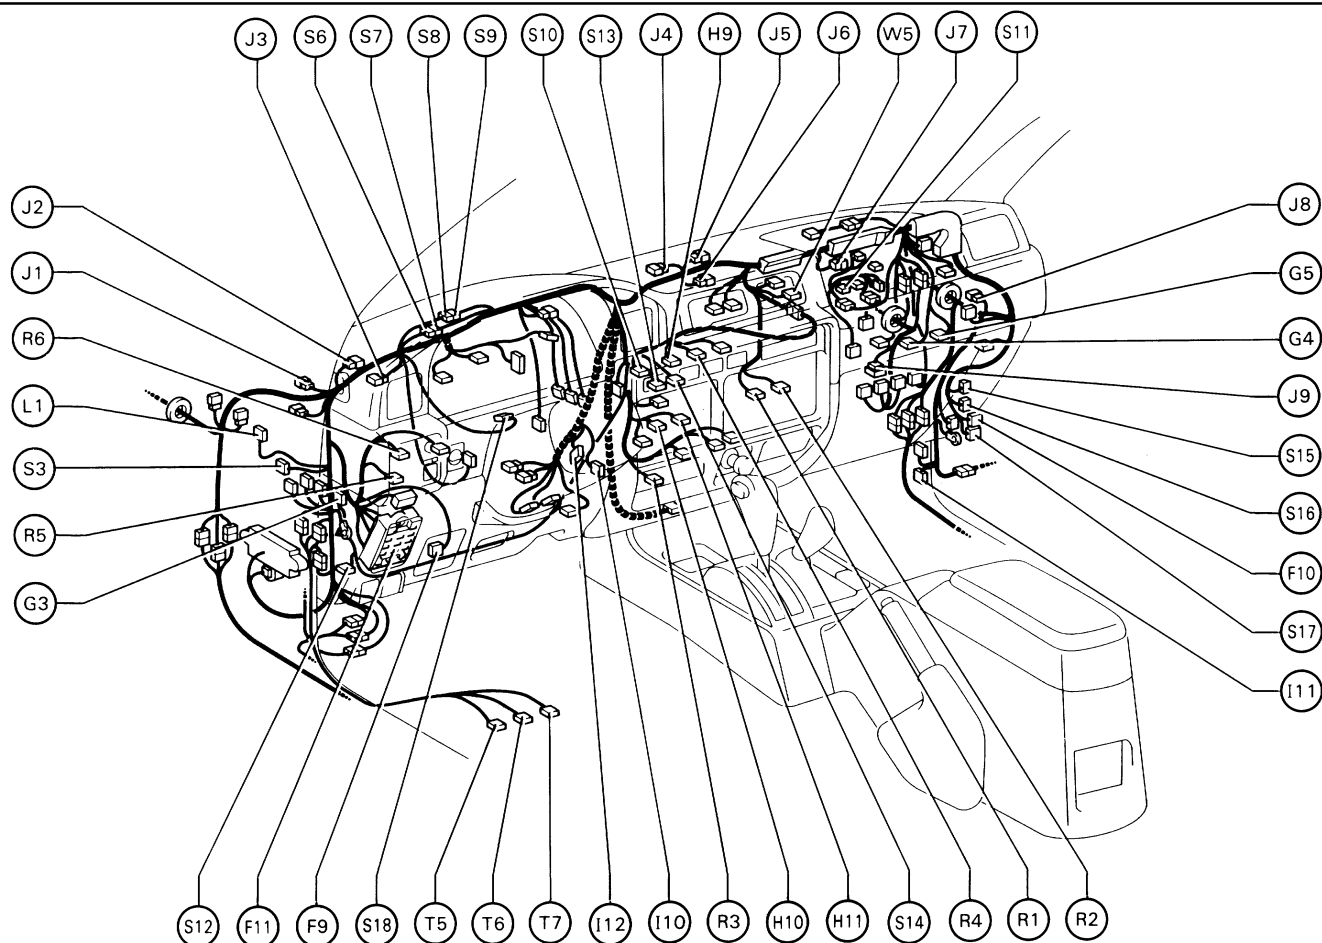

F 9 Front Tweeter Speaker LH
 F10 Front Tweeter Speaker RH
 F11 Fuse Block

G 3 Glass Breakage ECU
 G 4 Glove Box Light
 G 5 Glove Box Light SW

H 9 Hazard SW
 H10 Heater Control SW and A/C SW
 H11 Heater Control SW and A/C SW

I10 Ignition Key Cylinder Light
 I11 Ignition Key Cylinder Light Relay
 I12 Ignition SW, Unlock Warning SW and Key Interlock Solenoid

J 1 Junction Connector
 J 2 Junction Connector
 J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 9 Junction Connector

L 1 Light Retainer Relay

R 1 Radio and Player
 R 2 Radio and Player
 R 3 Rear Heater SW
 R 4 Rear Window Defogger SW
 R 5 Remote Control Mirror SW
 R 6 Rheostat


S 3 Seat Belt Warning Relay
 S 6 Short Connector (SRS)
 S 7 Short Connector (SRS)
 S 8 Short Connector (SRS)
 S 9 Short Connector (SRS)
 S10 Short Pin (Center Diff. Lock)
 S11 Starter Cut Relay (A/C)
 S12 Starter Cut Relay (Theft Deterrent)
 S13 Status Monitor
 S14 Status Monitor
 S15 Stereo Component Amplifier
 S16 Stereo Component Amplifier
 S17 Stereo Component Amplifier
 S18 Stop Light SW

T 5 Theft Deterrent ECU
 T 6 Theft Deterrent ECU
 T 7 Theft Deterrent ECU

W 5 Water Temp. Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

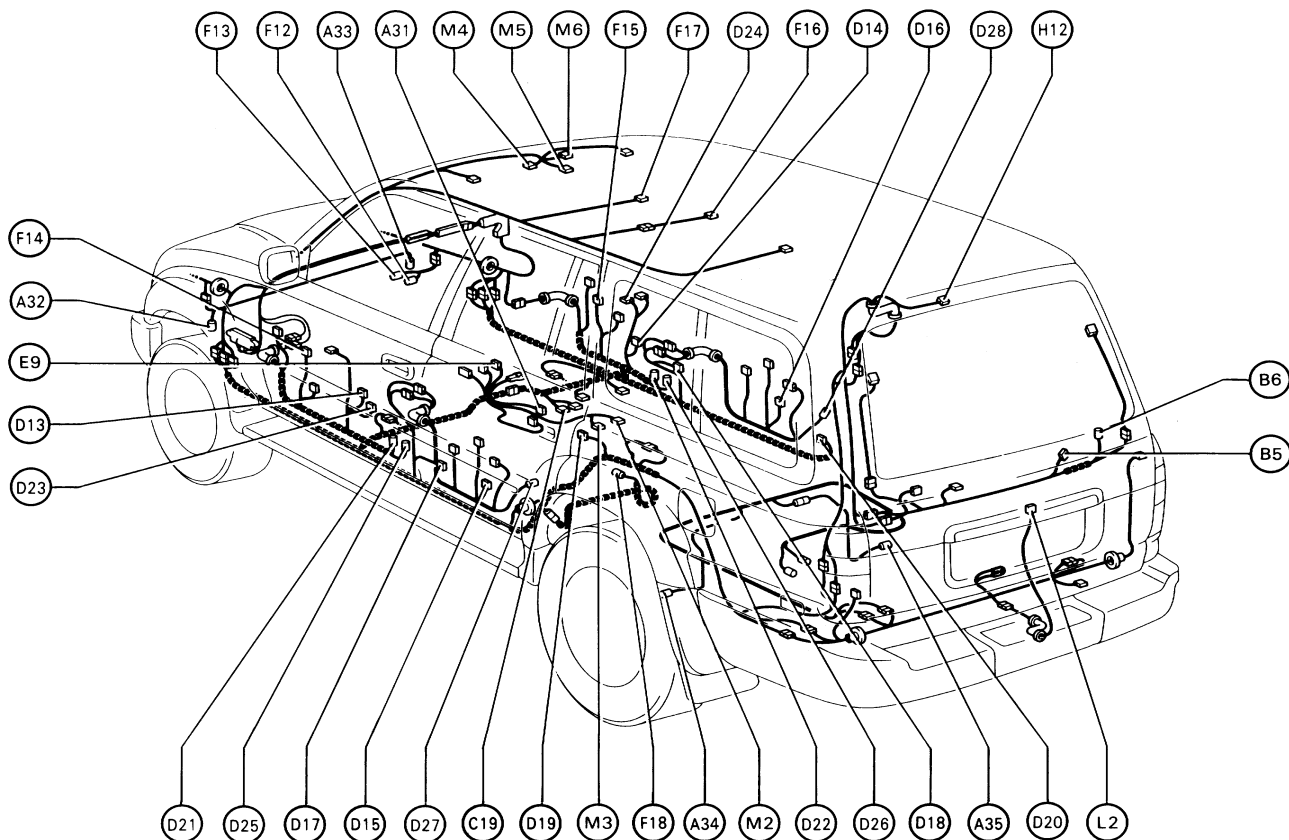

A31 ABS Deceleration Sensor
 A32 ABS Speed Sensor Front LH
 A33 ABS Speed Sensor Front RH
 A34 ABS Speed Sensor Rear LH
 A35 ABS Speed Sensor Rear RH

B 5 Back Door Courtesy SW
 B 6 Back Door Lock Motor

C19 CD Automatic Changer

D13 Door Courtesy Light Front LH
 D14 Door Courtesy Light Front RH
 D15 Door Courtesy Light Rear LH
 D16 Door Courtesy Light Rear RH
 D17 Door Courtesy SW Front LH
 D18 Door Courtesy SW Front RH
 D19 Door Courtesy SW Rear LH
 D20 Door Courtesy SW Rear RH
 D21 Door Key Lock and Unlock SW LH
 D22 Door Key Lock and Unlock SW RH
 D23 Door Lock Control Relay
 D24 Door Lock Control SW RH
 D25 Door Lock Motor and Door Unlock Detection SW Front LH

D26 Door Lock Motor and Door Unlock Detection SW Front LH
 D27 Door Lock Motor Rear LH
 D28 Door Lock Motor Rear RH

E 9 Electronically Controlled Transmission Pattern Select SW


F12 Front Diff. Lock Control Motor
 F13 Front Diff. Lock Position SW
 F14 Front Door Speaker LH
 F15 Front Door Speaker RH
 F16 Front Interior Light (w/ Moon Roof)
 F17 Front Interior Light (w/o Moon Roof)
 F18 Fuel Sender and Pump

H12 High Mounted Stop Light

L 2 License Plate Light

M 2 Mobilephone
 M 3 Mobilephone
 M 4 Moon Roof Control Relay
 M 5 Moon Roof Control SW and Personal Light
 M 6 Moon Roof Limit SW and Motor

Position of Parts in Body

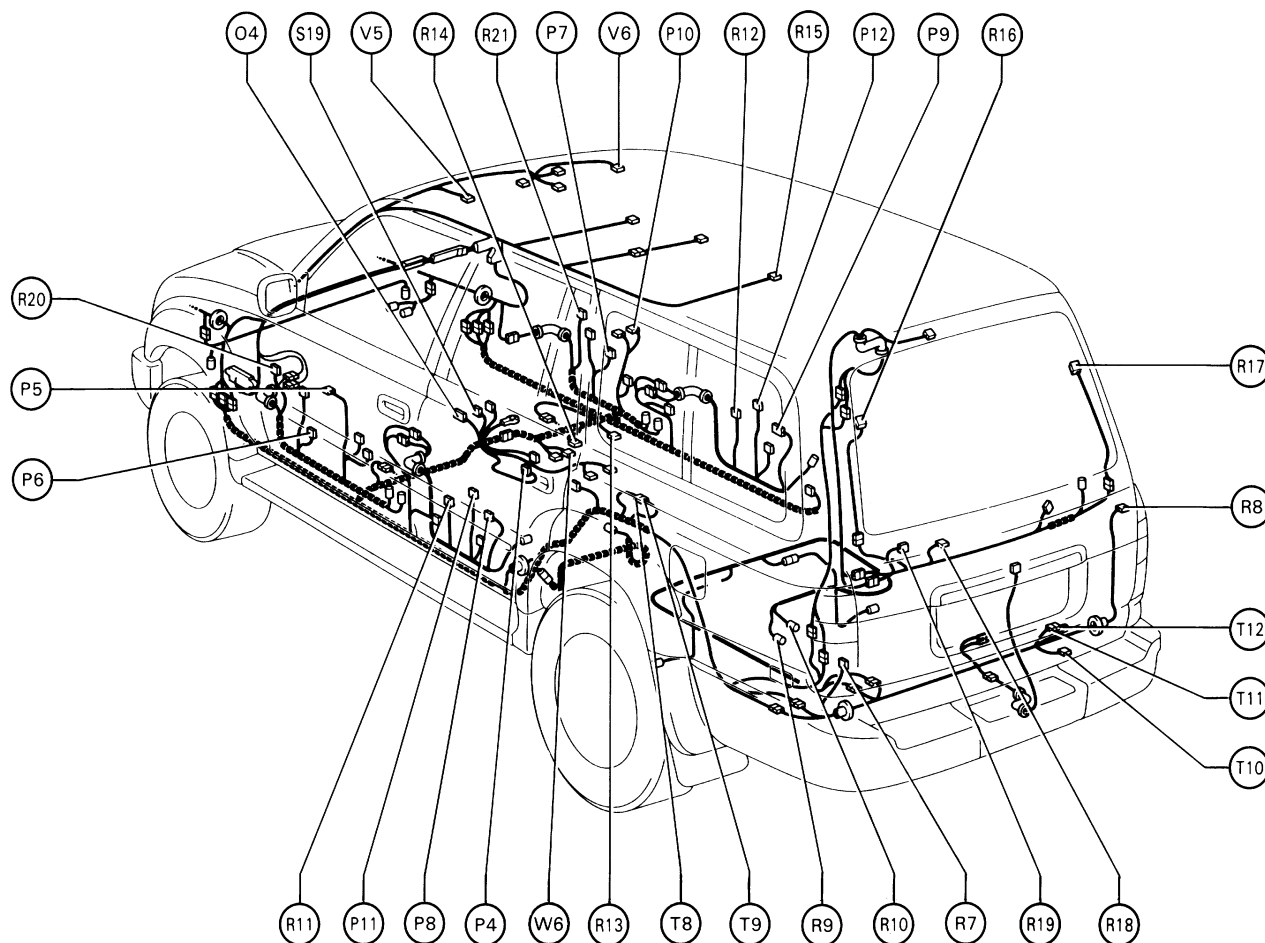

O 4 O/D Main SW

P 4 Parking Brake SW

P 5 Power Window Master SW

P 6 Power Window Motor Front LH

P 7 Power Window Motor Front RH

P 8 Power Window Motor Rear LH

P 9 Power Window Motor Rear RH

P10 Power Window SW Front RH

P11 Power Window SW Rear LH

P12 Power Window SW Rear RH

R 7 Rear Combination Light LH

R 8 Rear Combination Light RH

R 9 Rear Diff. Lock Control Motor

R10 Rear Diff. Lock Position SW

R11 Rear Door Speaker LH

R12 Rear Door Speaker RH

R13 Rear Heater

R14 Rear Heater Relay

R15 Rear Interior Light

R16 Rear Window Defogger (+)

R17 Rear Window Defogger (-)

R18 Rear Wiper Motor

R19 Rear Wiper Relay

R20 Remote Control Mirror LH

R21 Remote Control Mirror RH

S19 Shift Lock ECU

T 8 Telephone Transceiver and Speaker Relay

T 9 Telephone Transceiver and Speaker Relay

T10 Trailer Socket (Tail and Stop Light)

T11 Trailer Socket (Turn Signal Light)

T12 Trailer Socket (Turn Signal Light)


V 5 Vanity Light LH

V 6 Vanity Light RH

W 6 Woofer (Speaker)

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

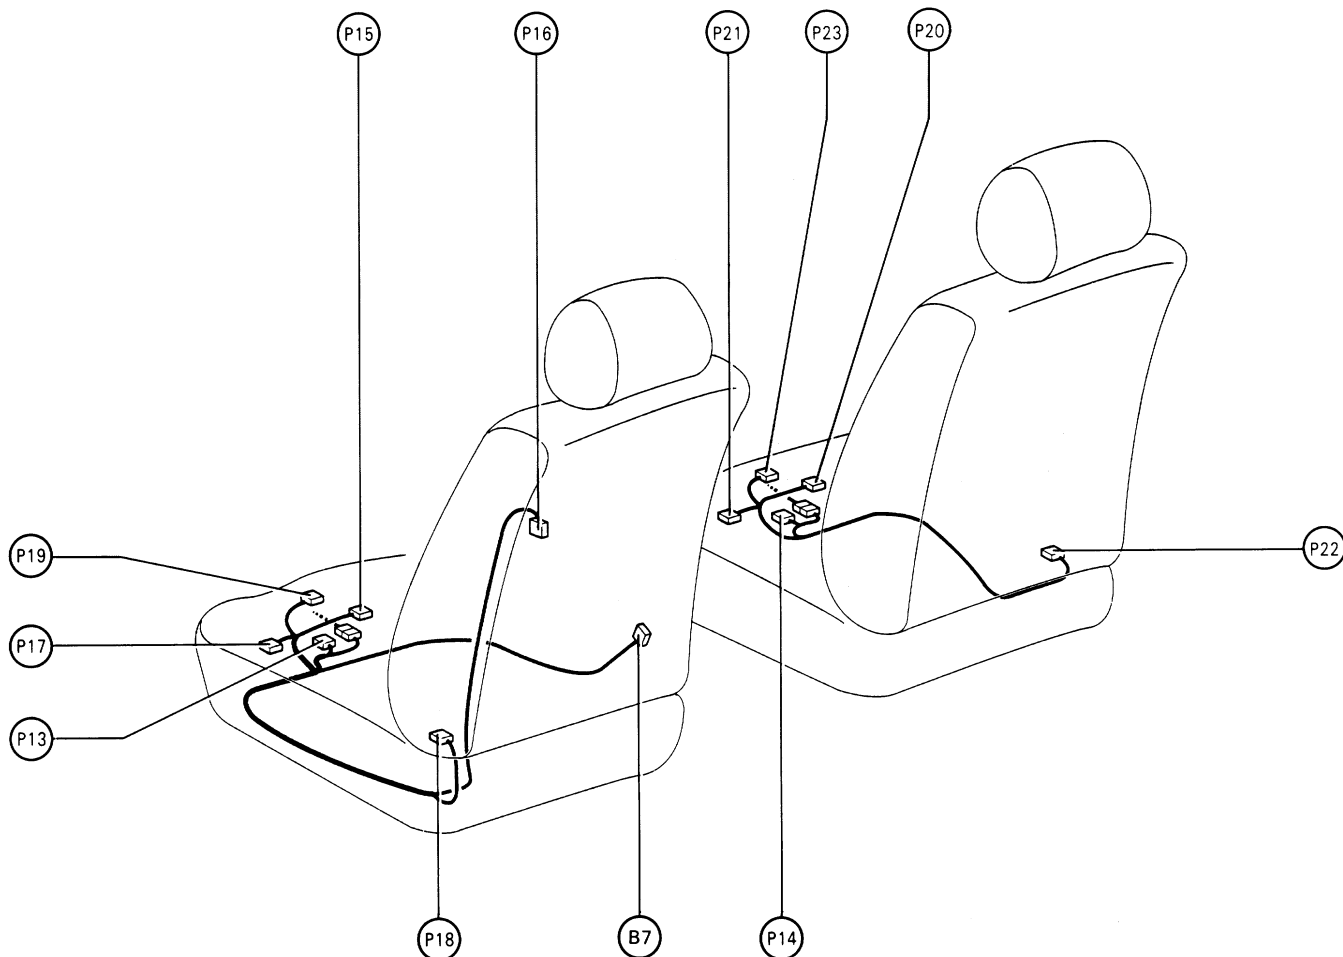

B 7 Buckle SW LH

P13 Power Seat Control SW (Driver's Seat)

P14 Power Seat Control SW
(Front Passenger's Seat)

P15 Power Seat Motor (Driver's Seat Front Vertical
Control)

P16 Power Seat Motor (Driver's Seat Lumbar Support
Control)

P17 Power Seat Motor (Driver's Seat Rear Vertical
Control)

P18 Power Seat Motor (Driver's Seat Reclining Control)

P19 Power Seat Motor (Driver's Seat Slide Control)

P20 Power Seat Motor (Front Passenger's Seat
Front Vertical Control)

P21 Power Seat Motor (Front Passenger's Seat Rear Vertical Control)

P22 Power Seat Motor (Front Passenger's Seat
Reclining Control)

P23 Power Seat Motor (Front Passenger's Seat
Slide Control)

