




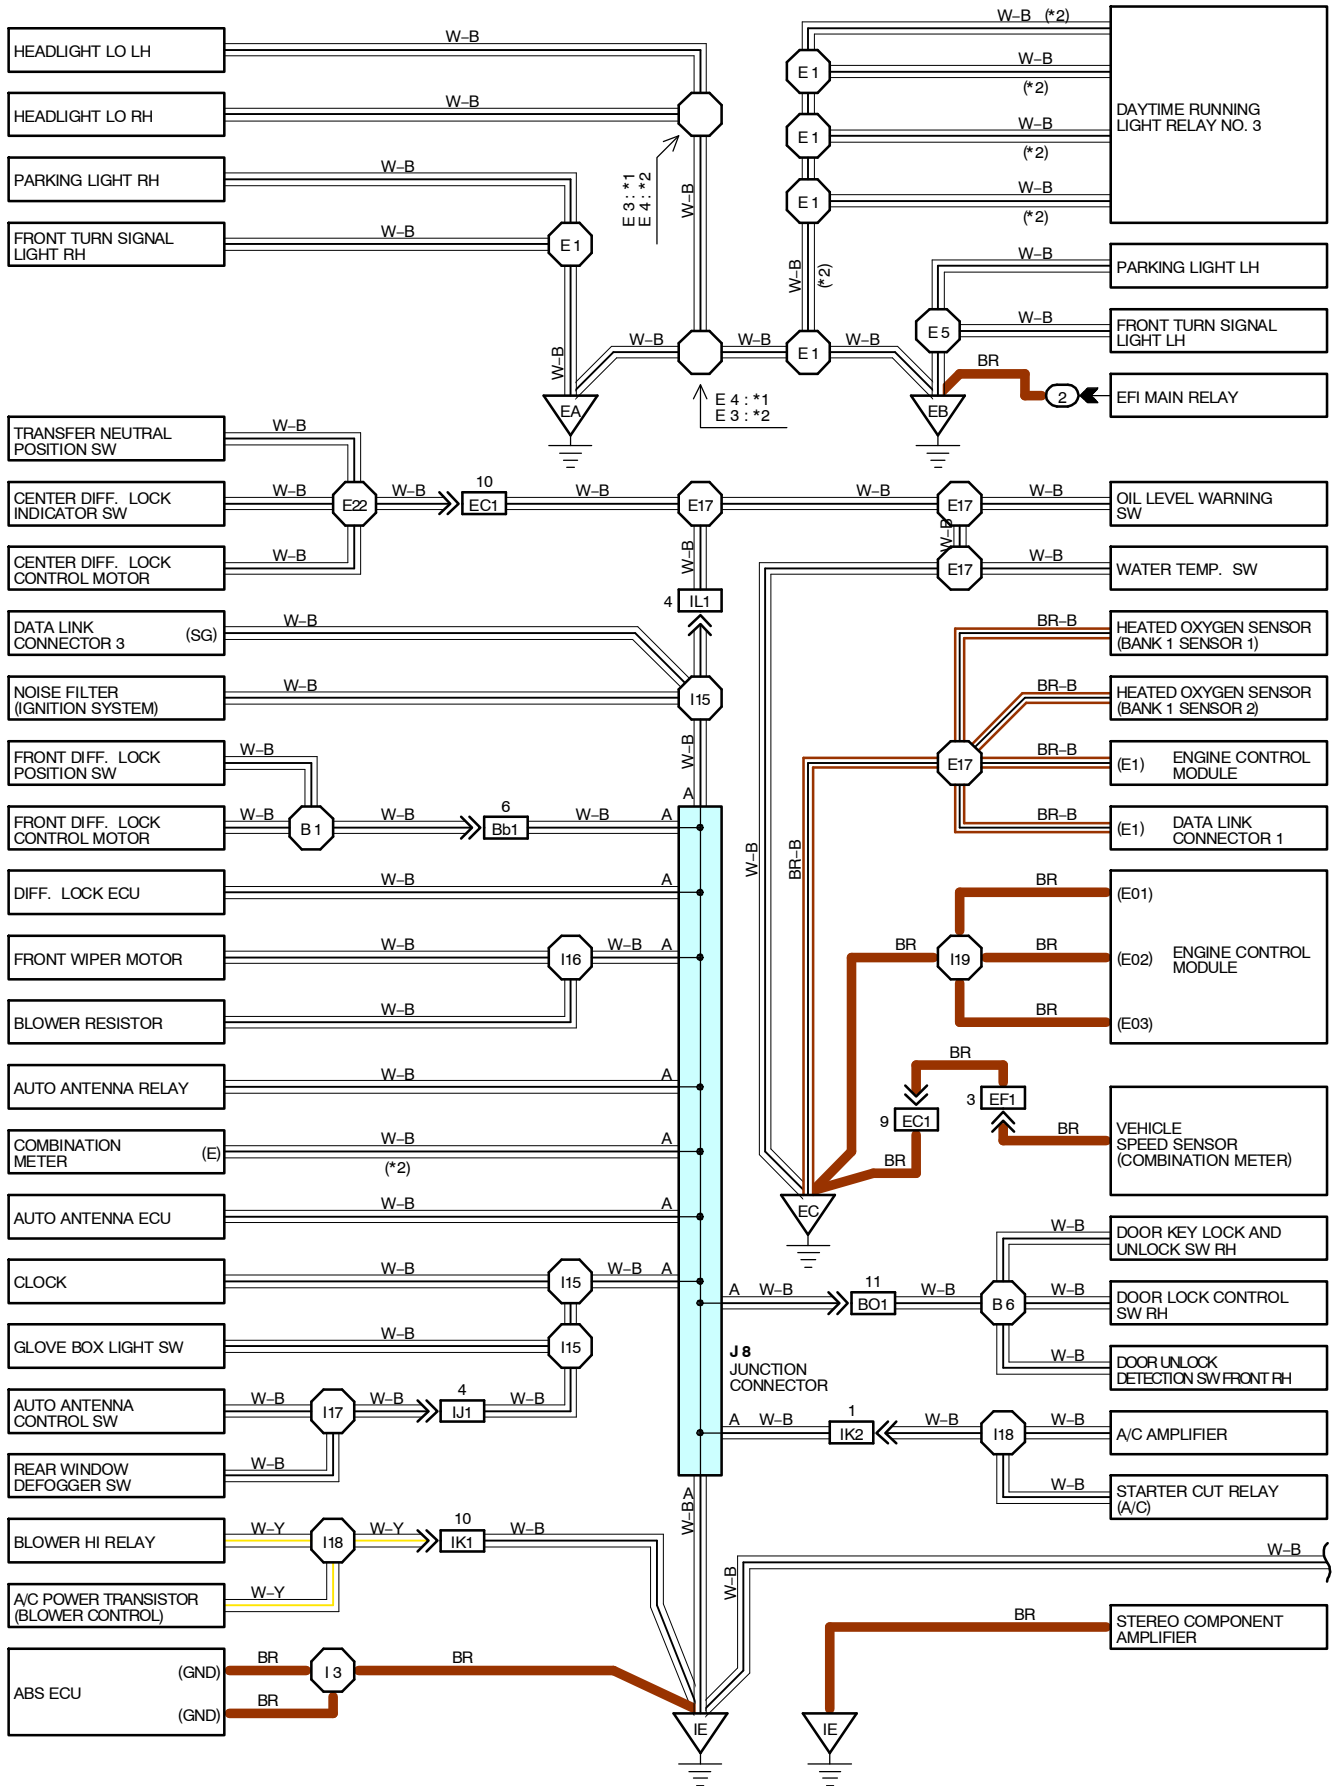


* 1 : USA
* 2 : CANADA

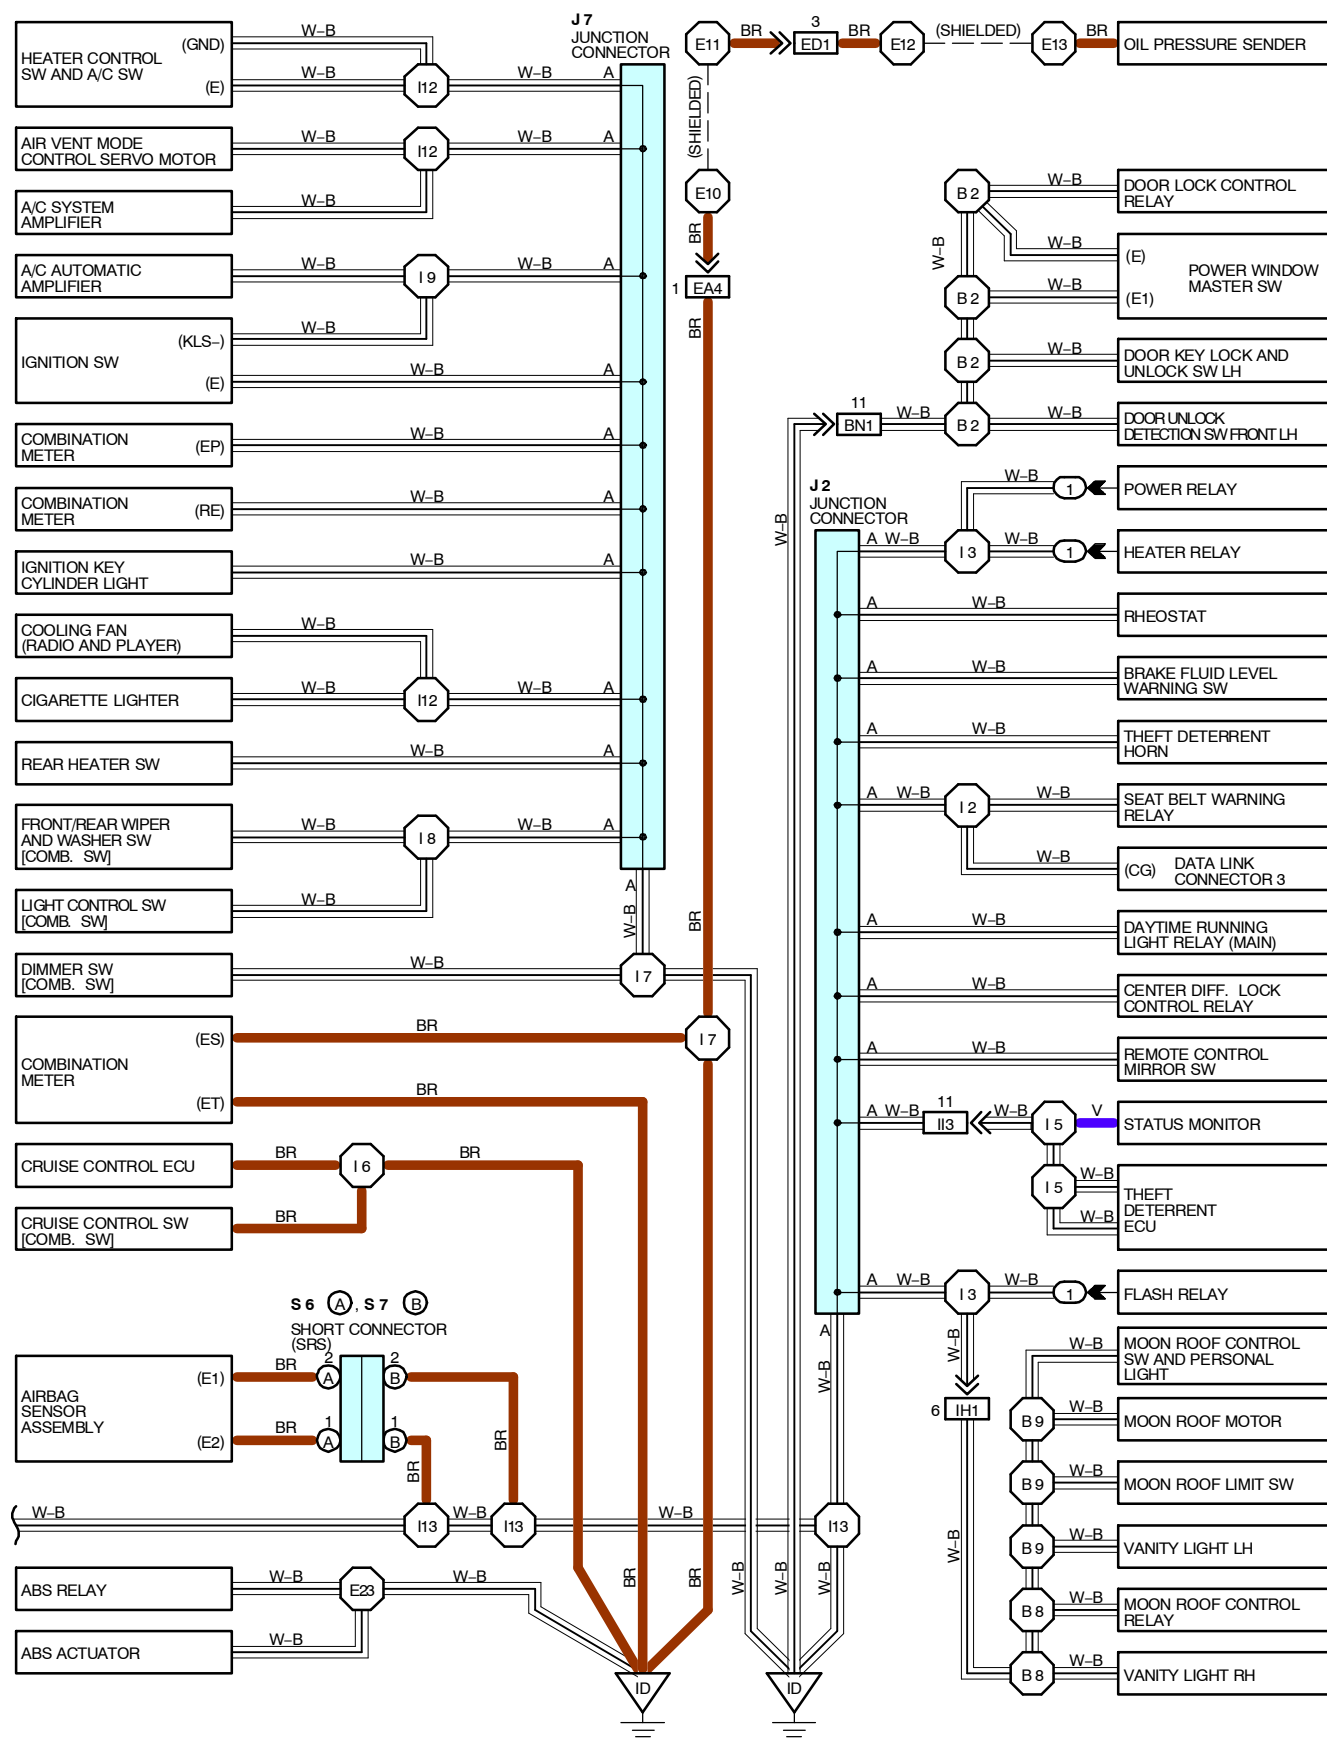

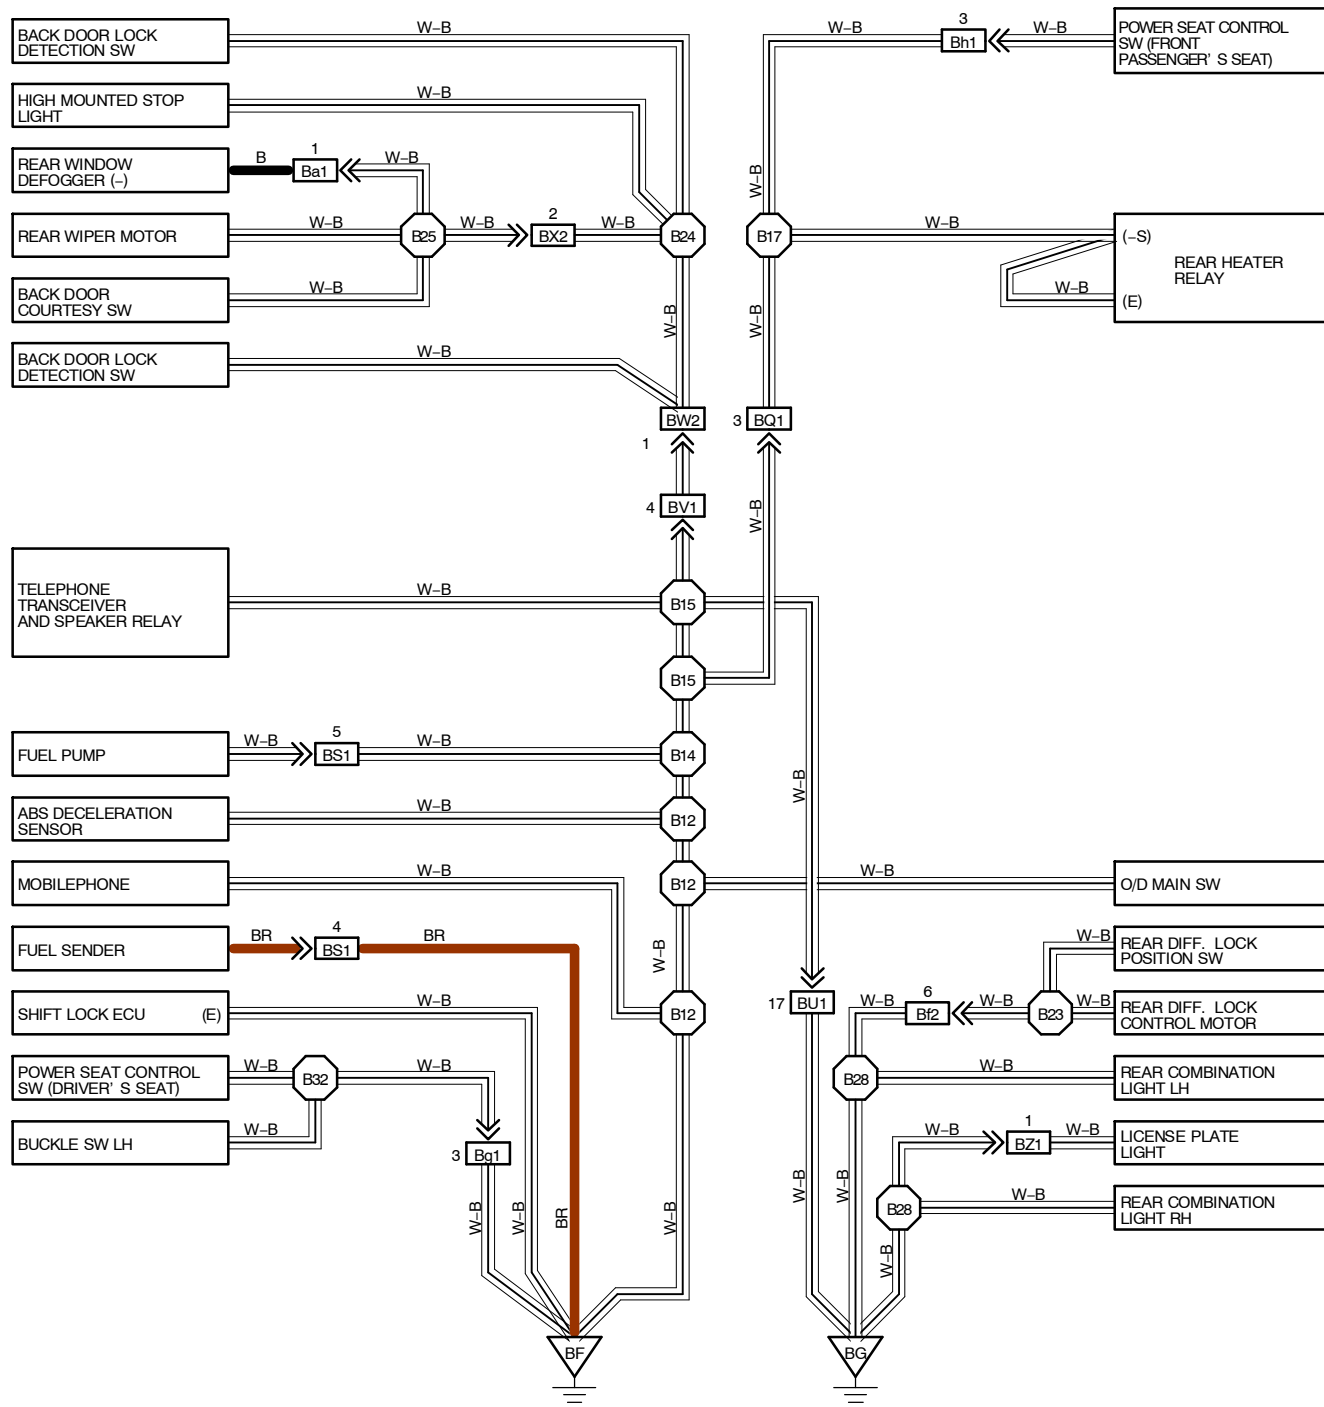


 J2 BLUE




(HINT : SEE PAGE 7)

 J7 BLUE




(HINT : SEE PAGE 7)

 J8 BLUE




(HINT : SEE PAGE 7)

S6 (A) YELLOW

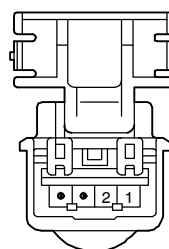

S7 (B) YELLOW

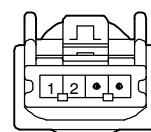

 : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 2	25	J 8	25	S 7	B 25
J 7	25	S 6	A 25		

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO.1 (LEFT KICK PANEL)
2	21	R/B NO.2 (FRONT SIDE OF THE FENDER)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA4	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
ED1	30	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
EF1	30	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)
IH1	32	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
I13	32	COWL WIRE AND SECURITY WIRE (LEFT KICK PANEL)
IJ1	34	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IK1	34	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IK2		
IL1	34	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BN1	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BQ1	36	FLOOR NO.2 WIRE AND FLOOR WIRE (UNDER THE CENTER CONSOLE)
BS1	36	FLOOR WIRE AND LUGGAGE ROOM NO. 2 WIRE (BESIDE THE FUEL TANK)
BU1	36	FLOOR NO. 3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BV1	36	LUGGAGE ROOM NO.1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BW2	36	BACK DOOR NO.1 WIRE AND LUGGAGE ROOM NO.1 WIRE (LEFT REAR SIDE OF ROOF)
BX2	38	BACK DOOR NO.1 WIRE AND BACK DOOR NO.2 WIRE (BACK DOOR LEFT)
BZ1	38	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)
Ba1	38	REAR WINDOW NO.1 WIRE AND BACK DOOR NO.2 WIRE (BACK DOOR RIGHT)
Bb1	38	COWL WIRE AND FRAME WIRE (RIGHT FENDER)
Bf2	38	FLOOR NO. 3 WIRE AND SEAT NO.2 WIRE (LEFT QUARTER PANEL)
Bg1	40	FLOOR NO.1 WIRE AND SEAT NO.1 LH WIRE (UNDER THE DRIVER'S SEAT)
Bh1	40	FLOOR NO.2 WIRE AND SEAT NO.1 RH WIRE (UNDER THE PASSENGER'S SEAT)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX
BG	36	LOWER BACK PANEL CENTER

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	30	ENGINE ROOM MAIN WIRE	I15	34	COWL WIRE
E 3			I16		
E 4			I17	34	INSTRUMENT PANEL WIRE
E 5			I18	34	A/C SUB WIRE
E10			I19	34	ENGINE WIRE
E11			B 1	38	FRAME WIRE
E12	30	OIL PRESSURE SWITCH WIRE	B 2	38	FRONT DOOR LH WIRE
E13			B 6	38	FRONT DOOR RH WIRE
E17	30	ENGINE WIRE	B 8	38	ROOF WIRE
E22	30	TRANSMISSION WIRE	B 9		
E23	30	COWL WIRE	B12		
I 2	34		B14	38	FLOOR WIRE
I 3			B15		
I 5	34	SECURITY WIRE	B17	38	FLOOR NO.2 WIRE
I 6	34	COWL WIRE	B23	38	FRAME NO.2 WIRE
I 7			B24	38	BACK DOOR NO.1 WIRE
I 8			B25	38	BACK DOOR NO.2 WIRE
I 9			B28	38	FLOOR NO.3 WIRE
I12			B32	40	SEAT NO. 1 LH WIRE
I13					

