



H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

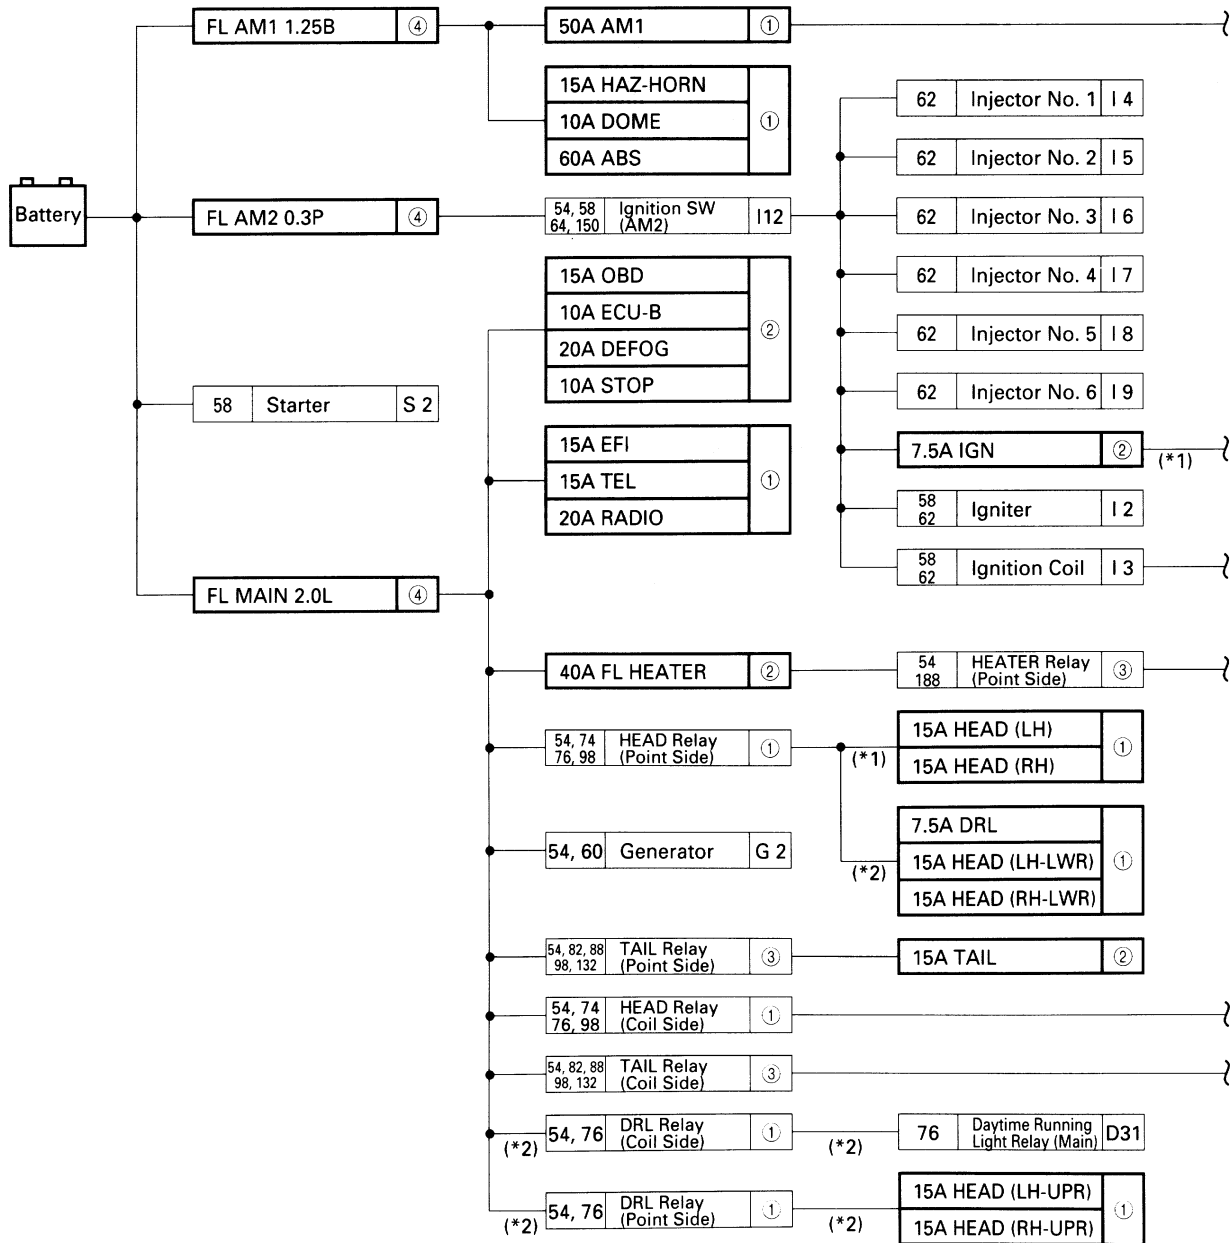

 [LOCATION] ①: R/B No. 2 (See page 21) ②: Fuse Block (F11 See page 20)



H POWER SOURCE (Current Flow Chart)

* 1: USA
* 2: Canada

Location	*Page Nos. of Related Systems		188	141		136		188				141		188		163	88	88 136	136 176	141	182	188	92	
			A/C Dual Pressure SW	ABS Actuator	ABS Relay	Auto Antenna Relay	Auto Antenna Motor	A/C Amplifier	A/C Automatic Amplifier	A/C System Amplifier	ABS ECU	Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Airbag Sensor Assembly	Ashtray Illumination	Auto Antenna Control SW	Auto Antenna ECU	ABS Deceleration Sensor	Brake Fluid Level Warning SW	Blower Hi Relay (Coil Side)	Back Door Courtesy SW			
	CB or Fuse		A 2	A 5	A 7	A 8	A 9	A10	A11	A12	A14	A18	A20	A21	A22	A24	A25	A28	A29	A30	A31	B 1	B 2	B 5
①	7.5A	CHARGE																						
	10A	DOME																					●	
	15A	EFI																						
	15A	TEL																						
	15A	HEAD (LH) (*1)																						
	15A	HEAD (RH) (*1)																						
	15A	HAZ-HORN																						
	20A	RADIO					●	●										●	●					
	60A	ABS		●	●	●							●											
	15A	HEAD (LH-LWR) (*2)																						
	15A	HEAD (LH-UPR) (*2)																						
	15A	HEAD (RH-LWR) (*2)																						
	15A	HEAD (RH-UPR) (*2)																						
	②	7.5A	DRL (*2)																					
15A		CIG							●							●			●					
15A		TAIL															●	●						
10A		STOP										●												
20A		DEFOG																						
20A		WIPER																						
10A		GAUGE	●	●		●			●	●	●	●	●	●	●	●					●	●		
7.5A		TURN																						
15A		ECU-IG											●						●	●				
20A		REAR-HTR																						
7.5A		IGN (*2)														●								
10A		A.C																						
30A		DIFF																						
30A		FL POWER																						
10A		ECU-B								●			●				●							
15A		OBD																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①:R/B No. 2 (See page 21) ②:Fuse Block (F11 See page 20)

H POWER SOURCE (Current Flow Chart)

* 1: USA
* 2: Canada

Location	*Page Nos. of Related Systems		176	62 141 163	62	172	101	92	170	104	92	92 126	92	108 122 126	126
	Parts		CD Automatic Changer	Data Link Connector 1	Data Link Connector 3	Diff. Lock Control SW	Diff. Lock ECU	Diode (Front Washer)	Diode (Interior Light)	Diode (Neutral Detection)	Diode (Rear Washer)	Door Courtesy Light Front LH	Door Courtesy Light Front RH	Door Courtesy Light Rear LH	Door Courtesy Light Rear RH
	Code or Location		CB or Fuse	D 1	D 3	D 4	D 5	D 6	D 8	D 9	D 10	D 11	D 12	D 13	D 14
①	7.5A CHARGE														
	10A DOME							●	●	●			●	●	●
	15A EFI			●											
	15A TEL														
	15A HEAD (LH) (*1)														
	15A HEAD (RH) (*1)														
	15A HAZ-HORN														
	20A RADIO			●											
	60A ABS														
	15A HEAD (LH-LWR) (*2)														
	15A HEAD (LH-UPR) (*2)														
	15A HEAD (RH-LWR) (*2)														
	15A HEAD (RH-UPR) (*2)														
	7.5A DRL (*2)														
②	15A CIG			●											
	15A TAIL														
	10A STOP														
	20A DEFOG														
	20A WIPER						●			●					
	10A GAUGE			●		●				●					●
	7.5A TURN														
	15A ECU-IG														
	20A REAR-HTR														
	7.5A IGN (*2)														
	10A A.C					●	●								
	30A DIFF														
	30A FL POWER											●			●
	10A ECU-B			●											
	15A OBD				●										

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 21) ②: Fuse Block (F11 See page 20)

[illegible]

H POWER SOURCE (Current Flow Chart)

* 1: USA
* 2: Canada

Location	*Page Nos. of Related Systems		62	107	88 96	88 188	188	84	62	92	98	82	62	114	108	92	108	182	88	150		
			Parts		Code or Location																	
	CB or Fuse	Heated Oxygen Sensor (Bank 1 Sensor 1)	Heated Oxygen Sensor (Bank 1 Sensor 2)	Horn LH	Horn RH	Hazard SW	Heater Control SW and A/C SW	High Mounted Stop Light	Idle Air Control Valve	Ignition Key Cylinder Light	Ignition Key Cylinder Light Relay	Light Retainer Relay	License Plate Light	Mass Air Flow Meter	Mobilephone	Moon Roof Control Relay	Moon Roof Control SW and Personal Light	Moon Roof Limit SW and Motor	Oil Pressure Sender	A/T Shift Lever Illumination [O/D Main SW]	O/D Main SW	
	H 5	H 6	H 7	H 8	H 9	H10	H11	H12	I 1	I10	I11	L 1	L 2	M 1	M 3	M 4	M 5	M 6	O 2	O 4		
①	7.5A CHARGE																					
	10A DOME									●	●						●					
	15A EFI	●	●						●					●								
	15A TEL																					
	15A HEAD (LH) (*1)																					
	15A HEAD (RH) (*1)																					
	15A HAZ-HORN			●	●	●																
	20A RADIO																					
	60A ABS																					
	15A HEAD (LH-LWR) (*2)																					
	15A HEAD (LH-UPR) (*2)																					
	15A HEAD (RH-LWR) (*2)																					
	15A HEAD (RH-UPR) (*2)																					
	7.5A DRL (*2)																					
②	15A CIG					●	●						●						●			
	15A TAIL																					
	10A STOP							●														
	20A DEFOG																					
	20A WIPER																					
	10A GAUGE						●											●		●		
	7.5A TURN					●																
	15A ECU-IG											●			●							
	20A REAR-HTR																					
	7.5A IGN (*2)																					
	10A A.C							●														
	30A DIFF																					
	30A FL POWER															●		●				
	10A ECU-B												●									
	15A OBD																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 21) ②: Fuse Block (F11 See page 20)

86 150 170	82		182	122								138											88		88 180	88 158	118	88 182
Park/Neutral Position SW, Back-Up Light SW and A/T Indicator SW	P 1	P 2	P 3	P 4	P 5	P 6	P 7	P 8	P 9	P 10	P 11	P 12	P 13	P 14	P 15	P 16	P 17	P 18	P 19	P 20	P 21	P 22	P 23	R 1	R 3	R 4	R 5	R 6
Parking Light LH																												
Parking Light RH																												
Parking Brake SW																												
Power Window Master SW																												
Power Window Motor Front LH																												
Power Window Motor Front RH																												
Power Window Motor Rear LH																												
Power Window Motor Rear RH																												
Power Window SW Front RH																												
Power Window SW Rear LH																												
Power Window SW Rear RH																												
Power Seat Control SW (Driver's Seat)																												
Power Seat Control SW (Front Passenger's Seat)																												
Power Seat Motor (Driver's Seat Front Vertical Control)																												
Power Seat Motor (Driver's Seat Lumbar Support Control)																												
Power Seat Motor (Driver's Seat Rear Vertical Control)																												
Power Seat Motor (Driver's Seat Reclining Control)																												
Power Seat Motor (Driver's Seat Slide Control)																												
Power Seat Motor (Front Passenger's Seat Front Vertical Control)																												
Power Seat Motor (Front Passenger's Seat Rear Vertical Control)																												
Power Seat Motor (Front Passenger's Seat Reclining Control)																												
Power Seat Motor (Front Passenger's Seat Slide Control)																												
Radio and Player																												
Rear Heater SW																												
Rear Window Defogger SW																												
Remote Control Mirror SW																												
Rheostat																												

③: R/B No. 1 (See page 20) ④: Fusible Link (F6, F7, F8 See page 22)

- * 1: USA
- * 2: Canada

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

50

[illegible]

