



SERVICE HINTS

A30 AUTO ANTENNA ECU

- 4-GROUND : ALWAYS APPROX. 12 VOLTS
- 7-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION
- 17-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION
- 5-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A9	22	A30	24	J6	25
A10	22	F11	25	J8	25
A29	24	J3	25	R1	25

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

 
□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA4	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
IJ1	34	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	32	RIGHT KICK PANEL


A 9 GRAY




A10 GRAY



 A29 BLACK




A30

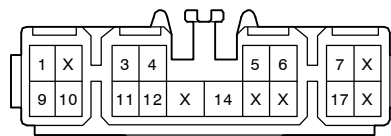

F11


(SEE PAGE 20)

J 3

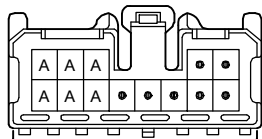


(HINT : SEE PAGE 7)

J 6

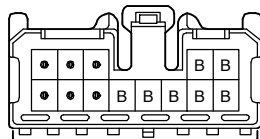

(HINT : SEE PAGE 7)

 J 8 BLUE



(HINT : SEE PAGE 7)

R 1

