



10A GAUGE

F11 FUSE BLOCK

3

Y

B

J4 JUNCTION CONNECTOR

B

Y

6

IL1

Y

4

P1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]

8

R-B

7

IL1

R-B

I13 TO A/T INDICATOR LIGHT [COMB. METER]

R-B

19

IG2

R-B

14

BU1

R-B

B26

R-B

B31

R-B

T10 TRAILER SOCKET (TAIL AND STOP LIGHT)

3

R7 BACK-UP LIGHT LH [REAR COMB. LIGHT LH]

1

5

R8 BACK-UP LIGHT RH [REAR COMB. LIGHT RH]

1

5

W-B

W-B

BG

SERVICE HINTS

P 1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]

4-8 : CLOSED WITH THE SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	P 1	23	R 8	27
J 4	25	R 7	27	T10	27

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IL1	34	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BU1	36	FLOOR NO. 3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	36	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I13	34	COWL WIRE	B31	38	FLOOR NO. 3 WIRE
B26	38	FLOOR NO. 3 WIRE			

F11
(SEE PAGE 20)

