


CENTER DIFFERENTIAL LOCK

* 1 : CENTER DIFF. LOCK
* 2 : A/T P

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

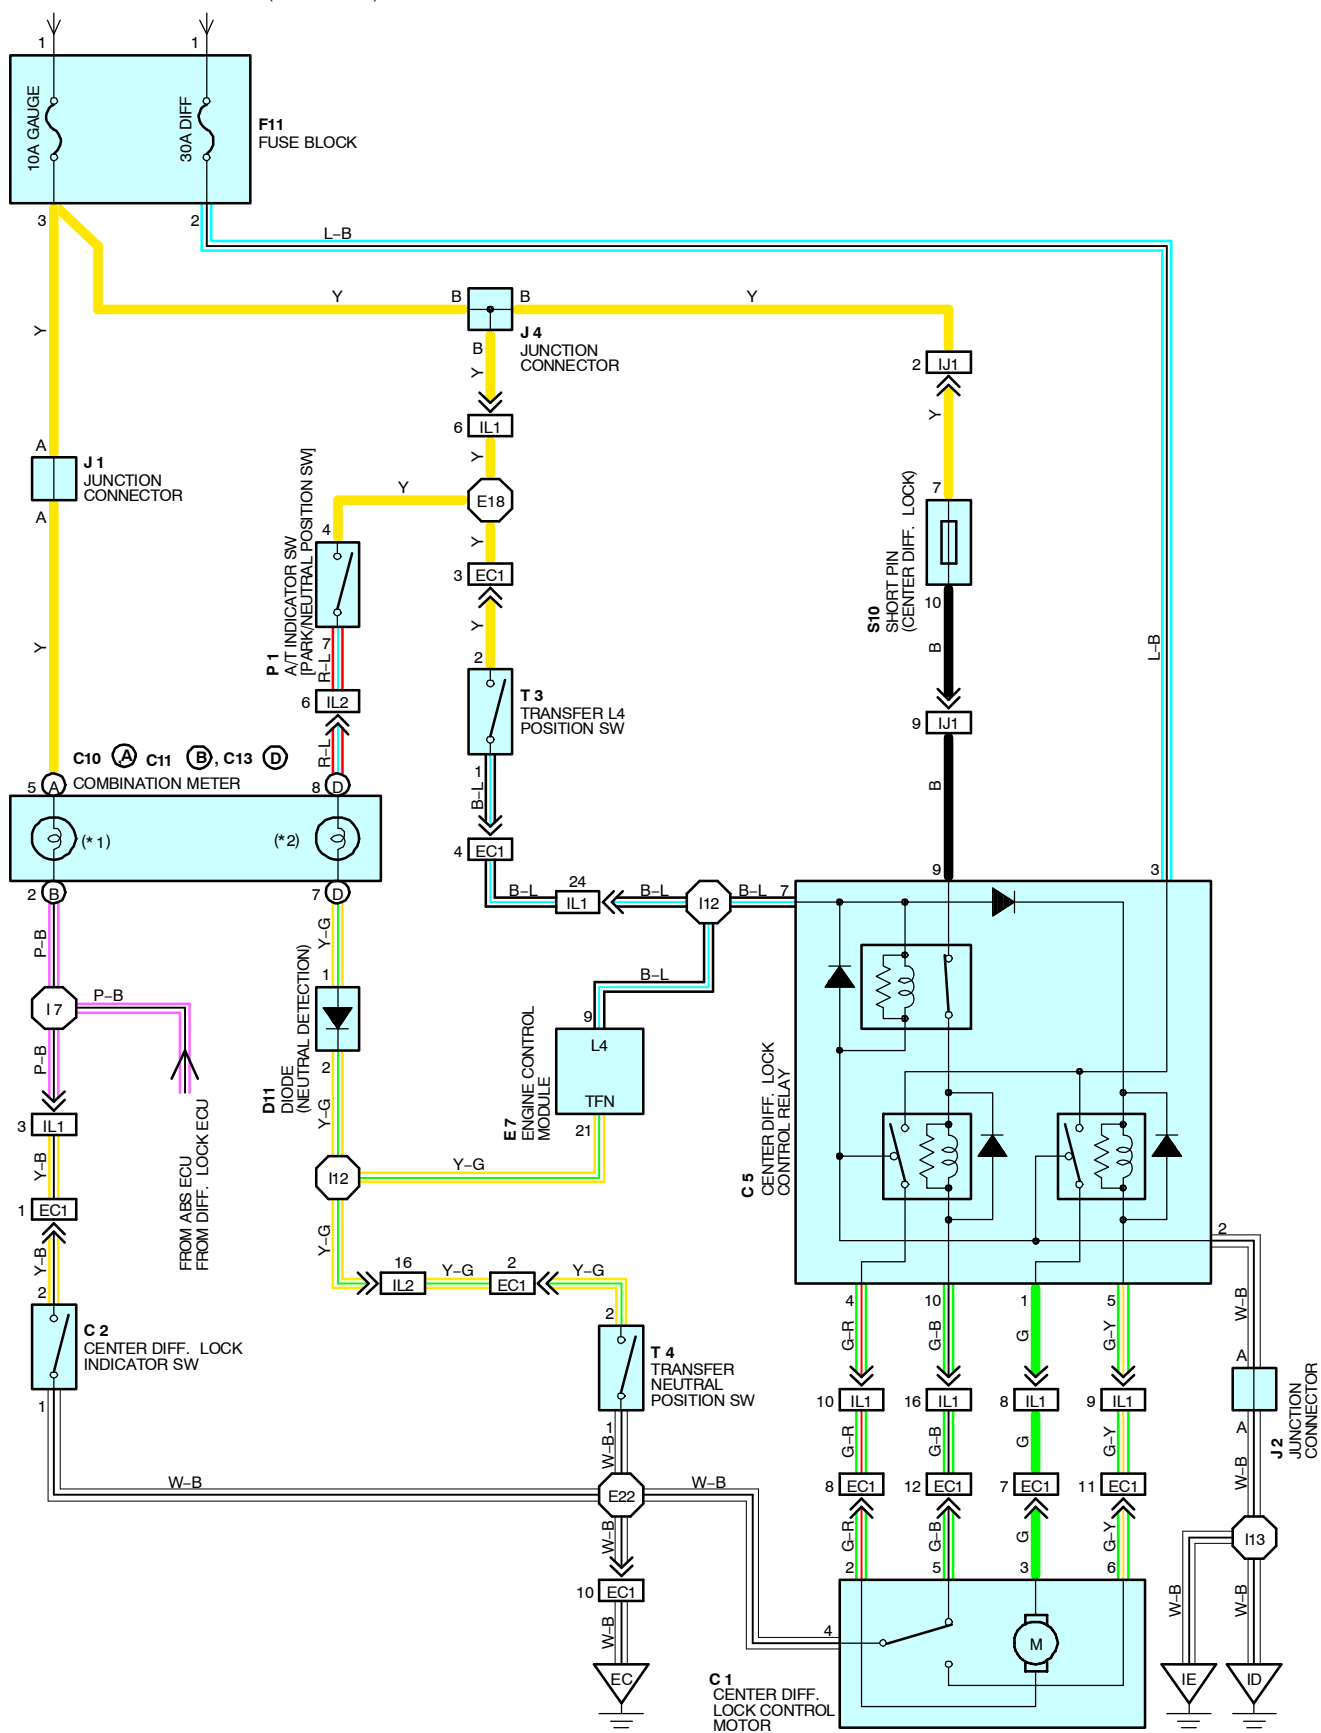

SERVICE HINTS

C5 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

7-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION AND FOUR-WHEEL DRIVE CONTROL

LEVER AT **L4** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C1	22	D11	24	P1	23
C2	22	E7	24	S10	25
C5	24	F11	25	T3	23
C10	A 24	J1	25	T4	23
C11	B 24	J2	25		
C13	D 24	J4	25		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
IJ1	34	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IL1	34	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IL2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E18	30	ENGINE WIRE	I12	34	COWL WIRE
E22	30	TRANSMISSION WIRE	I13		
I7	34	COWL WIRE			

 
C1




C2 GRAY



 
C5




C10 A GRAY

 

C11 B BLUE

 


C13 D

 

D11 BLACK




E7 DARK GRAY

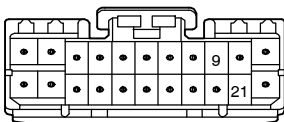

F11

(SEE PAGE 20)

 J1




(HINT : SEE PAGE 7)

J2 BLUE




(HINT : SEE PAGE 7)

 J4




(HINT : SEE PAGE 7)

 
P1 GRAY



S10

 

T3 GRAY

 

T4 GRAY

