


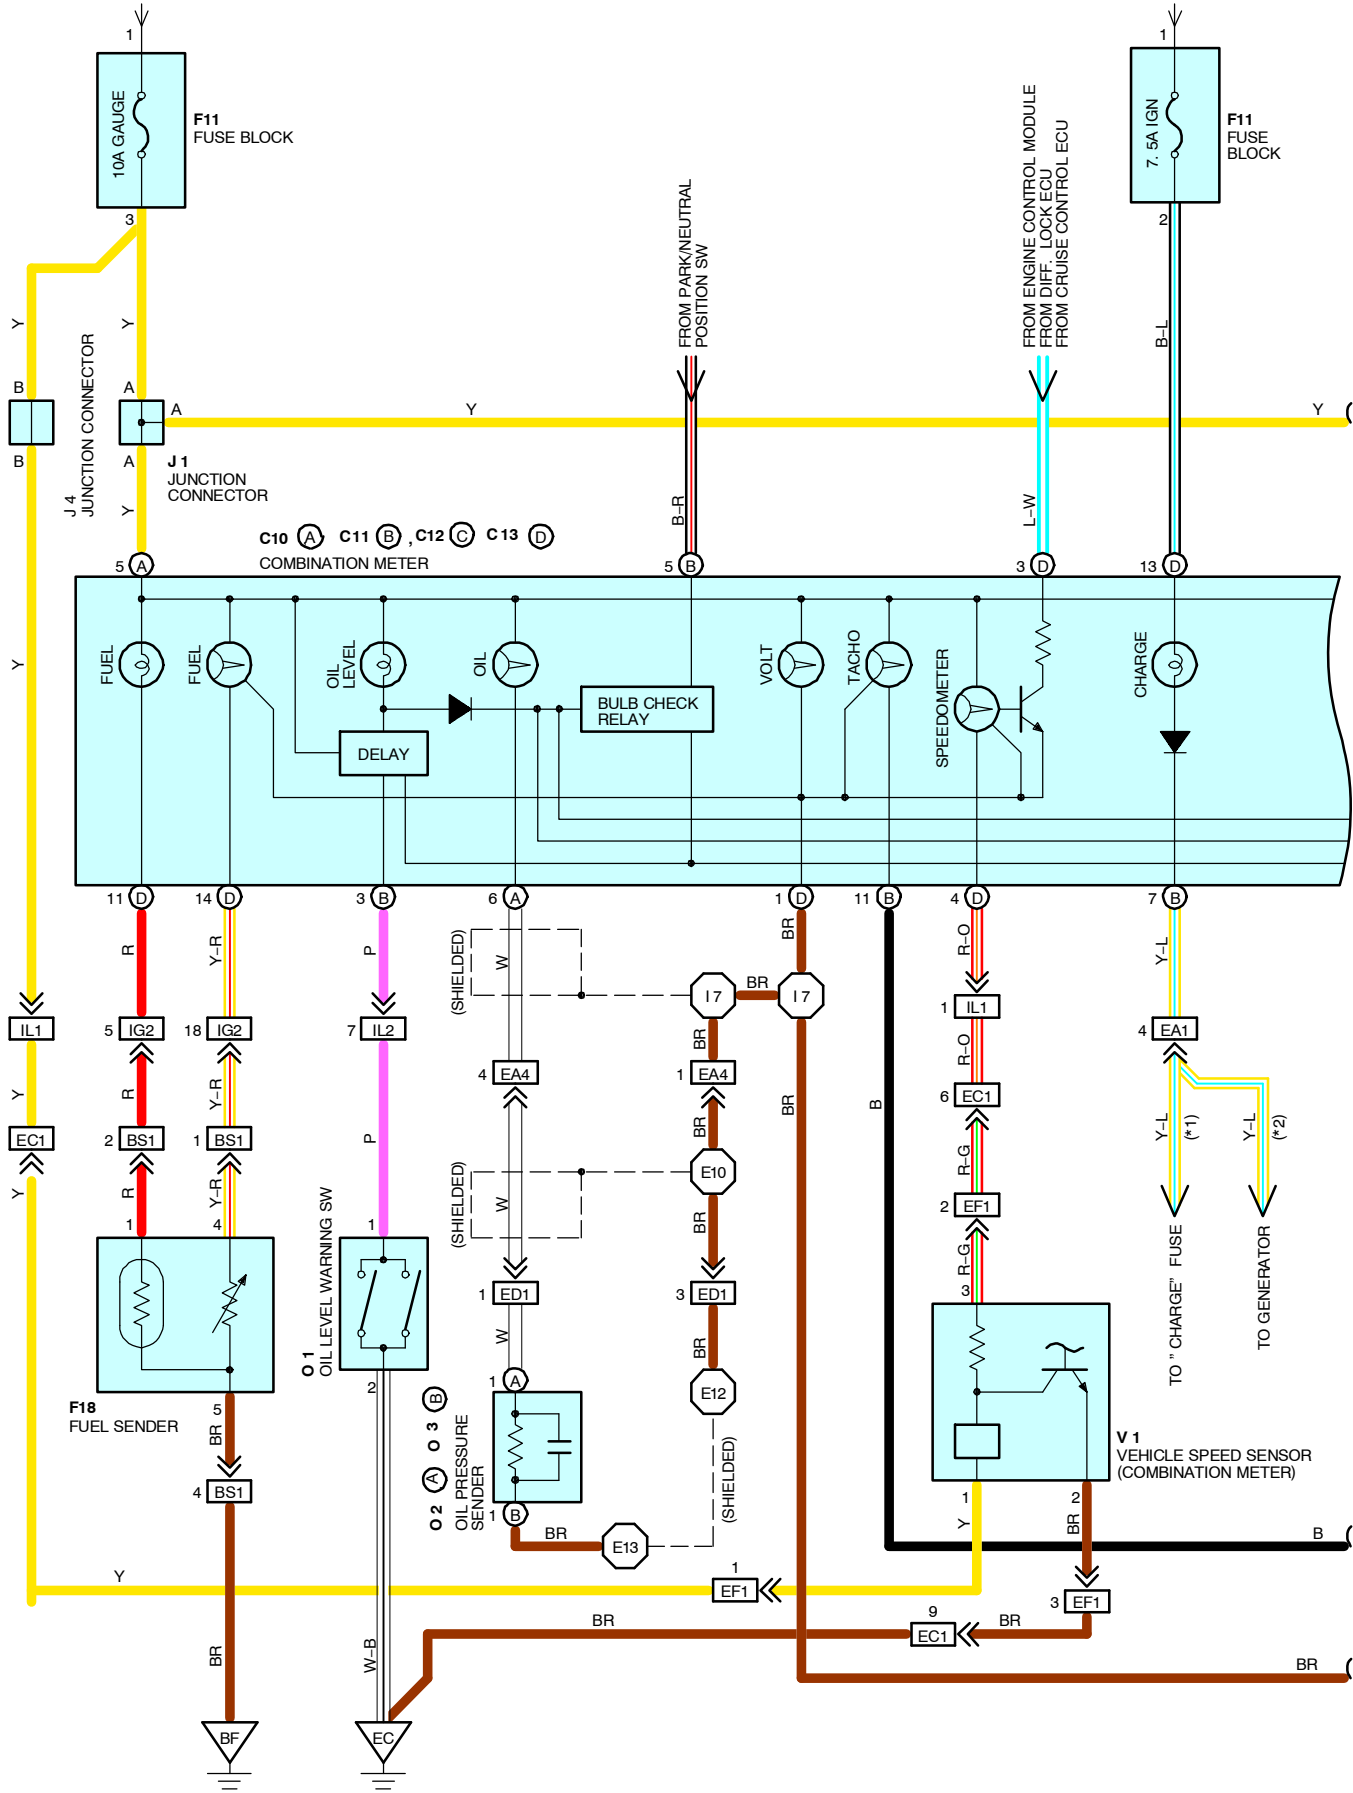


COMBINATION METER

FROM POWER SOURCE SYSTEM (SEE PAGE 54)


FROM POWER SOURCE SYSTEM (SEE PAGE 54)




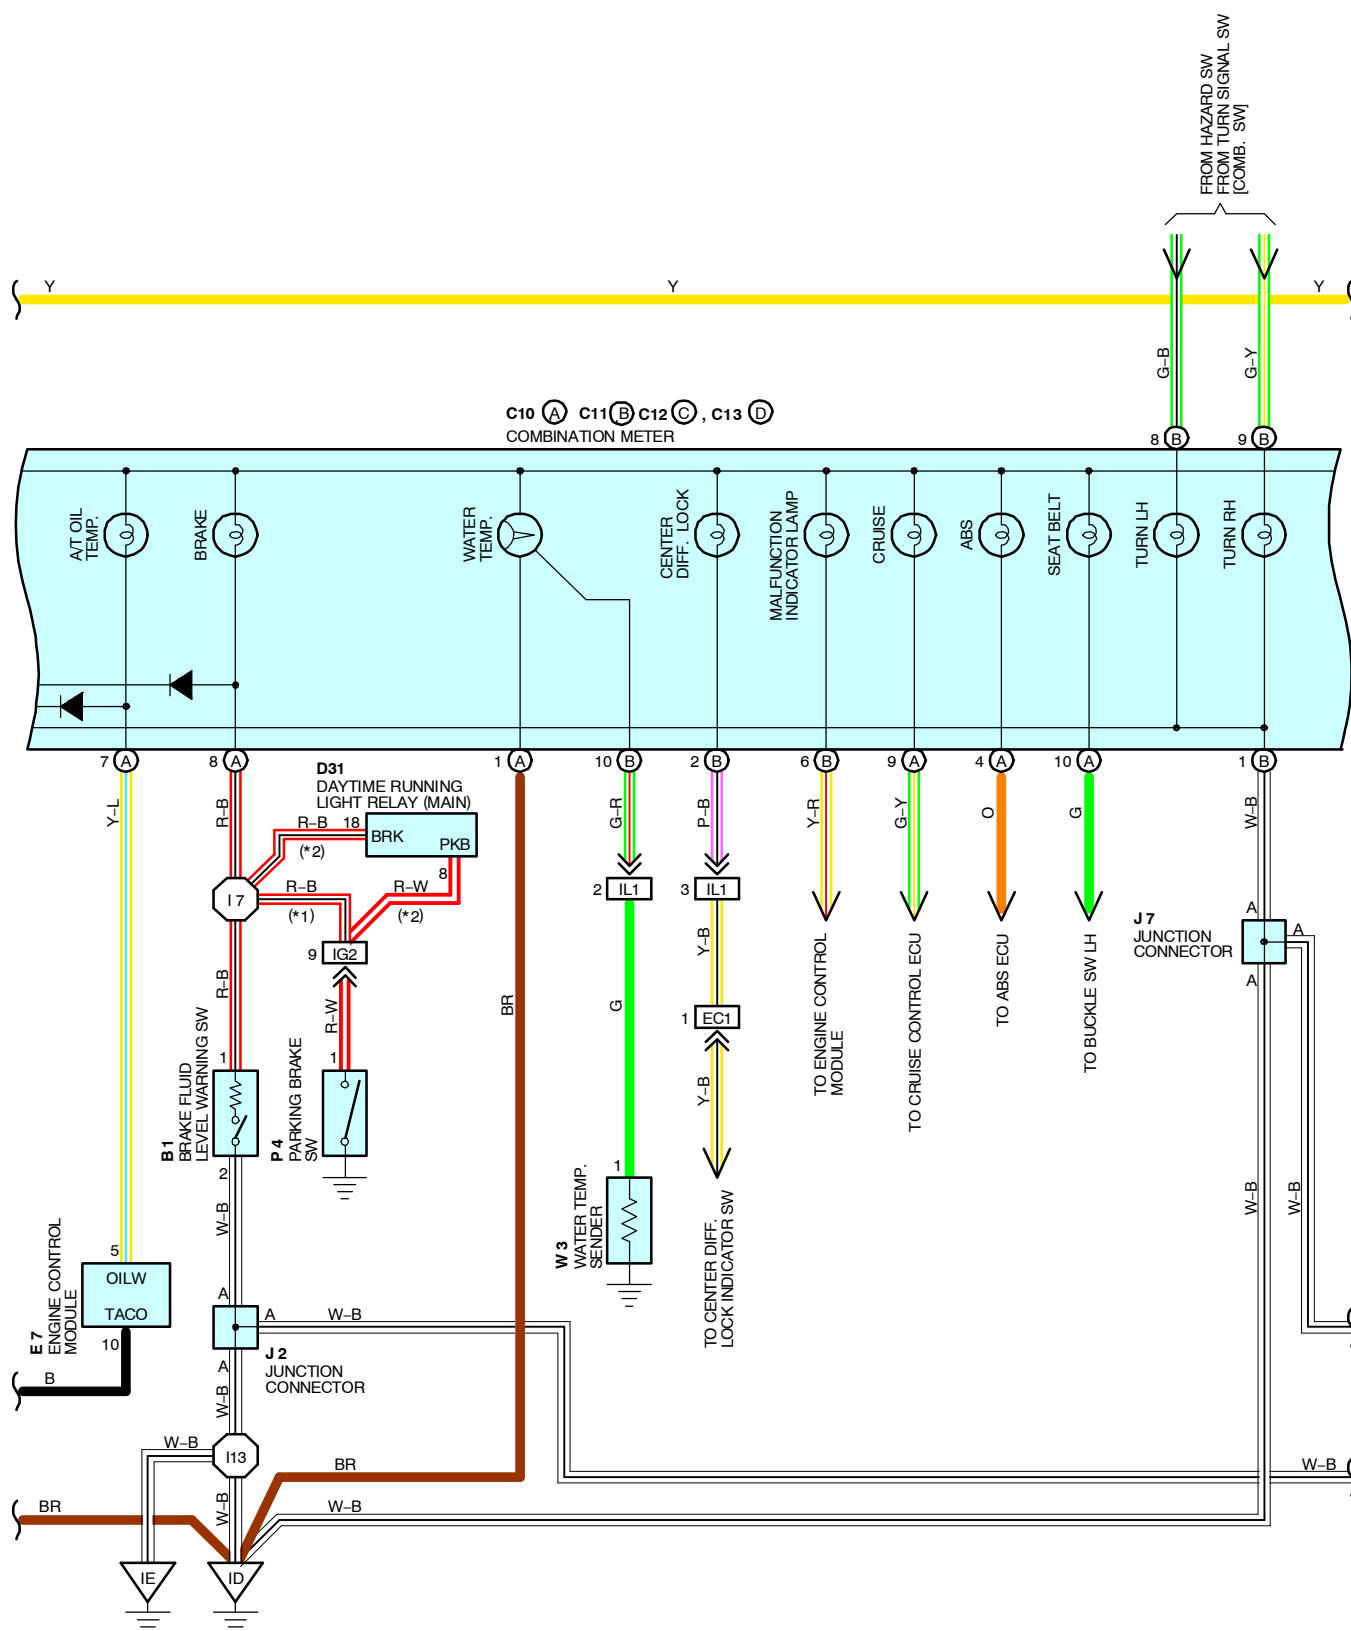



COMBINATION METER

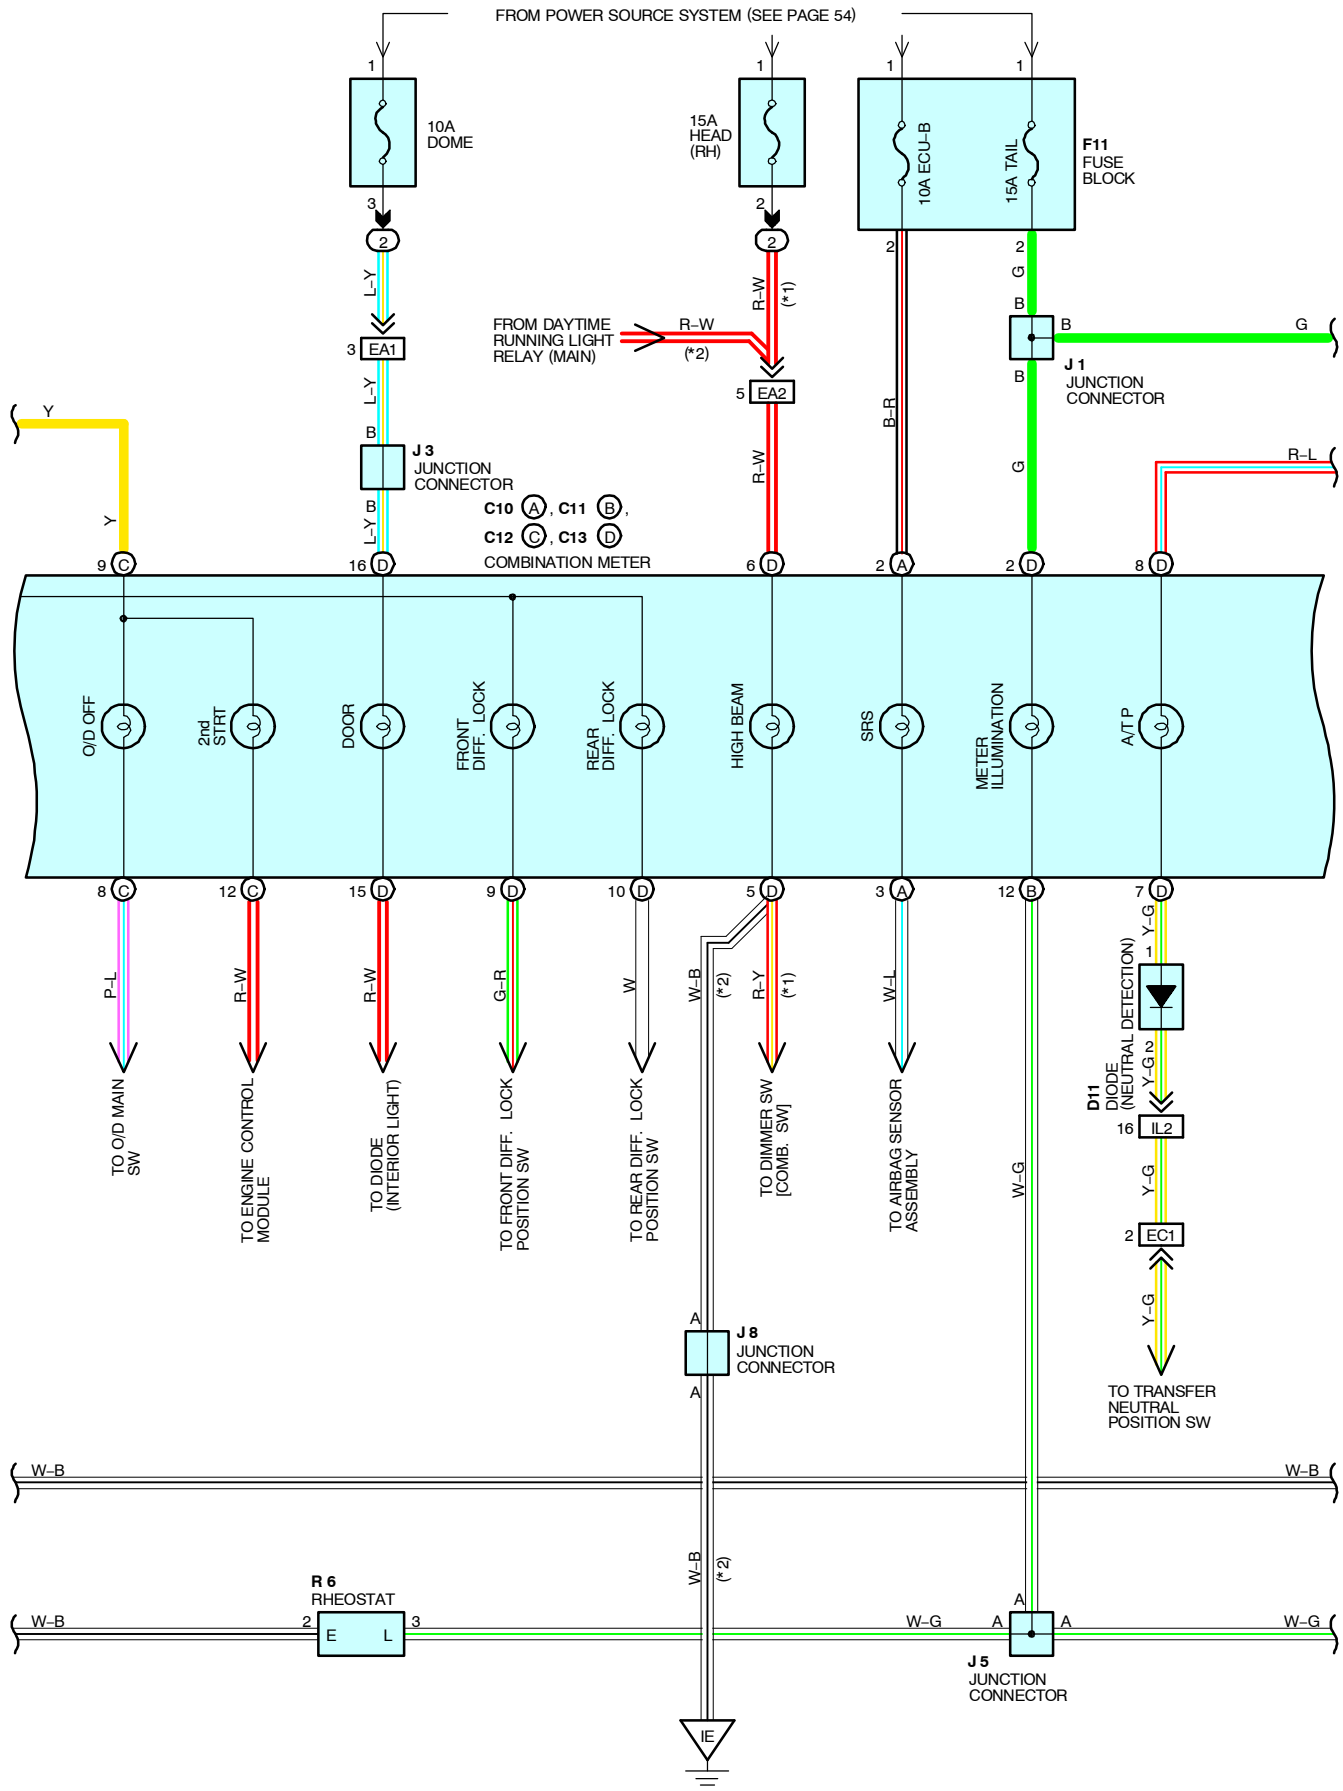

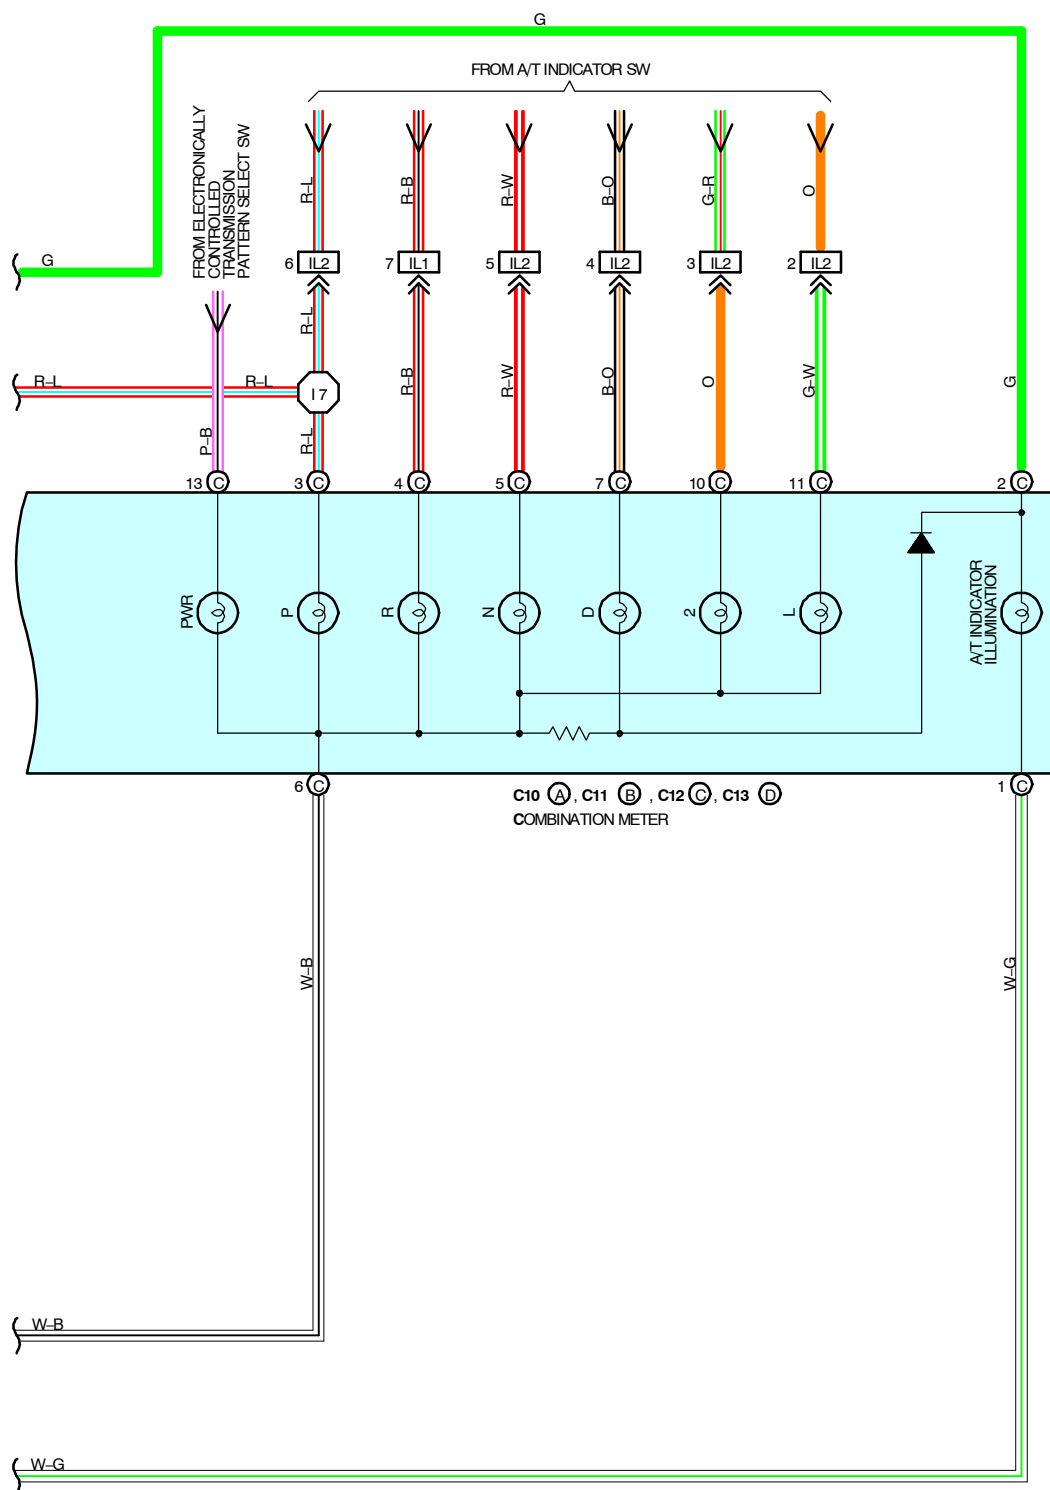



COMBINATION METER

SERVICE HINTS

B1 BRAKE FLUID LEVEL WARNING SW

1-2 : CLOSED WITH THE FLOAT DOWN

C10 (A), C11 (B), C12 (C), C13 (D) COMBINATION METER

(D) 16-GROUND: ALWAYS APPROX. 12 VOLTS

(A) 5, (D) 13-GROUND :

APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

(A) 1, (B) 1, (C) 6, (D) 1-GROUND : ALWAYS CONTINUITY

P4 PARKING BRAKE SW

1-GROUND: CLOSED WITH THE PARKING BRAKE LEVER PULLED UP

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B1	22	F11	25	J 8	25
C10	A 24	F18	26	O 1	23
C11	B 24	J 1	25	O2	A 27
C12	C 24	J 2	25	O3	B 25
C13	D 24	J 3	25	P 4	27
D11	24	J 4	25	R 6	25
D31	24	J 5	25	V 1	23
E 7	24	J 7	25	W 3	23

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		
EA4	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
ED1	30	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
EF1	30	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IL1	34	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IL2		
BS1	36	FLOOR WIRE AND LUGGAGE ROOM WIRE (BESIDE THE FUEL TANK)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E10	30	ENGINE ROOM MAIN WIRE	1 7	34	COWL WIRE
E12	30	OIL PRESSURE SWITCH WIRE	I13		
E13					

