


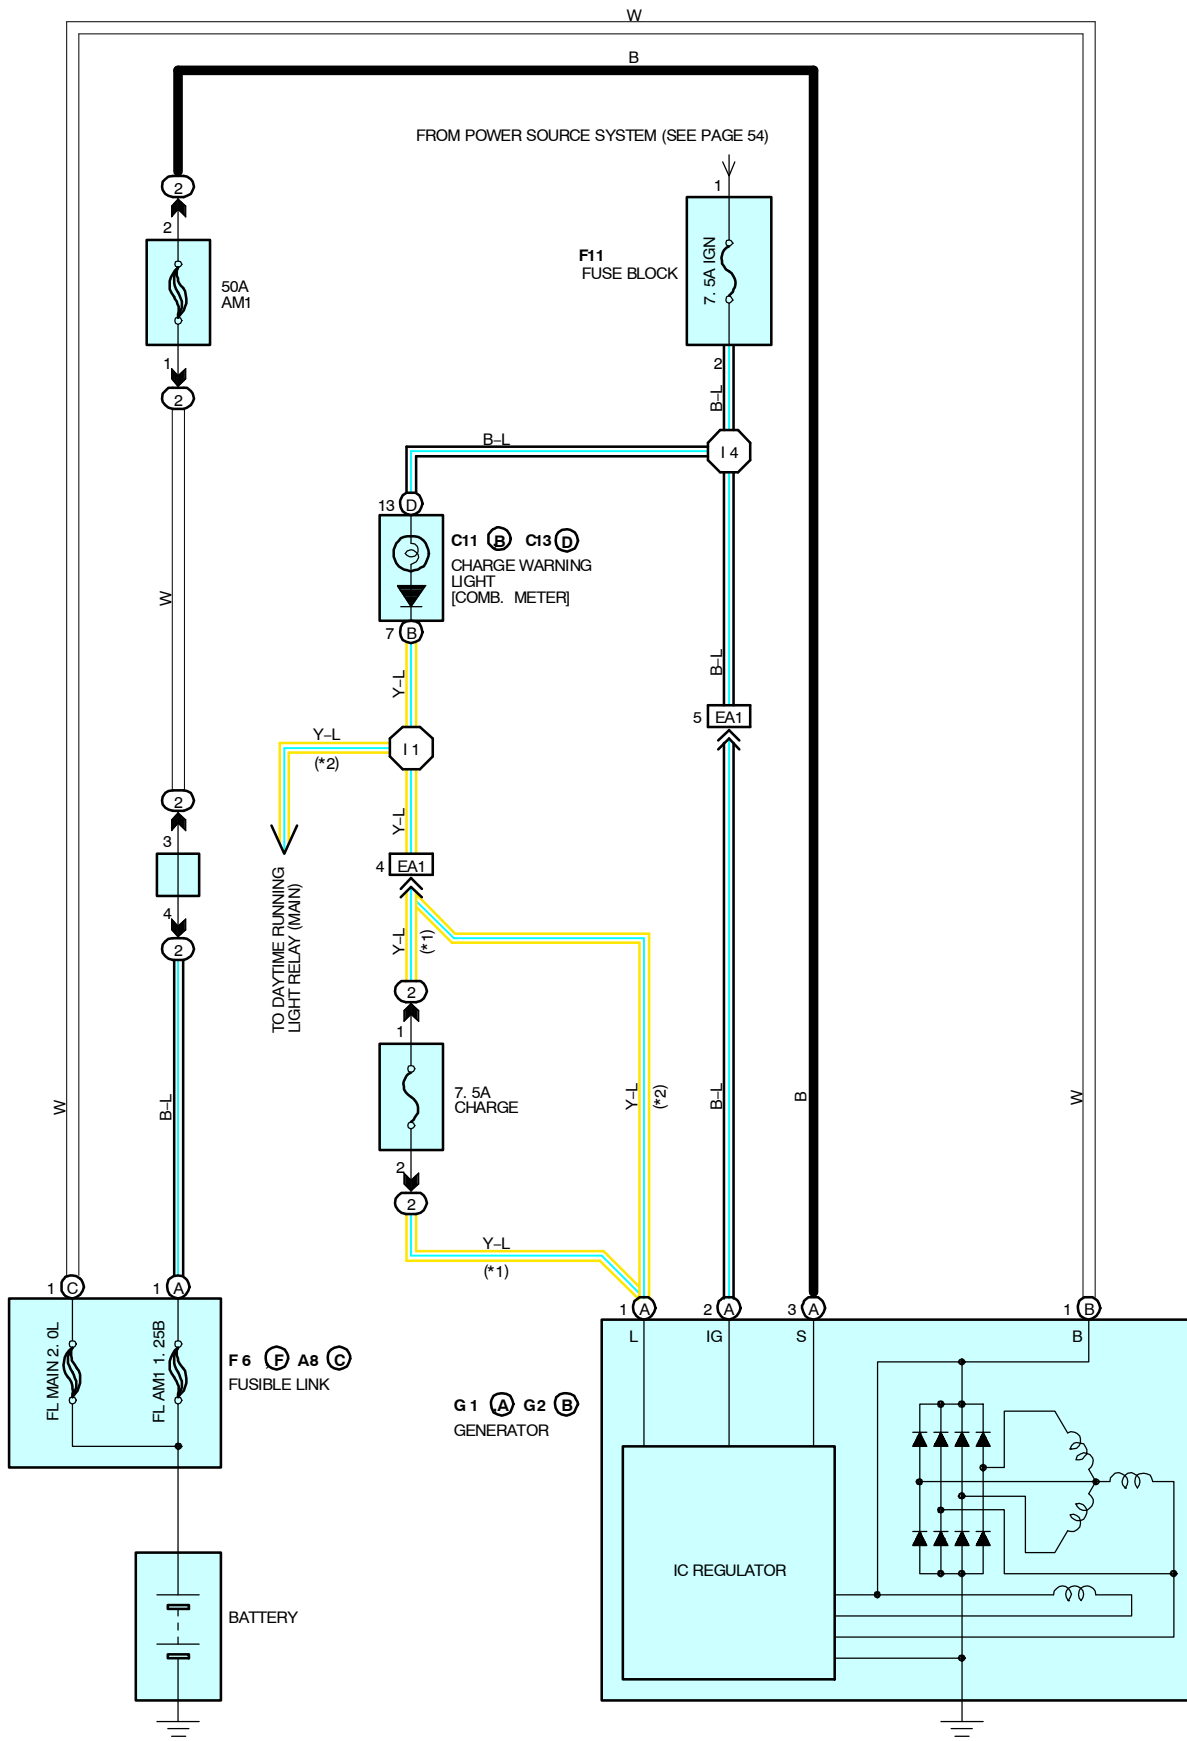

CHARGING

* 1 : USA
* 2 : CANADA



SERVICE HINTS

G 1 (A), G 2 (B) GENERATOR

- (B) 1-GROUND : 13.9-15.1 VOLTS WITH THE ENGINE RUNNING AT **2000** RPM AND **25°C (77°F)**
13.5-14.3 VOLTS WITH THE ENGINE RUNNING AT **2000** RPM AND **115°C (239°F)**
 (A) 3-GROUND : 0-4 VOLTS WITH THE IGNITION SW AT **ON** POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
C11	B	24	G 2	B	22	F11	25
C13	D	24	F 6	A	22		
G 1	A	22	F 8	C	22		

○ : RELAY BLOCKS




CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 1	34	COWL WIRE	I 1	34	COWL WIRE

 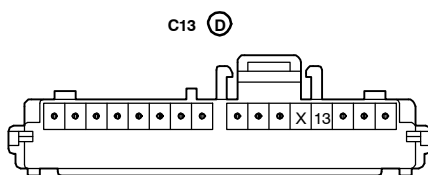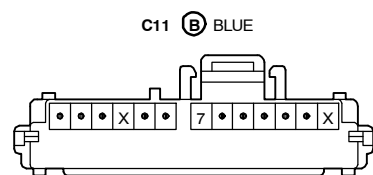

F11
(SEE PAGE 20)

