




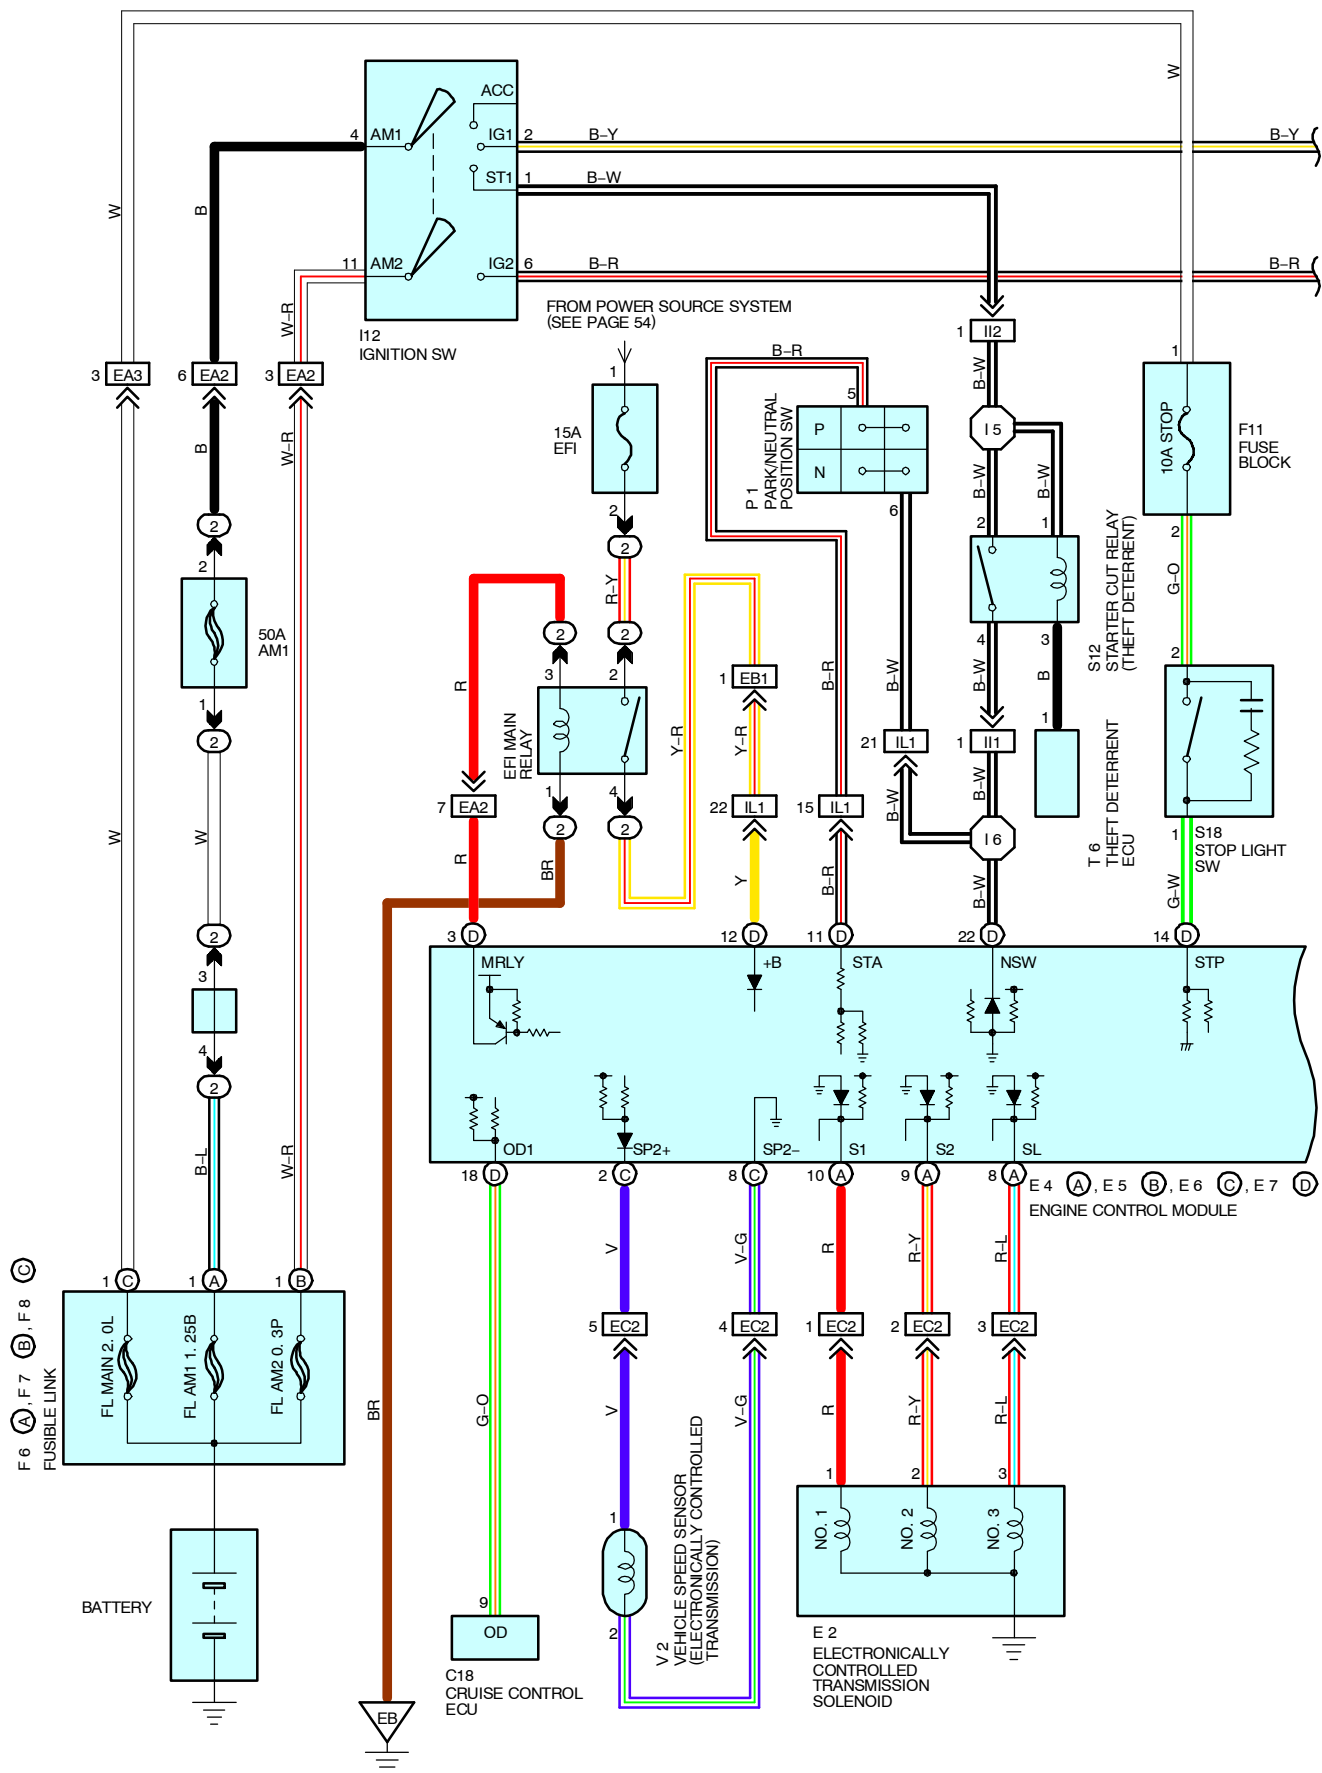

AND A/T INDICATOR

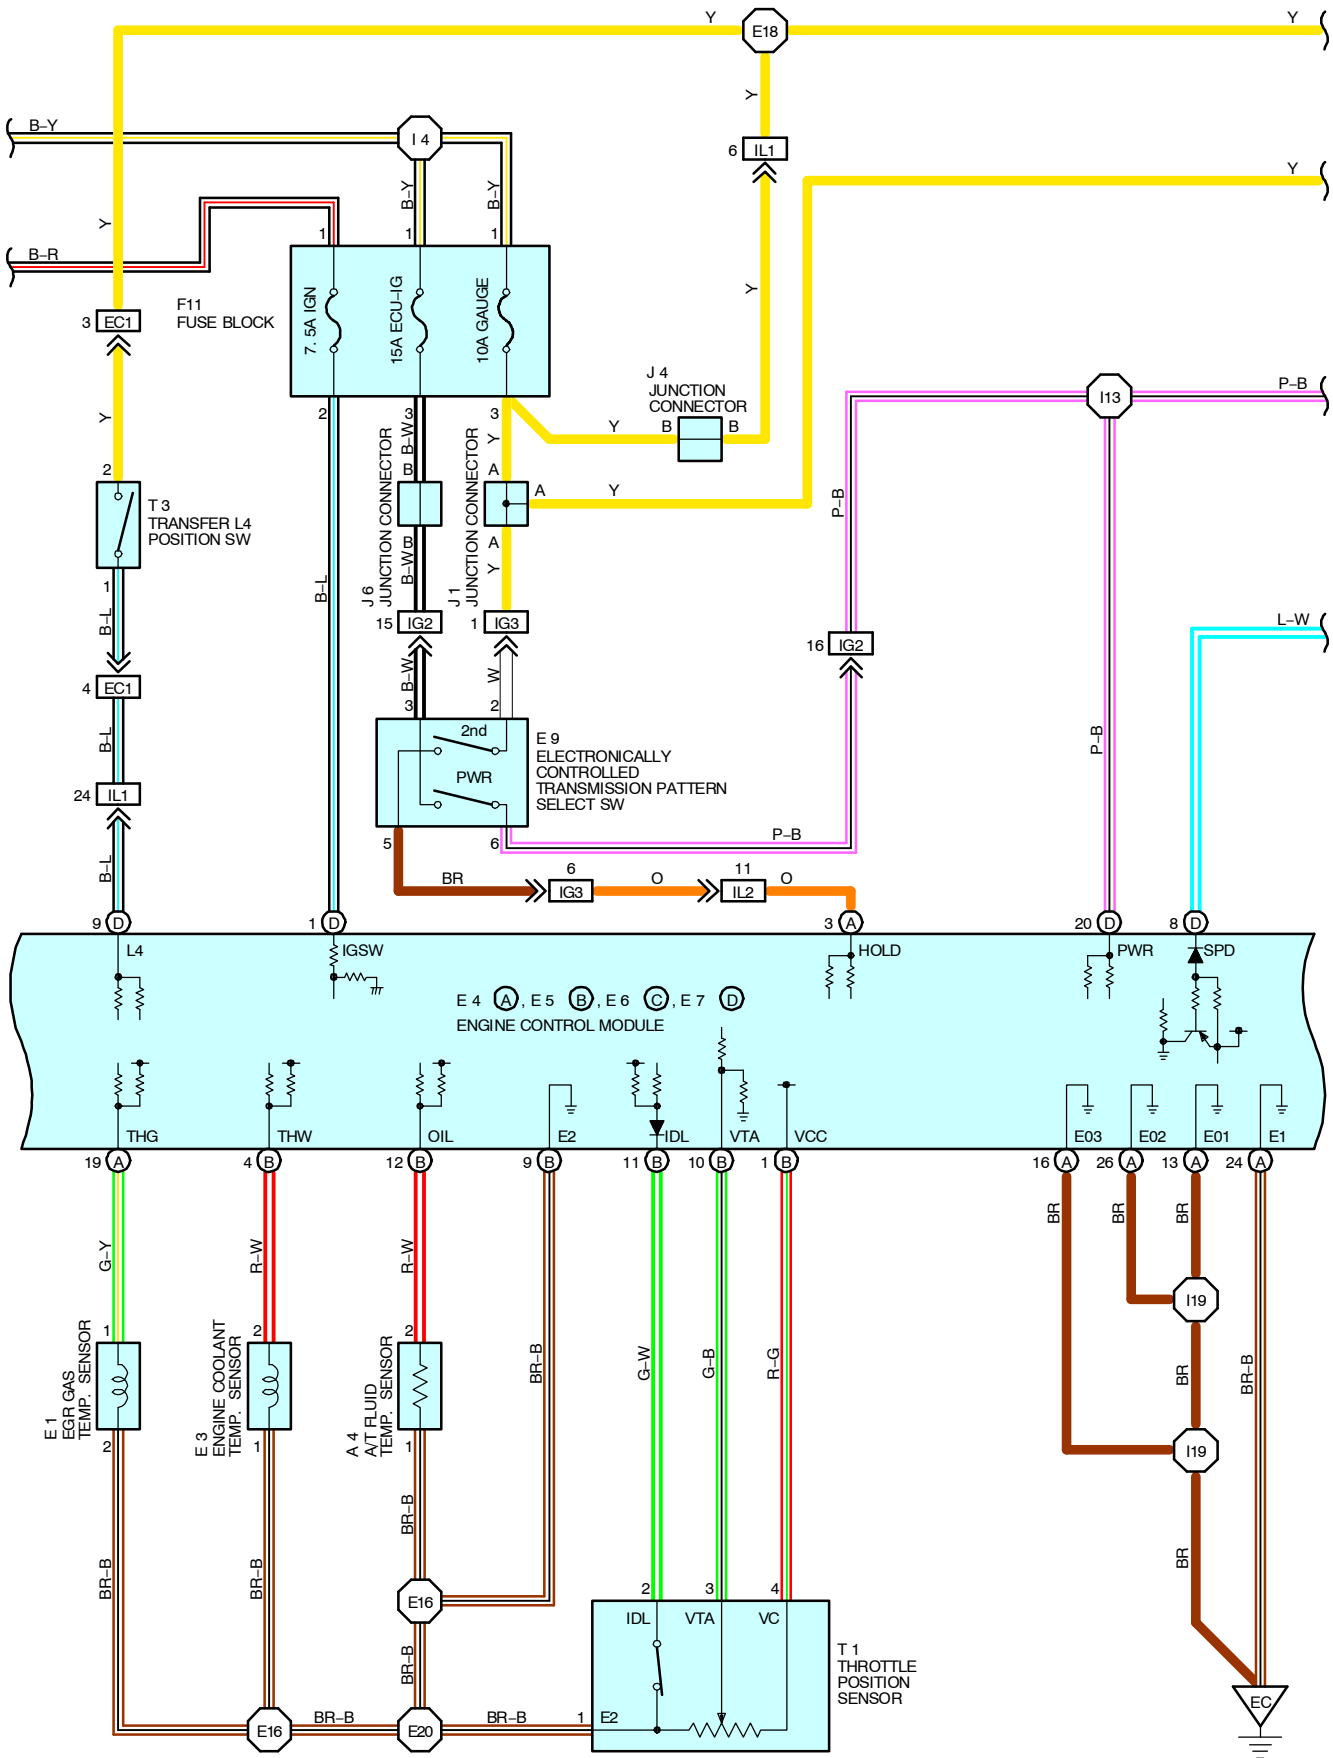

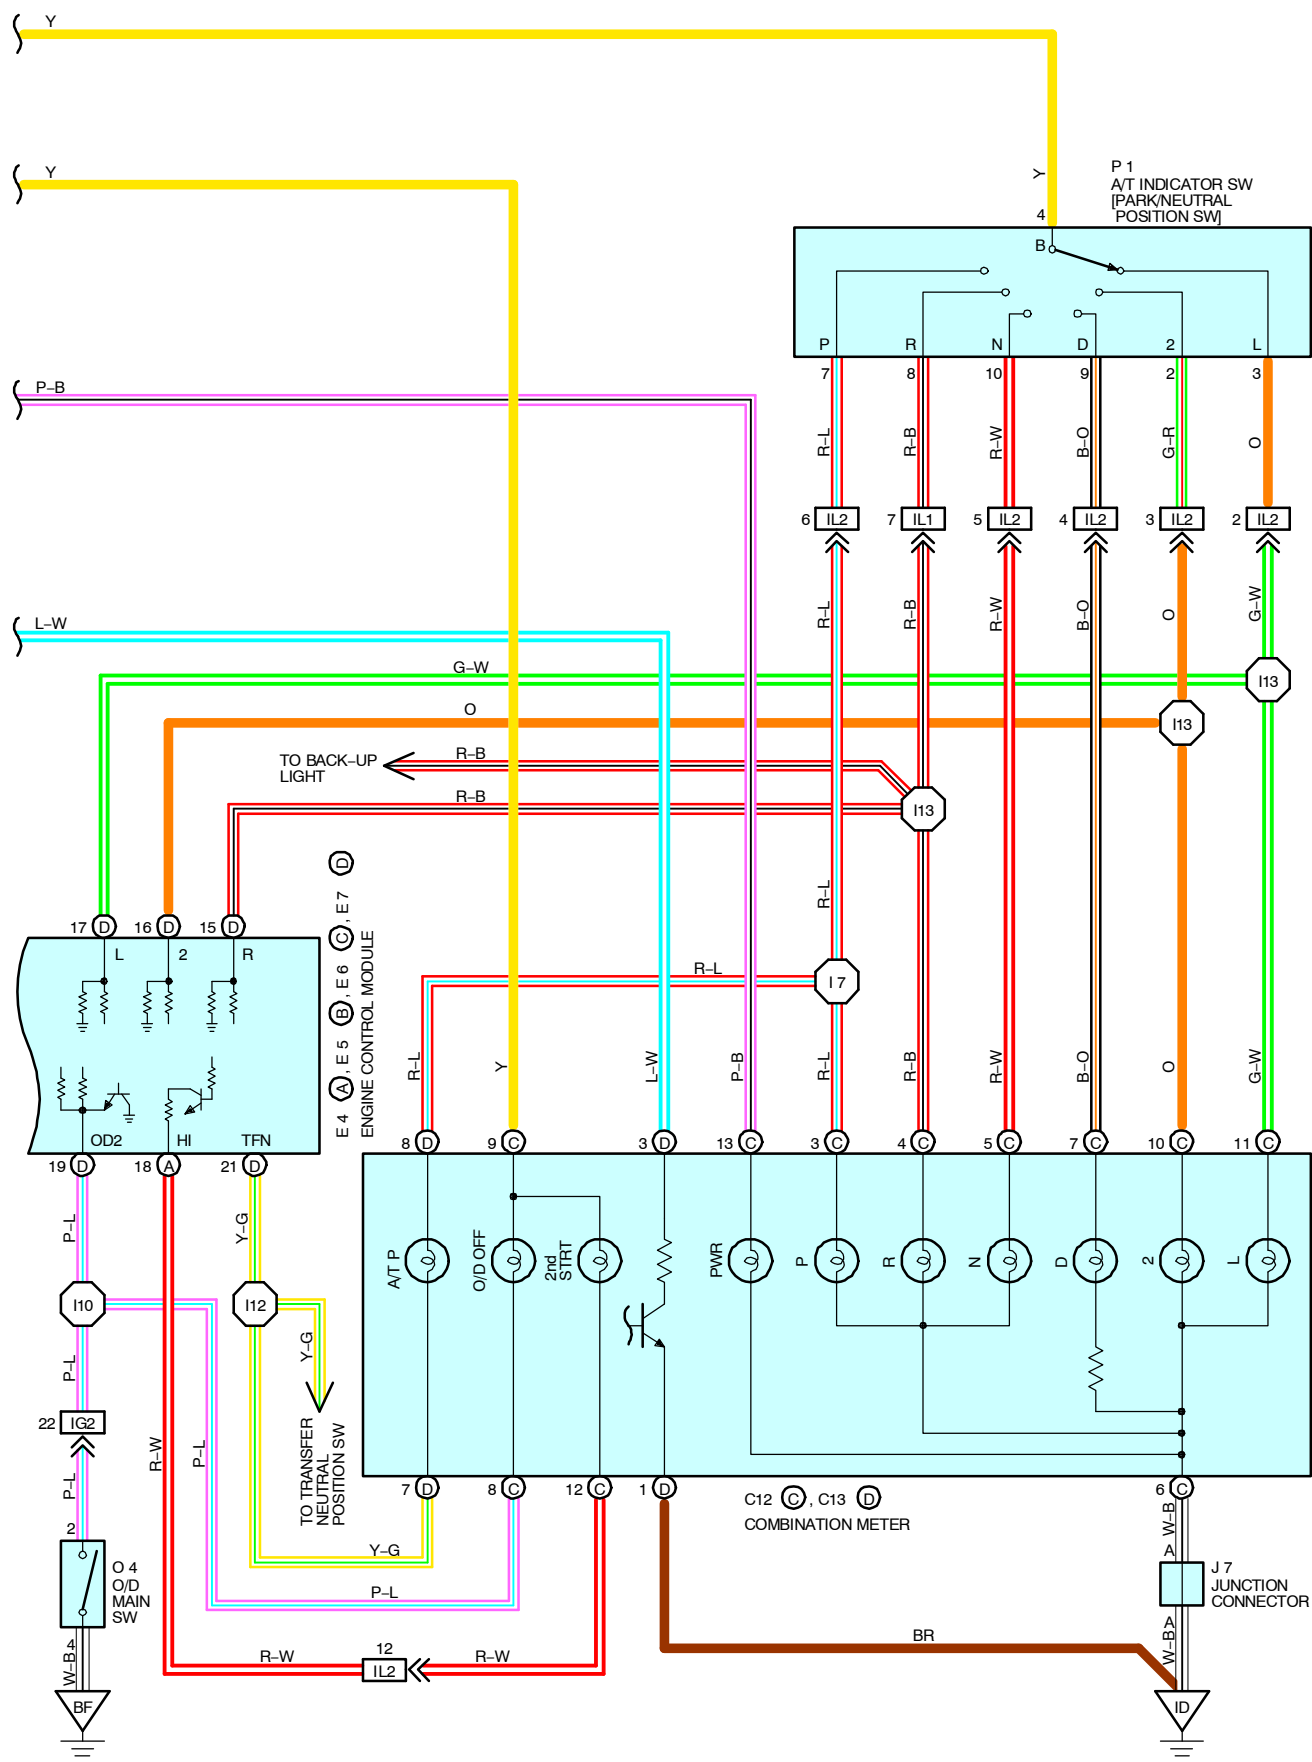

AND A/T INDICATOR

SYSTEM OUTLINE

THE PREVIOUS AUTOMATIC TRANSMISSION HAS SELECTED EACH GEAR SHIFT USING MECHANICALLY CONTROLLED THROTTLE HYDRAULIC PRESSURE, GOVERNOR HYDRAULIC PRESSURE AND LOCK-UP HYDRAULIC PRESSURE. THE ELECTRONICALLY CONTROLLED TRANSMISSION, HOWEVER, ELECTRICALLY CONTROLS THE GOVERNOR PRESSURE AND LOCK-UP PRESSURE THROUGH THE SOLENOID VALVE. THE ENGINE CONTROL MODULE OF THE SOLENOID VALVE BASED ON THE INPUT SIGNALS FROM EACH SENSOR MAKES SMOOTH DRIVING POSSIBLE BY SHIFT SELECTION FOR EACH GEAR WHICH IS MOST APPROPRIATE TO THE DRIVING CONDITIONS AT THAT TIME.

1. GEAR SHIFT OPERATION

DURING DRIVING, THE ENGINE CONTROL MODULE SELECTS THE SHIFT FOR EACH GEAR WHICH IS MOST APPROPRIATE TO THE DRIVING CONDITIONS, BASED ON INPUT SIGNALS FROM THE ENGINE COOLANT TEMP. SENSOR TO **TERMINAL THW** OF THE ENGINE CONTROL MODULE, AND ALSO THE INPUT SIGNALS TO **TERMINAL SP2+** OF THE ENGINE CONTROL MODULE FROM THE VEHICLE SPEED SENSOR DEVOTED TO THE ELECTRONICALLY CONTROLLED TRANSMISSION. THE CURRENT IS THEN OUTPUT TO THE ELECTRONICALLY CONTROLLED TRANSMISSION SOLENOIDS. WHEN SHIFTING TO THE 1ST SPEED, THE CURRENT FLOWS FROM **TERMINAL S1** OF THE ENGINE CONTROL MODULE TO **TERMINAL 1** OF THE ELECTRONICALLY CONTROLLED TRANSMISSION SOLENOID → **GROUND**, AND CONTINUITY TO THE NO. 1 SOLENOID CAUSES THE SHIFT. FOR THE 2ND SPEED, THE CURRENT FLOWS FROM **TERMINAL S1** OF THE ENGINE CONTROL MODULE TO **TERMINAL 1** OF THE ELECTRONICALLY CONTROLLED TRANSMISSION SOLENOID → **GROUND** AND FROM **TERMINALS S2** OF THE ENGINE CONTROL MODULE TO **TERMINAL 2** OF THE ELECTRONICALLY CONTROLLED TRANSMISSION SOLENOID → **GROUND**, AND CONTINUITY TO NO. 1 AND NO. 2 SOLENOIDS CAUSES THE SHIFT. FOR THE 3RD SPEED, THERE IS NO CONTINUITY TO NO. 1 SOLENOID, ONLY TO NO. 2, CAUSING THE SHIFT. SHIFTING INTO THE 4TH SPEED (OVERDRIVE) TAKES PLACE WHEN THERE IS NO CONTINUITY TO EITHER NO. 1 OR NO. 2 SOLENOID.

2. LOCK-UP OPERATION

WHEN THE ENGINE CONTROL MODULE JUDGES FROM EACH SIGNAL THAT LOCK-UP OPERATION CONDITIONS HAVE BEEN MET, THE CURRENT FLOWS FROM **TERMINAL SL** OF THE ENGINE CONTROL MODULE TO **TERMINAL 3** OF THE ELECTRONICALLY CONTROLLED TRANSMISSION SOLENOID → **GROUND**, CAUSING CONTINUITY TO THE LOCK-UP SOLENOID AND CAUSING LOCK-UP OPERATION.

3. STOP LIGHT SW CIRCUIT

IF THE BRAKE PEDAL IS DEPRESSED (STOP LIGHT SW ON) WHEN DRIVING IN LOCK-UP CONDITION, A SIGNAL IS INPUT TO **TERMINAL STP** OF THE ENGINE CONTROL MODULE, AND THE ENGINE CONTROL MODULE OPERATES AND CONTINUITY TO THE LOCK-UP SOLENOID IS CUT.

4. OVERDRIVE CIRCUIT

* O/D MAIN SW ON

WHEN THE O/D MAIN SW IS TURNED IN (SW POINT IS OPEN), A SIGNAL IS INPUT TO **TERMINAL OD2** OF THE ENGINE CONTROL MODULE, AND ENGINE CONTROL MODULE OPERATION CAUSES GEAR SHIFT WHEN THE CONDITIONS FOR OVERDRIVE ARE MET.

* O/D MAIN SW OFF

WHEN THE O/D MAIN SW IS TURNED OFF (SW POINT IS CLOSED). THE CURRENT FROM THE O/D OFF INDICATOR LIGHT FLOWS THROUGH THE O/D MAIN SW TO **GROUND**. CAUSING THE INDICATOR LIGHT TO LIGHT UP. AT THE SAME TIME, A SIGNAL IS INPUT TO **TERMINAL OD2** OF THE ENGINE CONTROL MODULE, AND THE ENGINE CONTROL MODULE OPERATION PREVENTS SHIFT INTO OVERDRIVE.

5. ELECTRONICALLY CONTROLLED TRANSMISSION PATTERN SELECT SW CIRCUIT

IF THE ELECTRONICALLY CONTROLLED TRANSMISSION PATTERN SELECT SW IS CHANGED FROM NORMAL TO POWER, THE CURRENT THROUGH THE POWER INDICATOR FLOWS TO **GROUND**, AND FLOWS TO **TERMINAL PWR** OF THE ENGINE CONTROL MODULE, THE ENGINE CONTROL MODULE OPERATES, AND SHIFT UP AND SHIFT DOWN OCCUR AT HIGHER VEHICLE SPEEDS THAN WHEN THE SW IS IN **2ND** POSITION.

6. TRANSFER SHIFT OPERATION

WHEN THE TRANSFER SHIFT LEVER IS MOVED TO **L4** POSITION, A SIGNAL FROM TRANSFER **L4** POSITION SW IS INPUT TO THE **TERMINAL L4** OF THE ENGINE CONTROL MODULE, THEN SHIFT TO L4 OCCURS.

SERVICE HINTS

E4 (A), E5 (B), E6 (C), E7 (D) ENGINE CONTROL MODULE

STP-GND : **7.5-14.0** VOLTS WITH THE BRAKE PEDAL DEPRESSED
0-1.5 VOLTS WITH THE BRAKE PEDAL RELEASED
TFN-GND : **0-3.0** VOLTS WITH THE TRANSFER POSITION AT **N** POSITION
9.0-14.0 VOLTS WITH THE TRANSFER POSITION AT EXCEPT **N** POSITION
OD2-GND : **0-3.0** VOLTS WITH THE O/D MAIN SW TURNED ON
9.0-14.0 VOLTS WITH THE O/D MAIN SW TURNED OFF
OD1-GND : **9.0-14.0** VOLTS WITH THE IGNITION SW ON
SP2+-SP2- : PULSE GENERATION WITH VEHICLE MOVING
SPD-GND : PULSE GENERATION WITH VEHICLE MOVING
IDL-GND : **0-3.0** VOLTS WITH THE THROTTLE VALVE FULLY CLOSE
9.0-14.0 VOLTS WITH THE THROTTLE VALVE FULLY OPEN
VTA-GND : **3.5-4.5** VOLTS WITH THE THROTTLE VALVE FULLY CLOSE
2.5-3.5 VOLTS WITH THE THROTTLE VALVE FULLY OPEN
2-GND : **7.5-14.0** VOLTS WITH THE SHIFT LEVER AT **2** POSITION
0-1.5 VOLTS WITH THE SHIFT LEVER AT EXCEPT **2** POSITION
L-GND : **7.5-14.0** VOLTS WITH THE SHIFT LEVER AT **L** POSITION
0-1.5 VOLTS WITH THE SHIFT LEVER AT EXCEPT **L** POSITION
R-GND : **7.5-14.0** VOLTS WITH THE SHIFT LEVER AT **R** POSITION
0-1.5 VOLTS WITH THE SHIFT LEVER AT EXCEPT **R** POSITION
PWR-GND : **7.5-14.0** VOLTS WITH THE PATTERN SELECT SW AT **PWR** POSITION
HOLD-GND : **7.5-14.0** VOLTS WITH THE PATTERN SELECT SW AT **2ND** POSITION
L4-GND : **7.5-14.0** VOLTS WITH THE TRANSFER POSITION AT **L4** POSITION
0-1.5 VOLTS WITH THE TRANSFER POSITION AT EXCEPT **L4** POSITION

E2 ELECTRONICALLY CONTROLLED TRANSMISSION SOLENOID

1, 2, 3-GROUND : **11-15** Ω

E9 ELECTRONICALLY CONTROLLED TRANSMISSION PATTERN SELECT SW

3-6 : CLOSED WITH THE ELECTRONICALLY CONTROLLED TRANSMISSION PATTERN SELECT SW AT **PWR** POSITION

04 O/D MAIN SW

2-4 : OPEN WITH THE O/D MAIN SW AT **ON** POSITION
CLOSED WITH THE O/D MAIN SW AT **OFF** POSITION

AND A/T INDICATOR

: PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
A4		22	E7	D	24	J7	25
C12	C	24	E9		26	O4	27
C13	D	24	F6	A	22	P1	23
C18		24	F7	B	22	S12	25
E1		22	F8	C	22	S18	25
E2		22	F11		25	T1	23
E3		22	I12		25	T3	23
E4	A	24	J1		25	T6	25
E5	B	24	J4		25	V2	23
E6	C	24	J6		25		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		
EB1	30	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE DISTRIBUTOR)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EC2		
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IG3		
II1	33	COWL WIRE AND SECURITY WIRE (LEFT LICK PANEL)
II2	33	SECURITY WIRE AND COWL WIRE (LEFT KICK PANEL)
IL1	34	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IL2		


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	FRONT SIDE OF LEFT FENDER
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E16	30	ENGINE WIRE	I7	34	COWL WIRE
E18			I10		
E20			I12		
I4	34	COWL WIRE	I13	34	ENGINE WIRE
I5	34	SECURITY WIRE	I19		
I6	34	COWL WIRE			


A 4

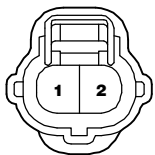


C12 (C) BROWN

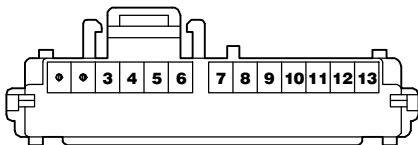

C13 (D)

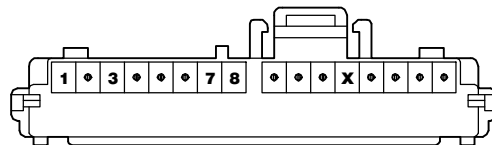

C18 GRAY

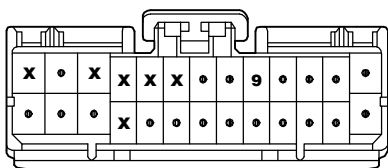

E 1 DARK GRAY




E 2 BLACK




E 3 GREEN




E 4 (A) DARK GRAY

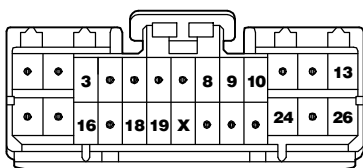


E 5 (B) DARK GRAY

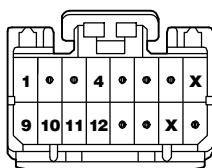


E 6 (C) DARK GRAY

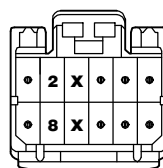


E 7 (D) DARK GRAY

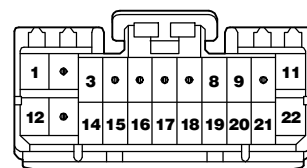

E 9

 

F 6 (A), F 8 (C)

 


F 7 (B) GRAY




F11

(SEE PAGE 20)

H2 BLACK

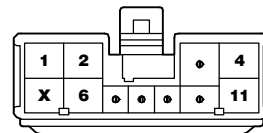


J 1

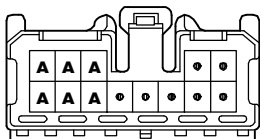


(HINT : SEE PAGE 7)

J 4

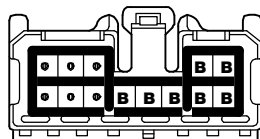

(HINT : SEE PAGE 7)


J 6

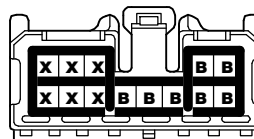

(HINT : SEE PAGE 7)


AND A/T INDICATOR

 J 7 BLUE




(HINT : SEE PAGE 7)

 
O 4 BLUE




P 1 GRAY

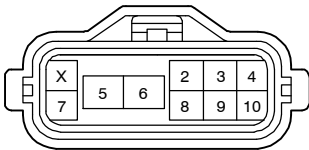

S12 BLACK

 


S18 BLACK

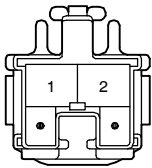


T 1 BLACK



T 3 GRAY

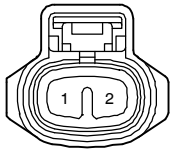

T 6

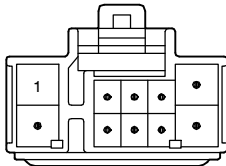

V 2 BLACK

