


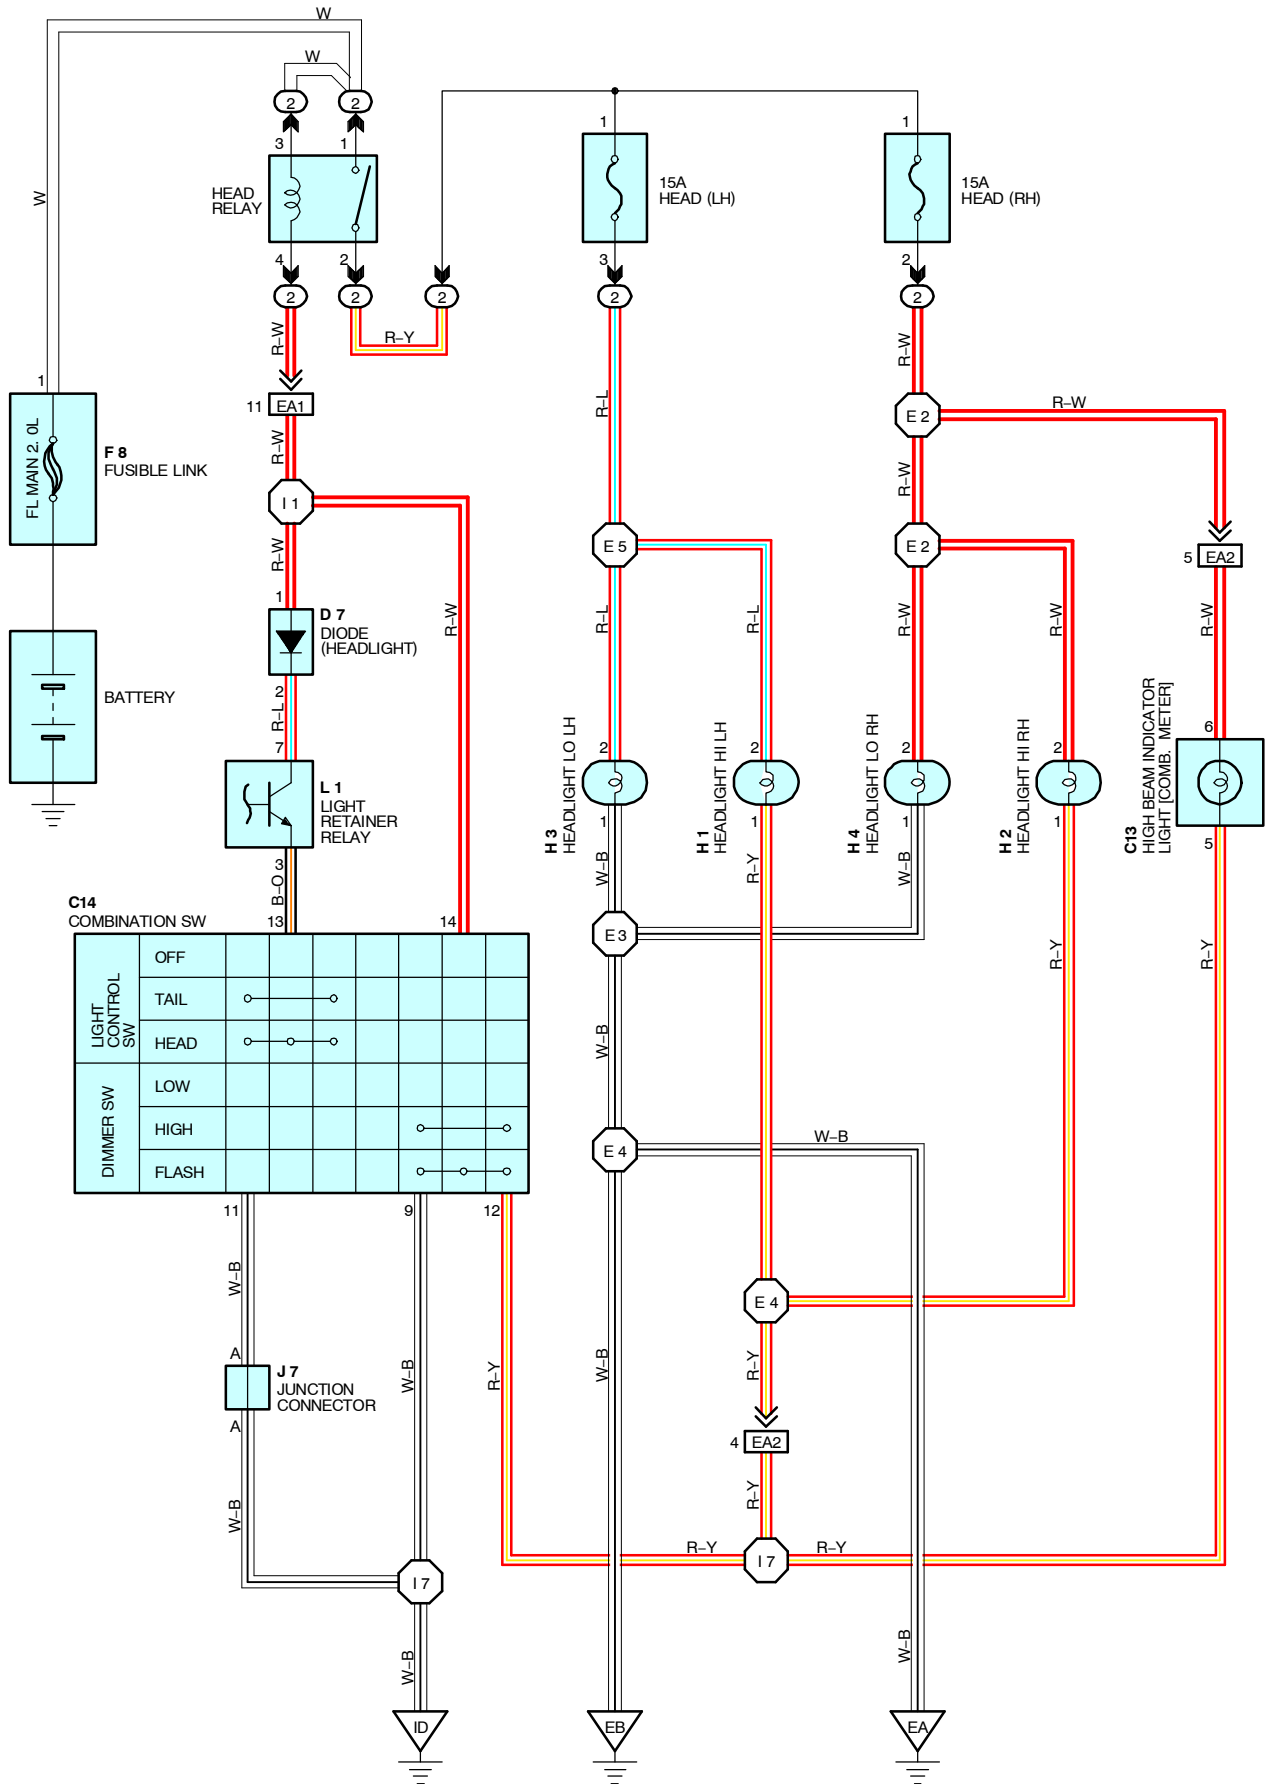

HEADLIGHT (USA)



SERVICE HINTS

HEAD RELAY

(2)1-(2)2:CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

C14 LIGHT CONTROL SW [COMB. SW]

13-11 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION

C14 DIMMER SW [COMB. SW]

14-9 : CLOSED WITH THE DIMMER SW AT **FLASH** POSITION

12-9 : CLOSED WITH THE DIMMER SW AT **HIGH** OR **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	24	H1	22	J7	25
C14	24	H2	22	L1	25
D7	24	H3	22		
F8	22	H4	22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
ID	32	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E2	30	ENGINE ROOM MAIN WIRE	E5	30	ENGINE ROOM MAIN WIRE
E3			I1	34	COWL WIRE
E4			I7		


C13

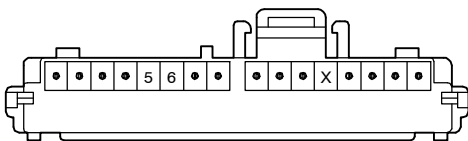


C14 BLACK

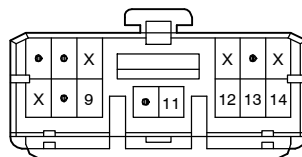

D 7 ORANGE

 

F 8

 


H 1, H 2 BLACK




H 3, H 4 BROWN



 J 7 BLUE



L 1

 

(HINT : SEE PAGE 7)