



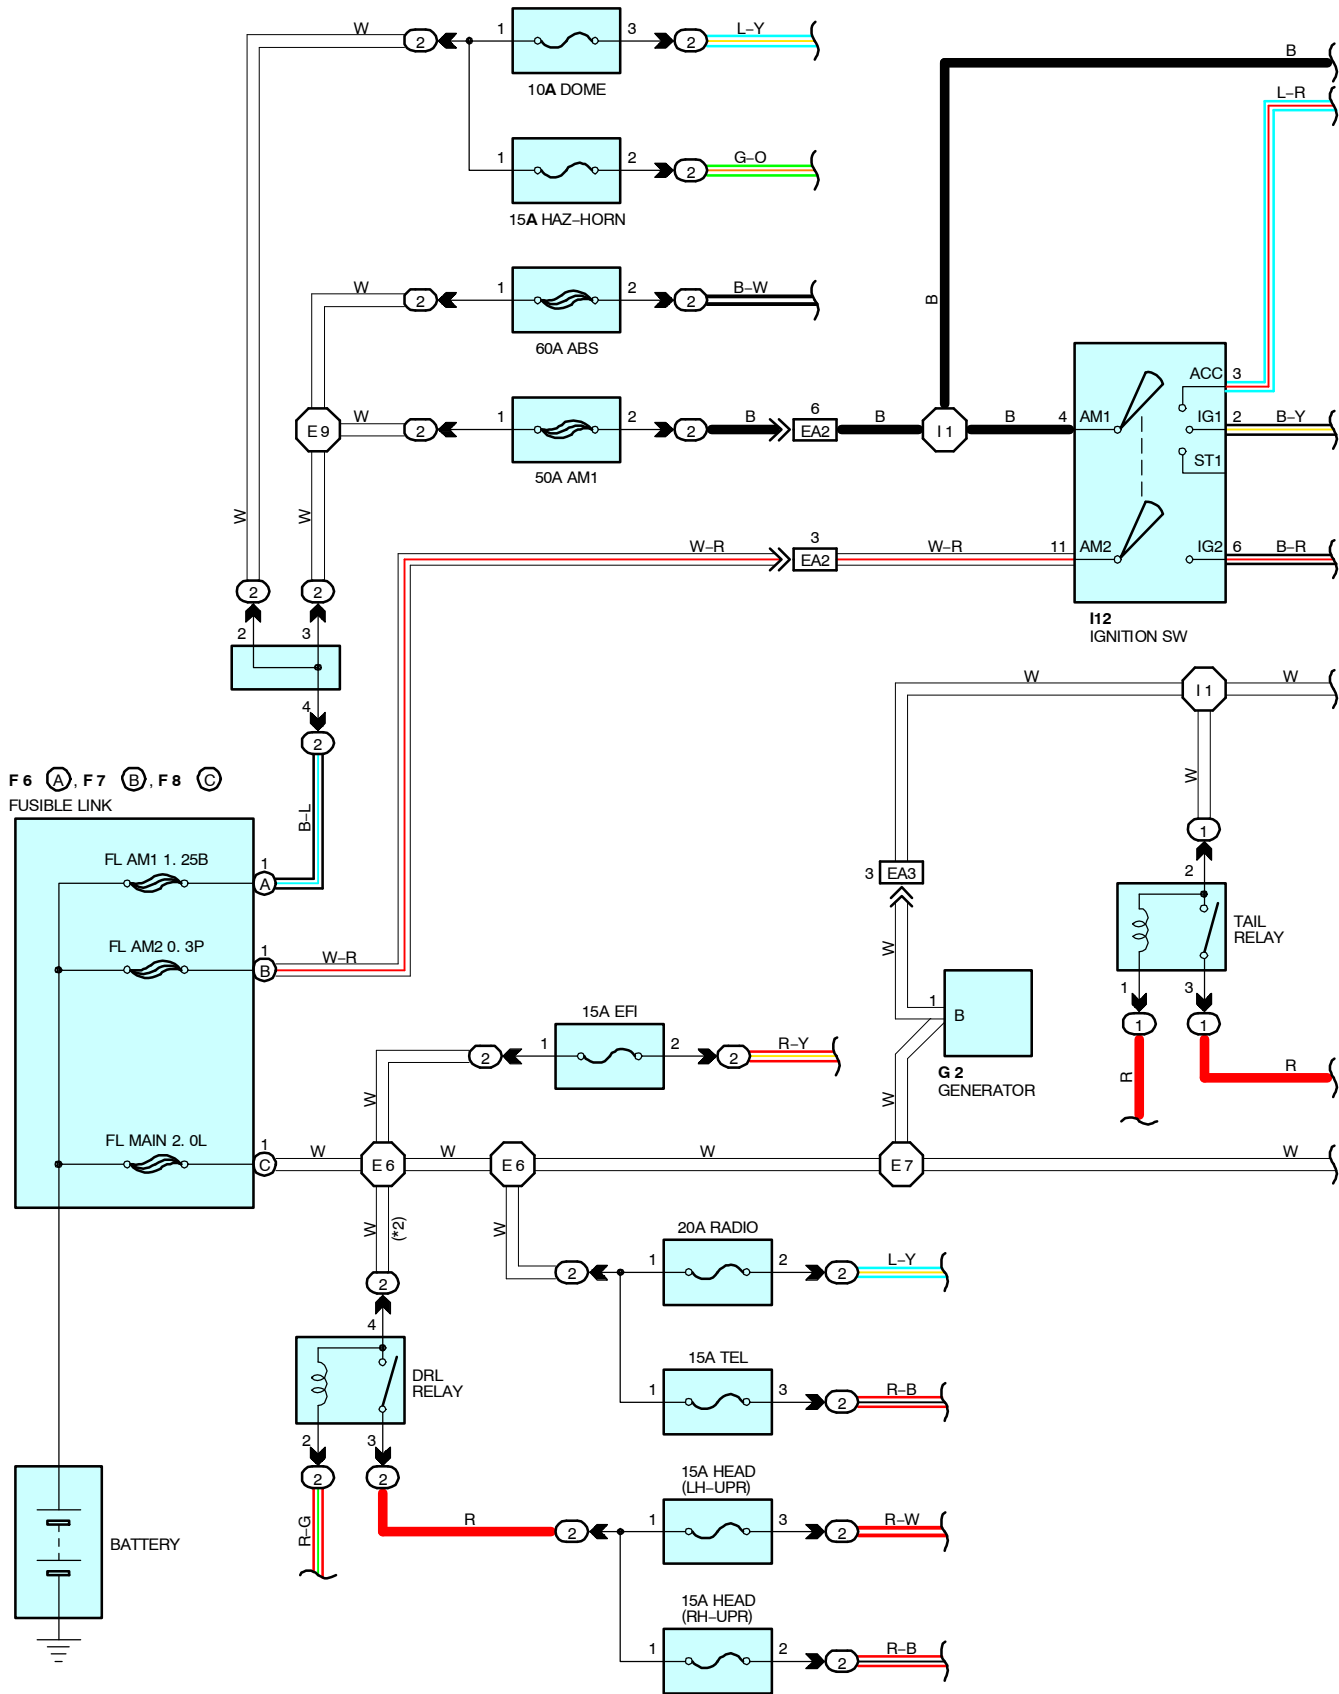

POWER SOURCE

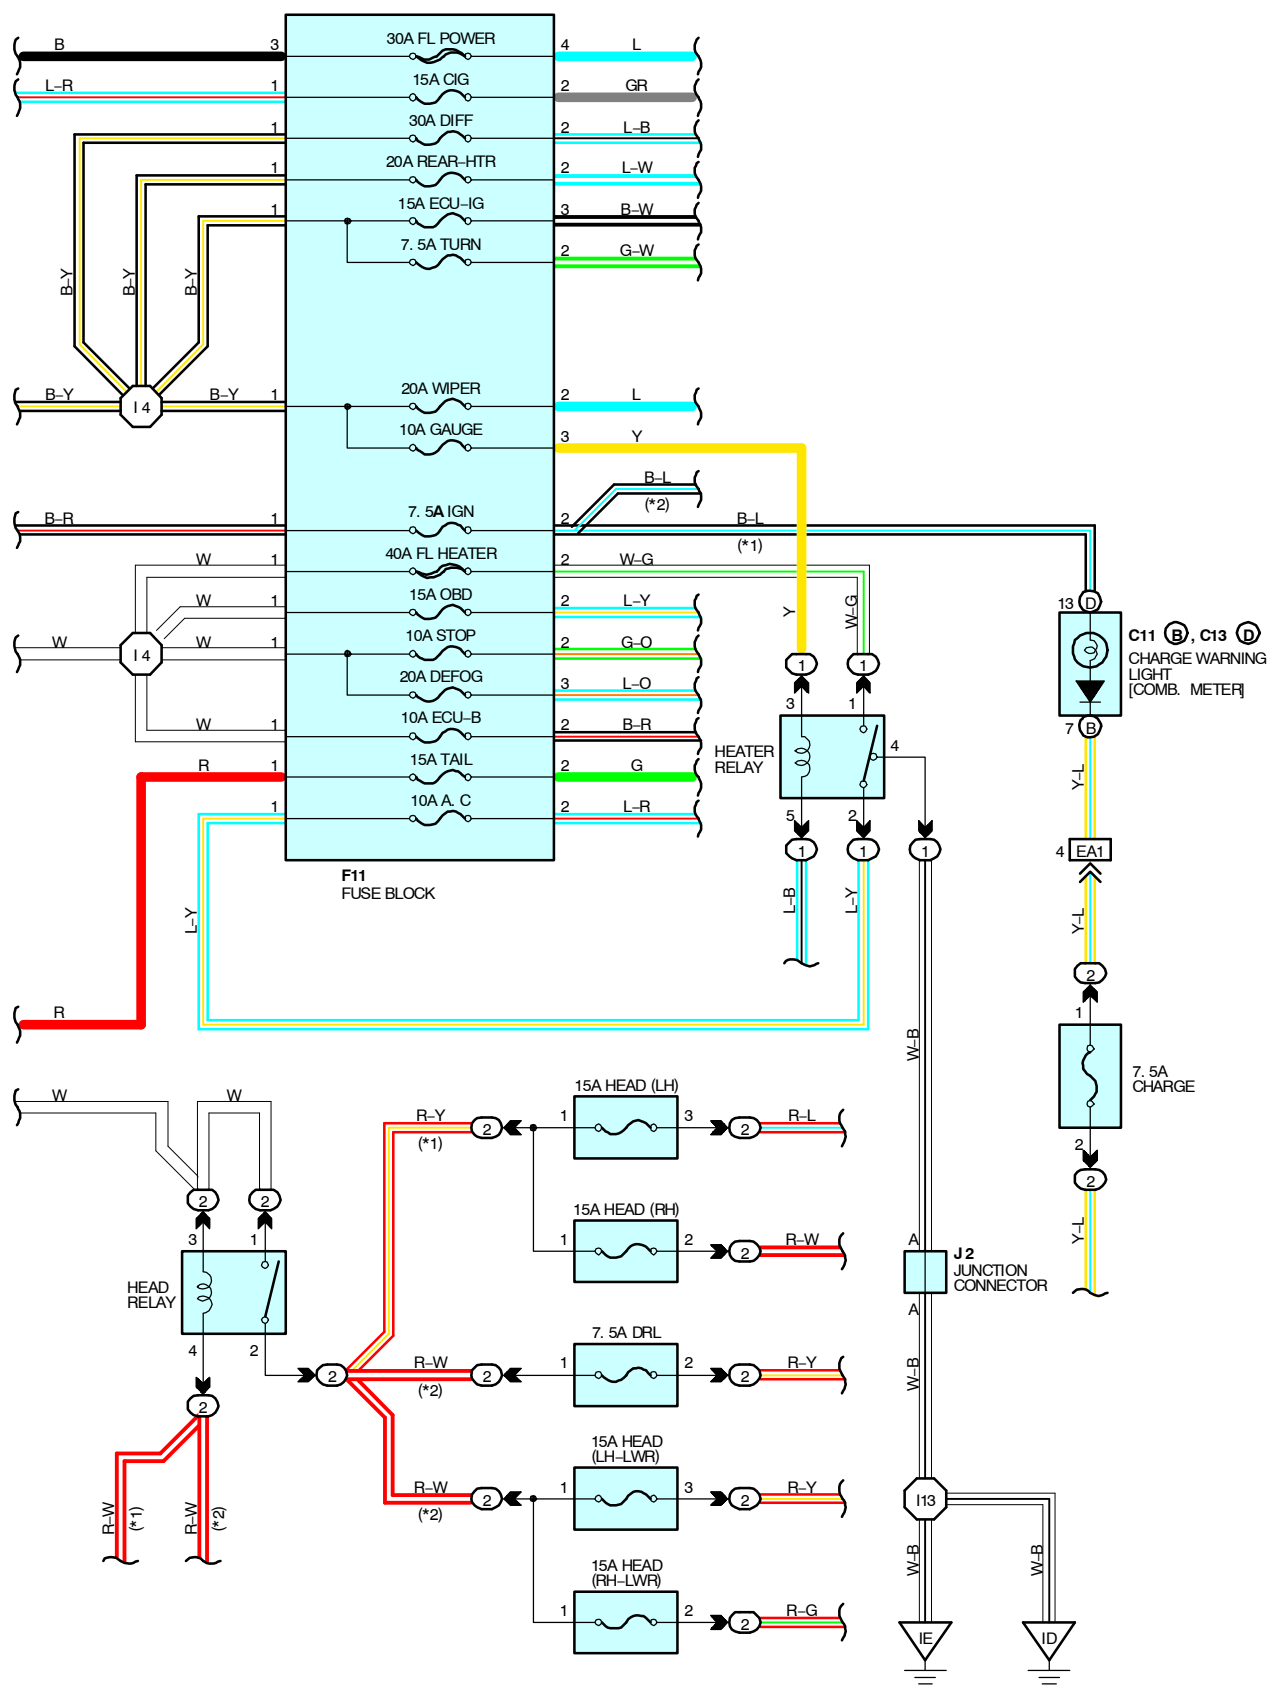

* 1 : USA
* 2 : CANADA





POWER SOURCE

SERVICE HINTS

HEAD RELAY (USA)

(2) 1- (2) 2 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION (WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

HEAD RELAY (CANADA)

(2) 1- (2) 2 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION (WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)
: CLOSED WITH THE ENGINE RUNNING AND THE PARKING BRAKE LEVER RELEASED (PARKING BRAKE SW OFF)

I12 IGNITION SW

4-3 : CLOSED WITH THE IGNITION SW AT **ACC** OR **ON** POSITION
4-2 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION
11-6 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION

TAIL RELAY

(1) 2- (1) 3: CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	B	24	F 7	B	22
C13	D	24	F 8	C	22
F 6	A	22	F11		25
				J 2	25

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		
EA3		


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6	30	ENGINE ROOM MAIN WIRE	I 1	34	COWL WIRE
E 7			I 4		
E 9			I13		


C1  BLUE

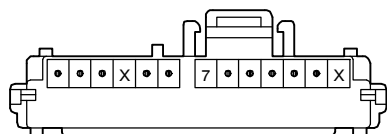

C13 

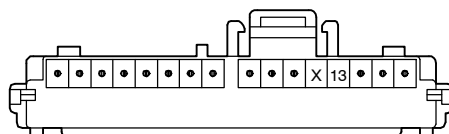

F6  F8 

 


F 7  GRAY




F11

(SEE PAGE 20)

 
G 2



I12 BLACK

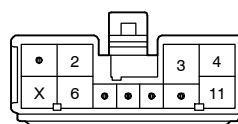

J 2 BLUE

 

(HINT : SEE PAGE 7)

