


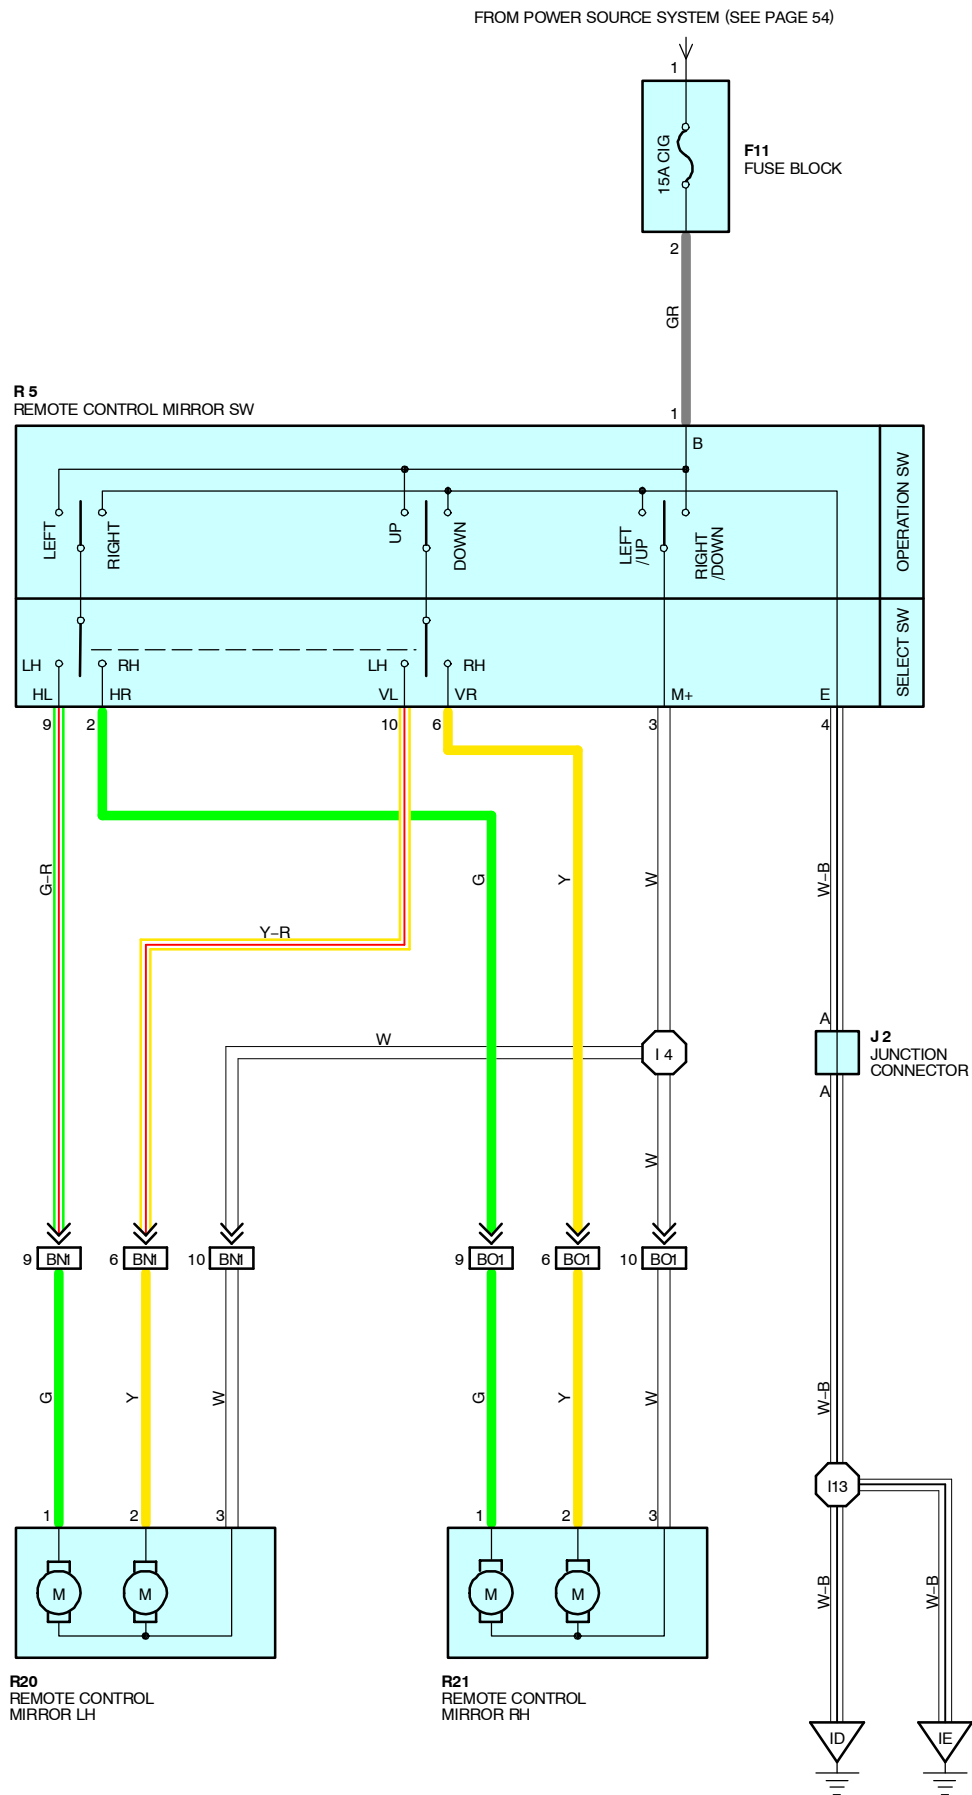

REMOTE CONTROL MIRROR



SERVICE HINTS

R 5 REMOTE CONTROL MIRROR SW

- 1-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION
- 3-4 : CONTINUITY WITH THE OPERATION SW AT **UP** OR **LEFT** POSITION
- 9-4 : CONTINUITY WITH THE OPERATION SW AT **RIGHT** POSITION AND THE SELECT SW AT **LH** POSITION
- 10-4 : CONTINUITY WITH THE OPERATION SW AT **DOWN** POSITION AND THE SELECT SW AT **LH** POSITION
- 2-4 : CONTINUITY WITH THE OPERATION SW AT **RIGHT** POSITION AND THE SELECT SW AT **RH** POSITION
- 6-4 : CONTINUITY WITH THE OPERATION SW AT **DOWN** POSITION AND THE SELECT SW AT **RH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	R 5	25	R21	27
J 2	25	R20	27		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BN1	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 4	34	COWL WIRE	I13	34	COWL WIRE

F11
(SEE PAGE 20)

