



SERVICE HINTS

R3 REAR HEATER SW

- 2-1 : CLOSED WITH THE IGNITION SW AT ON AND REAR HEATER SW AT **LO** POSITION
 4-1 : CLOSED WITH THE IGNITION SW AT ON AND REAR HEATER SW AT **HI** POSITION

R14 REAR HEATER RELAY

- 4-1 : CLOSED WITH THE IGNITION SW AT **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	J 7	25	R13	27
J4	25	R3	25	R14	27

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IM2	34	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BQ1	36	FLOOR NO. 2 WIRE AND FLOOR WIRE (UNDER THE CENTER CONSOLE)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B19	38	FLOOR NO. 2 WIRE			

F11
 (SEE PAGE 20)

