



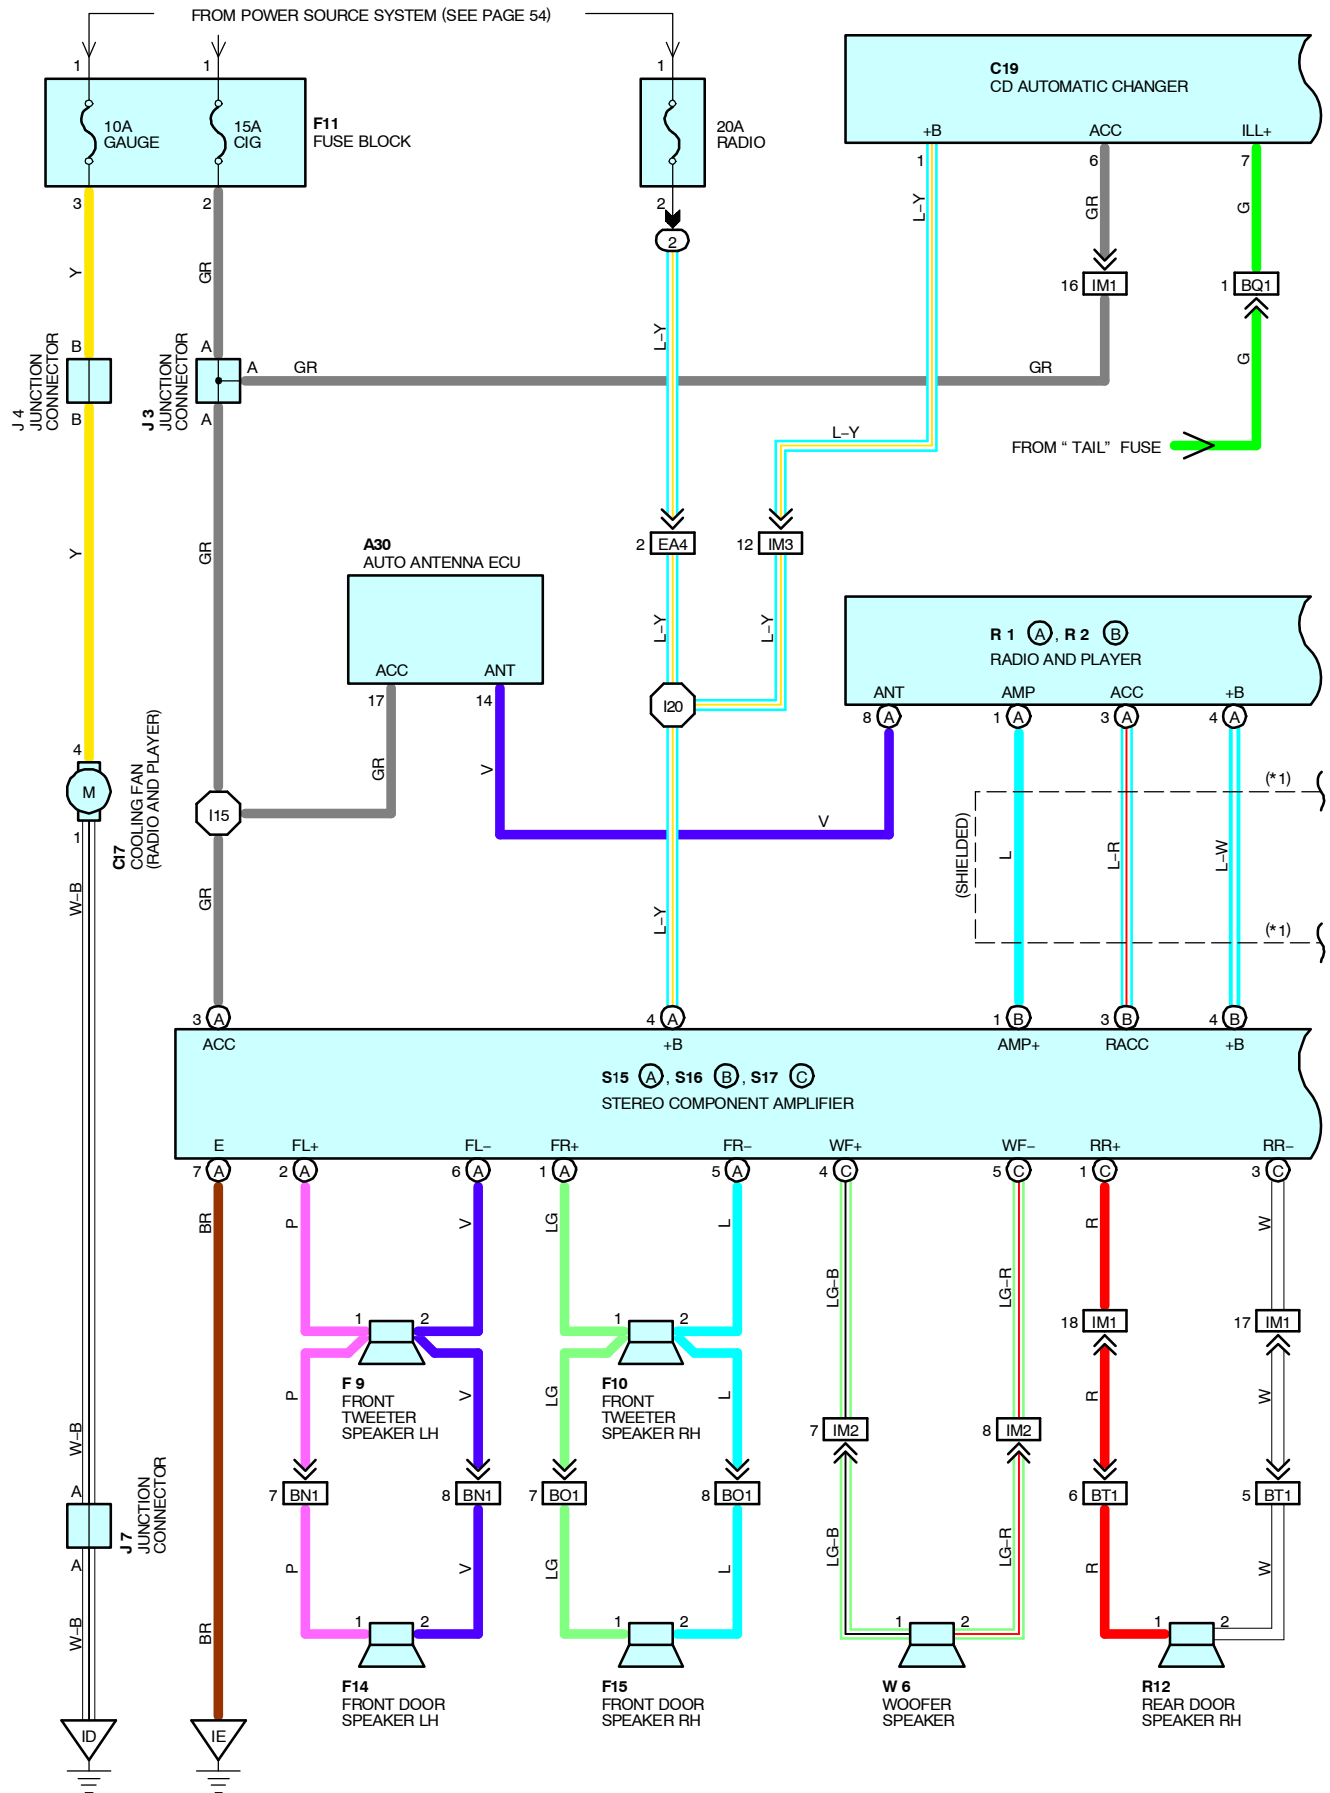

RADIO AND PLAYER



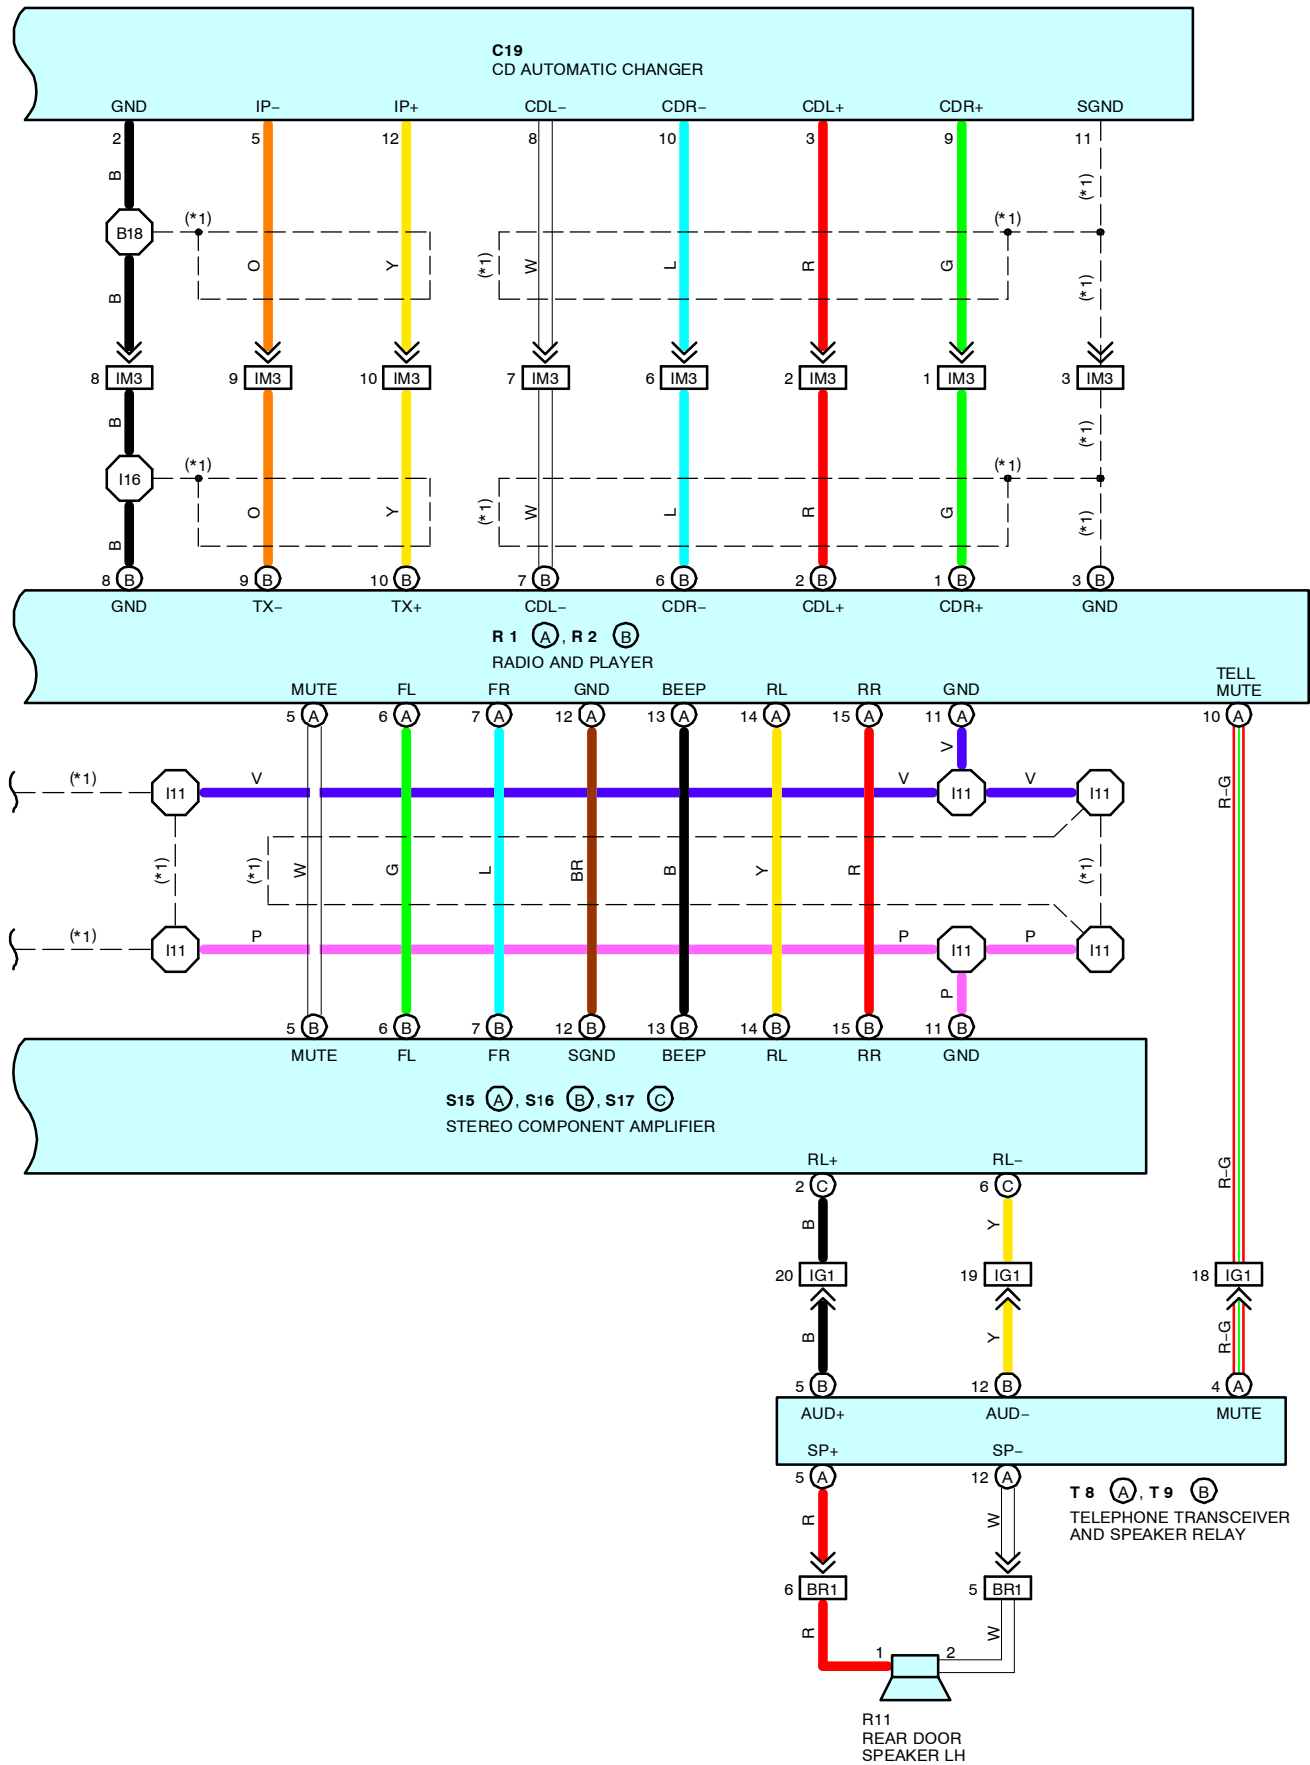



RADIO AND PLAYER

SERVICE HINTS

C19 CD AUTOMATIC CHANGER

1-GROUND : ALWAYS APPROX. 12 VOLTS

6-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** OR **ACC** POSITION

S15 (A) STEREO COMPONENT AMPLIFIER

(A) 3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A30	24	F15	26	R12	27
C17	24	J 3	25	S15	A 25
C19	26	J 4	25	S16	B 25
F 9	25	J 7	25	S17	C 25
F10	25	R1	A 25	T 8	A 27
F11	25	R2	B 25	T 9	B 27
F14	26	R11	27	W 6	27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS






CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA4	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
IG1	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IM1	34	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
IM2		
IM3		
BN1	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BQ1	36	FLOOR NO. 2 WIRE AND FLOOR WIRE (UNDER THE CENTER CONSOLE)
BR1	36	REAR DOOR LH WIRE AND FLOOR WIRE (LEFT CENTER PILLAR)
BT1	36	REAR DOOR RH WIRE FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I11	34	COWL WIRE	I20	34	ENGINE WIRE
I15			B18	38	FLOOR NO. 2 WIRE
I16					

 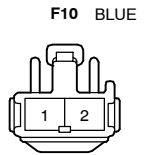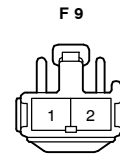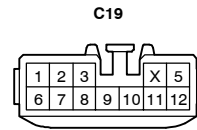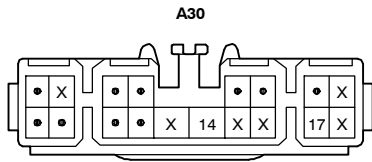

F11
(SEE PAGE 20)

