




STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

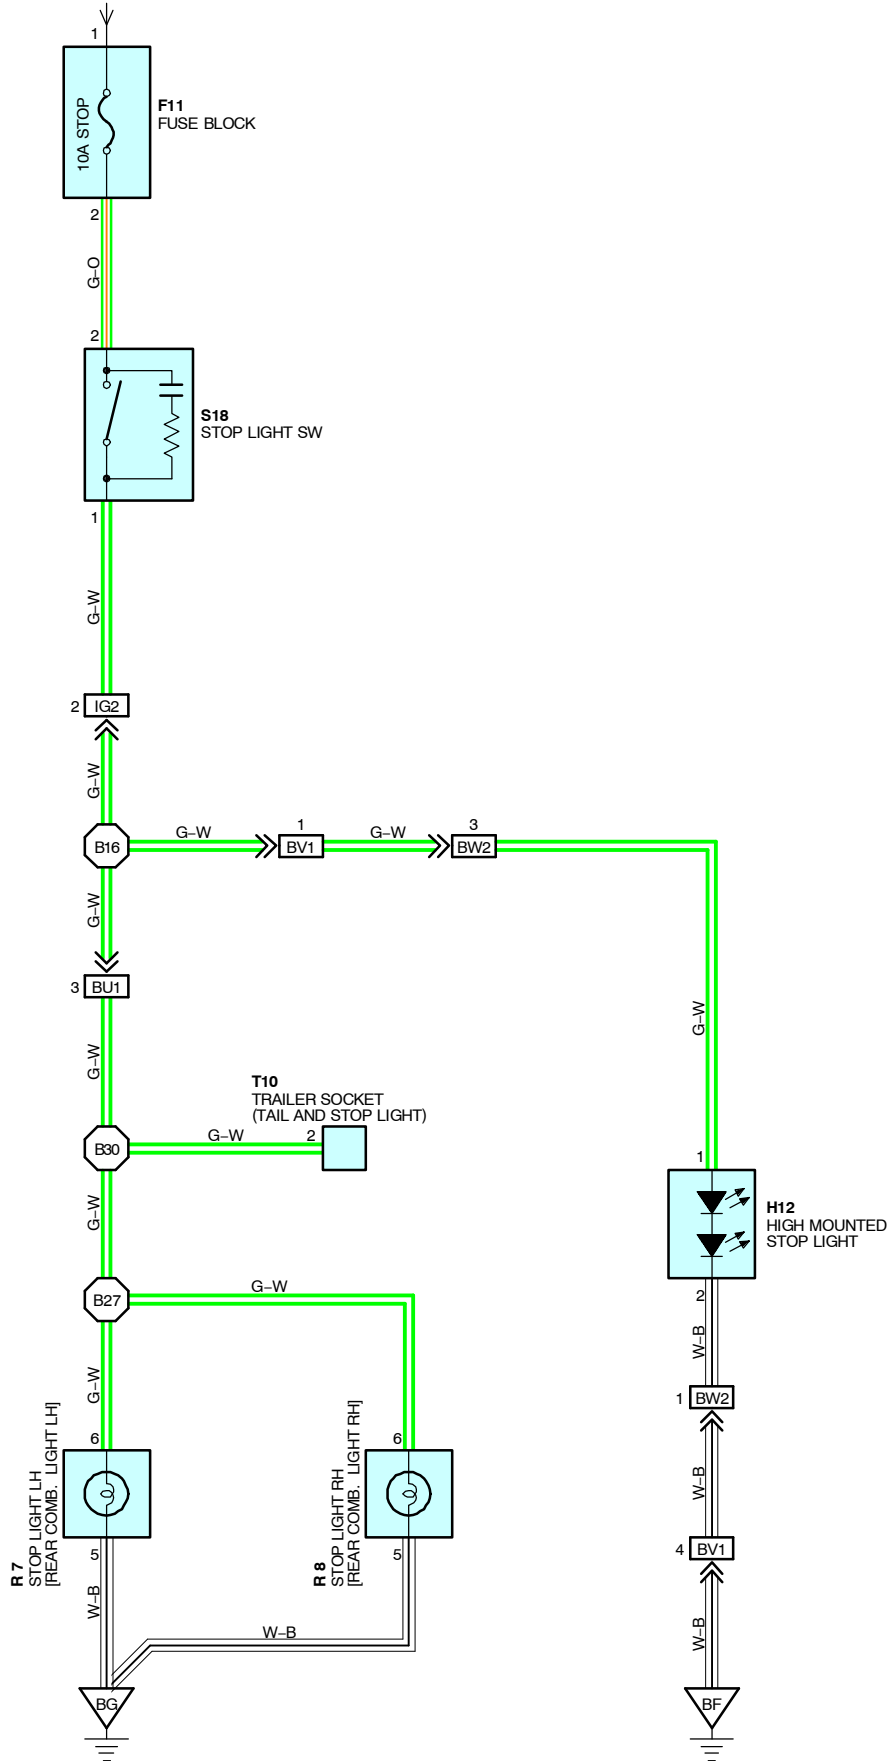

SERVICE HINTS**S18 STOP LIGHT SW**

2-1 : CLOSED WITH THE BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	R 7	27	S18	25
H12	26	R 8	27	T10	27

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
BU1	36	FLOOR NO. 3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BV1	36	LUGGAGE ROOM NO. 1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BW2	36	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO.1 WIRE (LEFT REAR SIDE OF ROOF)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BF	36	UNDER THE CENTER CONSOLE BOX
BG	36	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B16	38	FLOOR WIRE	B30	38	FLOOR NO. 3 WIRE
B27	38	FLOOR NO. 3 WIRE			

F11**H12****R 7, R 8****S18 BLACK****T10 BLACK**

(SEE PAGE 20)

