



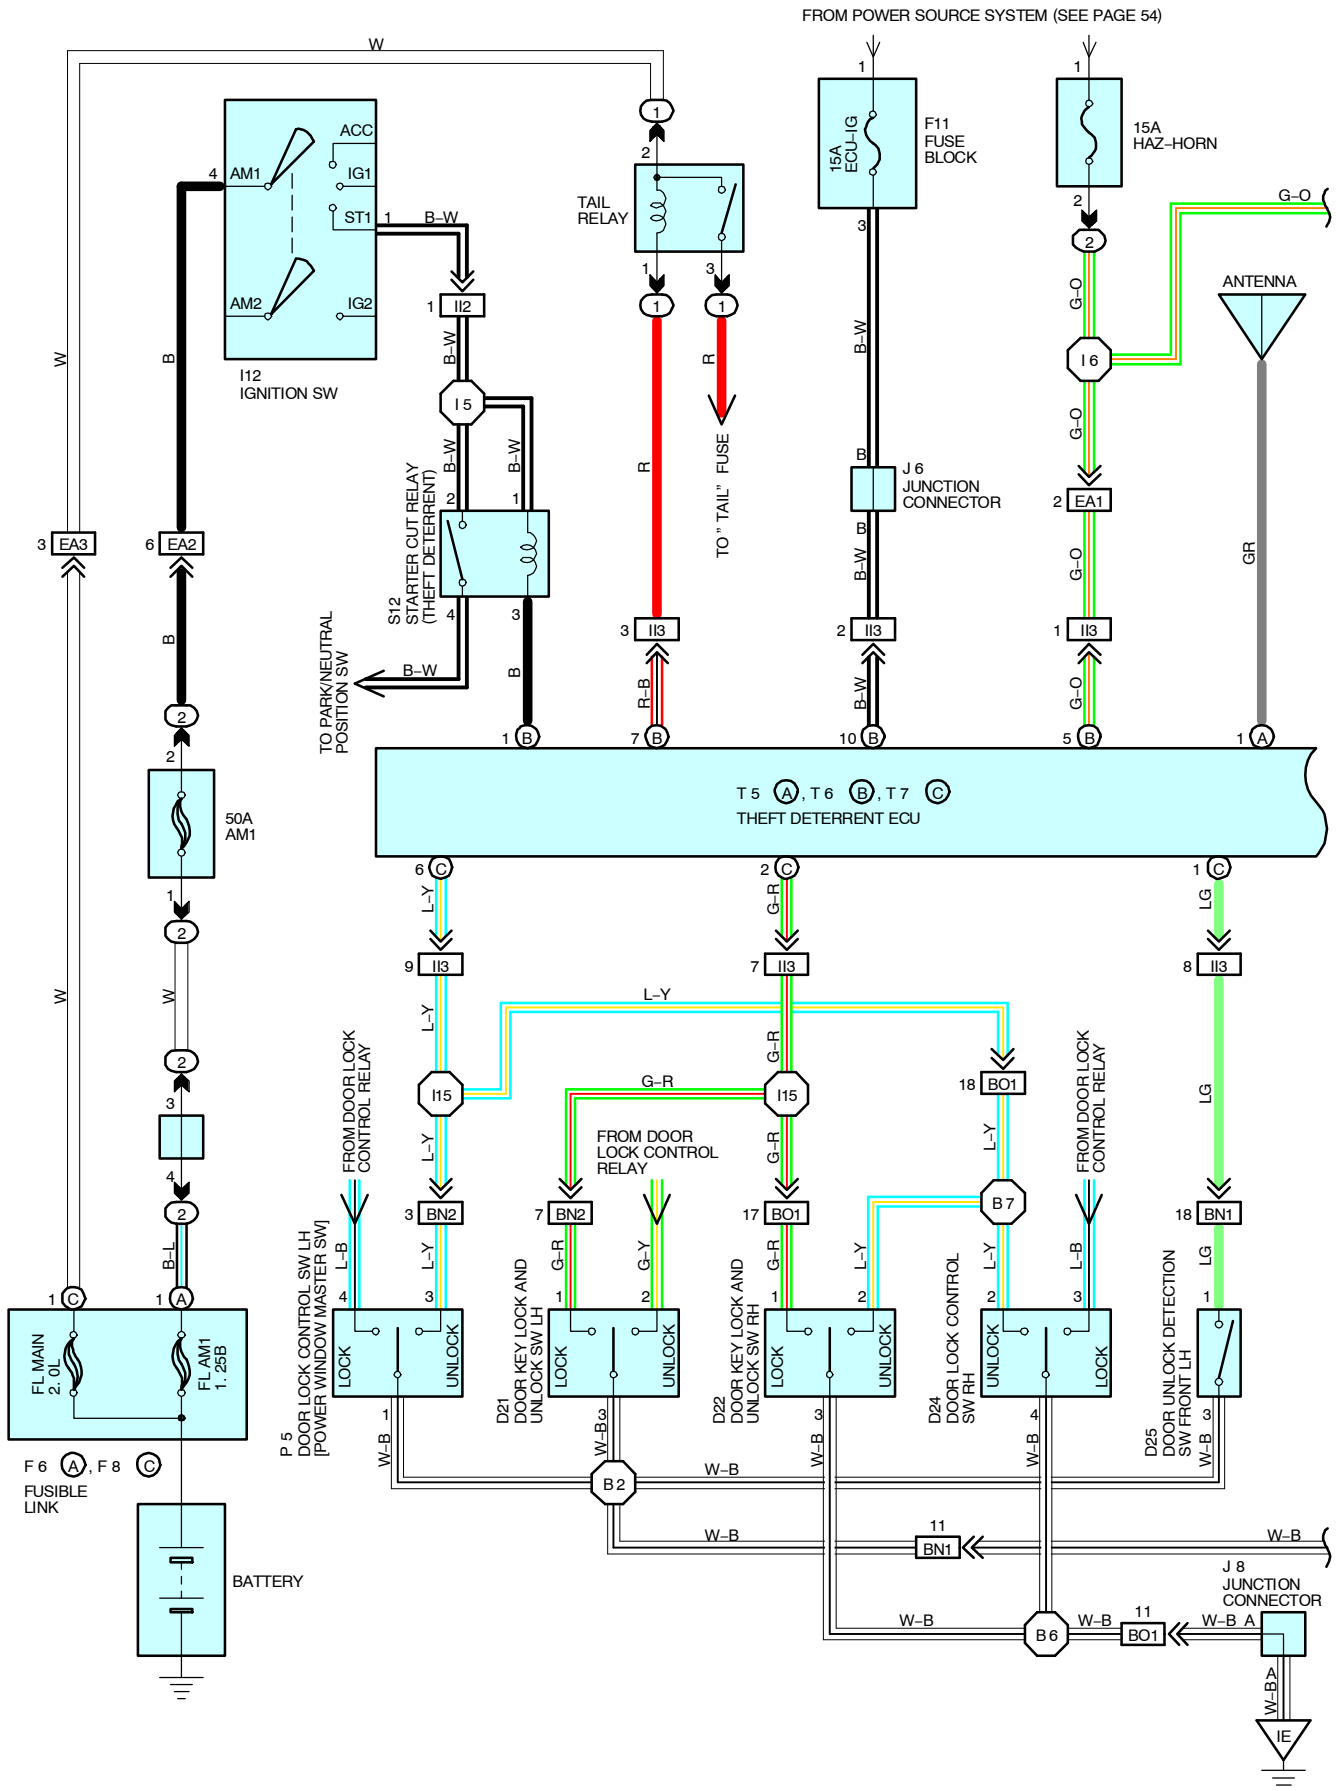

THEFT DETERRENT





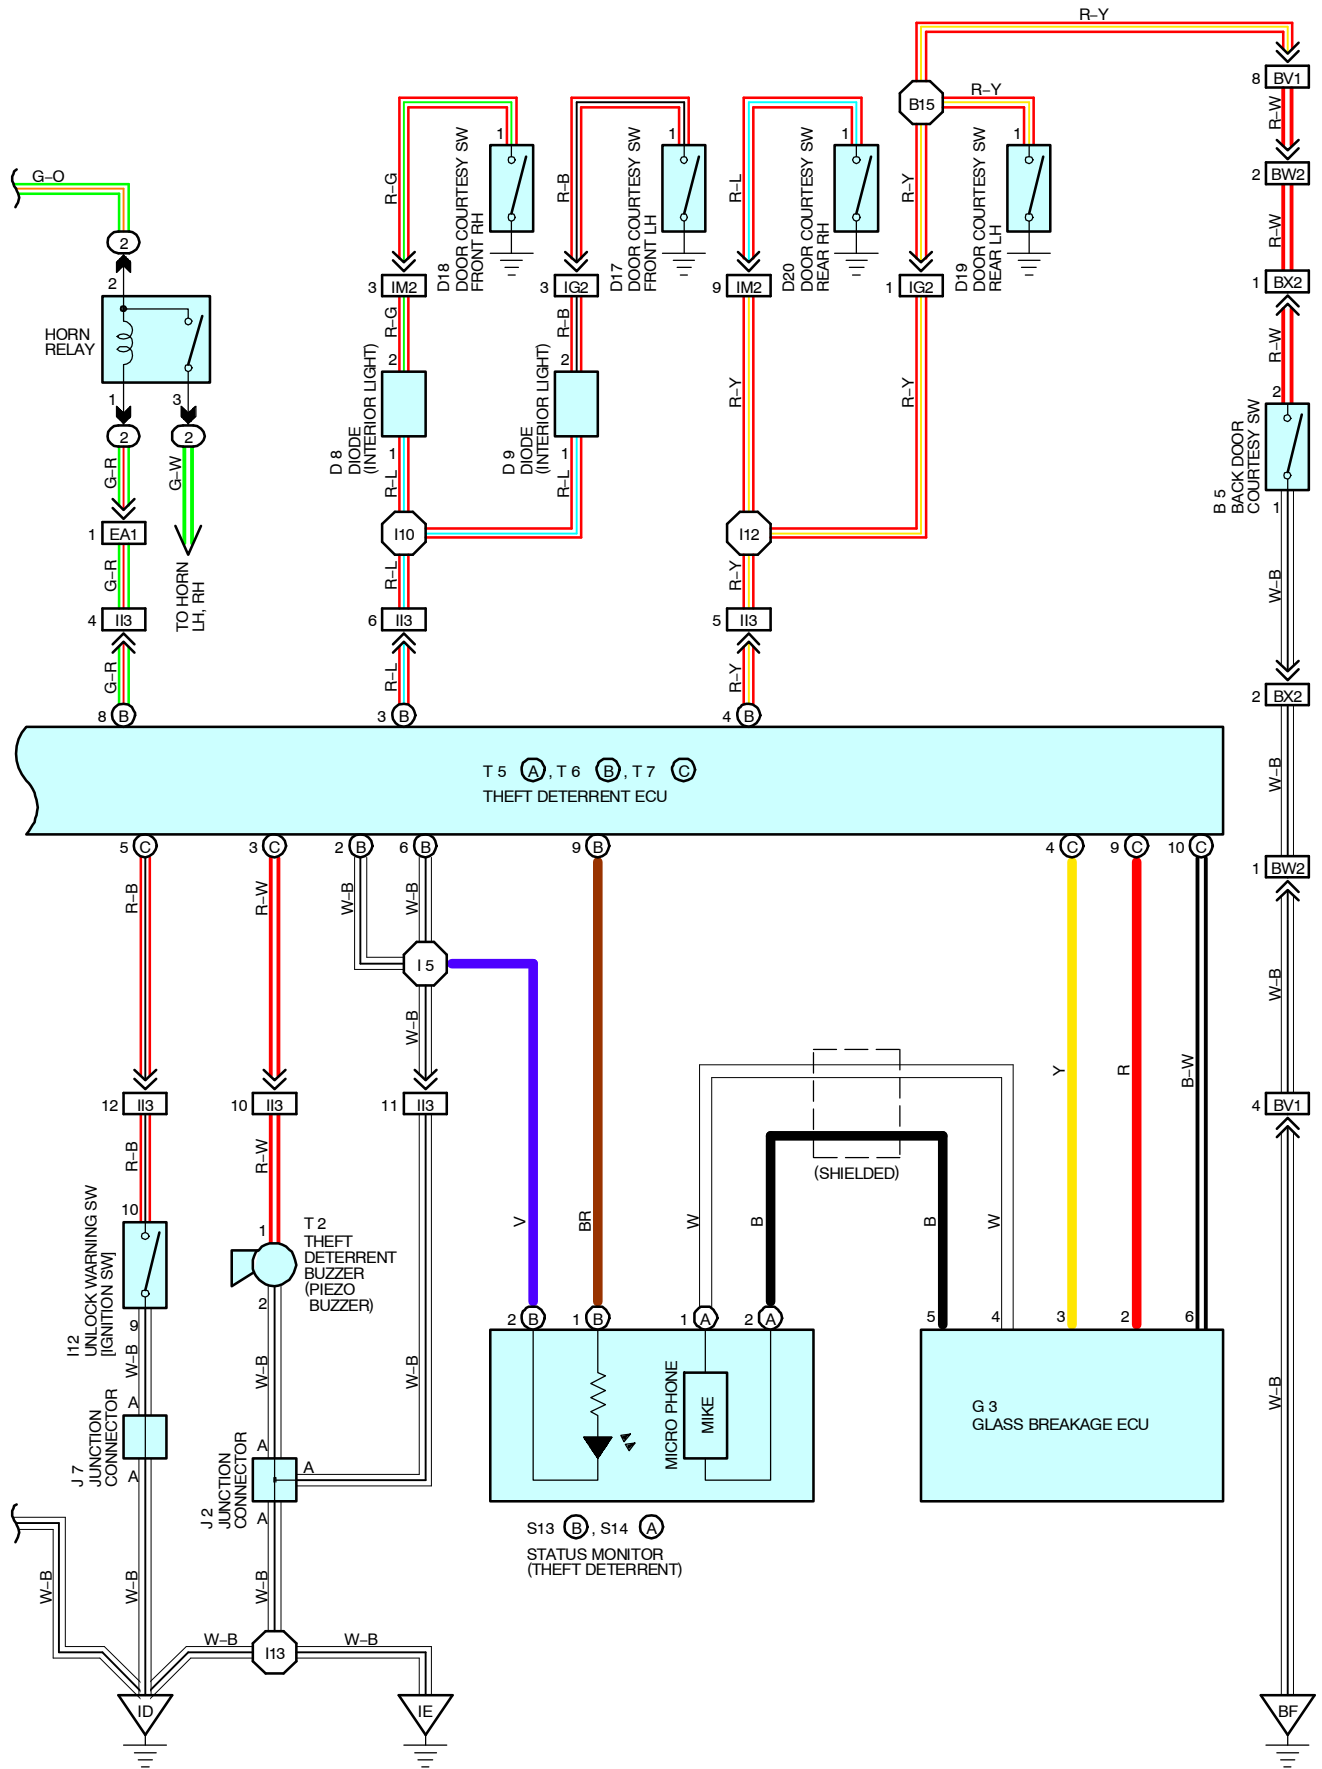

THEFT DETERRENT

SERVICE HINTS

B5 BACK DOOR COURTESY SW

2-1 : CLOSED WITH THE BACK DOOR OPENED

D17, D18, D19, D20 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND : CONTINUITY WITH EACH OF THE DOOR OPENED

D21, D22 DOOR KEY LOCK AND UNLOCK SW LH, RH

2-3 : CLOSED WITH THE DOOR KEY CYLINDER UNLOCKED WITH THE KEY

1-3 : CLOSED WITH THE DOOR KEY CYLINDER LOCKED WITH THE KEY

D24 DOOR LOCK CONTROL SW RH

3-4 : CLOSED WITH THE DOOR LOCK CONTROL SW RH AT **UNLOCK** POSITION

2-4 : CLOSED WITH THE DOOR LOCK CONTROL SW RH AT **LOCK** POSITION

D25 DOOR UNLOCK DETECTION SW FRONT LH

1-3 : CLOSED WITH THE DOOR UNLOCK DETECTION SW LH AT **UNLOCK** POSITION

P5 DOOR LOCK CONTROL SW LH [POWER WINDOW MASTER SW]

3-1 : CLOSED WITH THE DOOR LOCK CONTROL SW AT **UNLOCK** POSITION

4-1 : CLOSED WITH THE DOOR LOCK CONTROL SW AT **LOCK** POSITION

T5 (A), T6 (B), T7 (C) THEFT DETERRENT ECU

(B) 1-GROUND : APPROX. **12** VOLTS WITH THE IGNITION SW AT **ST** POSITION

(B) 3-GROUND : APPROX. **12** VOLTS WITH THE FRONT DOOR LH OR RH OPENED

(B) 4-GROUND : APPROX. **12** VOLTS WITH THE REAR DOOR LH, RH OR BACK DOOR OPENED OR BACK DOOR LOCK AT **UNLOCK** POSITION

(B) 10-GROUND : APPROX. **12** VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

(C) 1-GROUND : CONTINUITY WITH THE FRONT DOOR TO **UNLOCK** POSITION

(C) 2-GROUND : CONTINUITY WITH THE DOOR KEY CYLINDER LOCKED WITH THE KEY

(C) 6-GROUND : CONTINUITY WITH THE DOOR LOCK CONTROL SW LH OR RH TO **UNLOCK** POSITION OR FRONT DOOR RH KEY CYLINDER UNLOCKED WITH THE KEY

(B) 2, (B) 6-GROUND : ALWAYS CONTINUITY

(B) 5, (B) 7, (B) 8-GROUND : ALWAYS APPROX. **12** VOLTS

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B5	26	D25	26	P5	27
D8	24	F6 A	22	S12	25
D9	24	F8 C	22	S13 B	25
D17	26	F11	25	S14 A	25
D18	26	G3	25	T2	23
D19	26	I12	25	T5 A	25
D20	26	J2	25	T6 B	25
D21	26	J6	25	T7 C	25
D22	26	J7	25		
D24	26	J8	25		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		
EA3		
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
II2	32	SECURITY WIRE AND COWL WIRE (LEFT KICK PANEL)
II3	32	COWL WIRE AND SECURITY WIRE (LEFT KICK PANEL)
IM2	34	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BN1	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BN2		
BO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BV1	36	LUGGAGE ROOM NO. 1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BW2	36	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BX2	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I5	34	SECURITY WIRE	I15	34	COWL WIRE
I6	34	COWL WIRE	B2	38	FRONT DOOR LH WIRE
I10			B6	38	FRONT DOOR RH WIRE
I12			B7	38	
I13			B15	38	FLOOR WIRE

B 5



D 8, D 9



GRAY

D17, D18,
D19, D20



BLUE

D21, D22



 
D24



D25




F 6 (A), F 8 (C)




F11

(SEE PAGE 20)

 
G 3



I12 BLACK

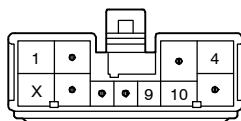


J 2, J 7, J 8 BLUE

 


(HINT : SEE PAGE 7)

 J 6




(HINT : SEE PAGE 7)

 P 5




S12 BLACK

 


S13 (B), S14 (A)




T 2

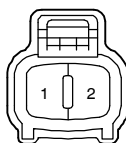

T 5 (A)

 

T 6 (B)

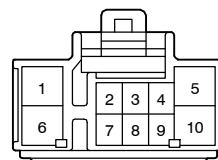

T 7 (C)

