


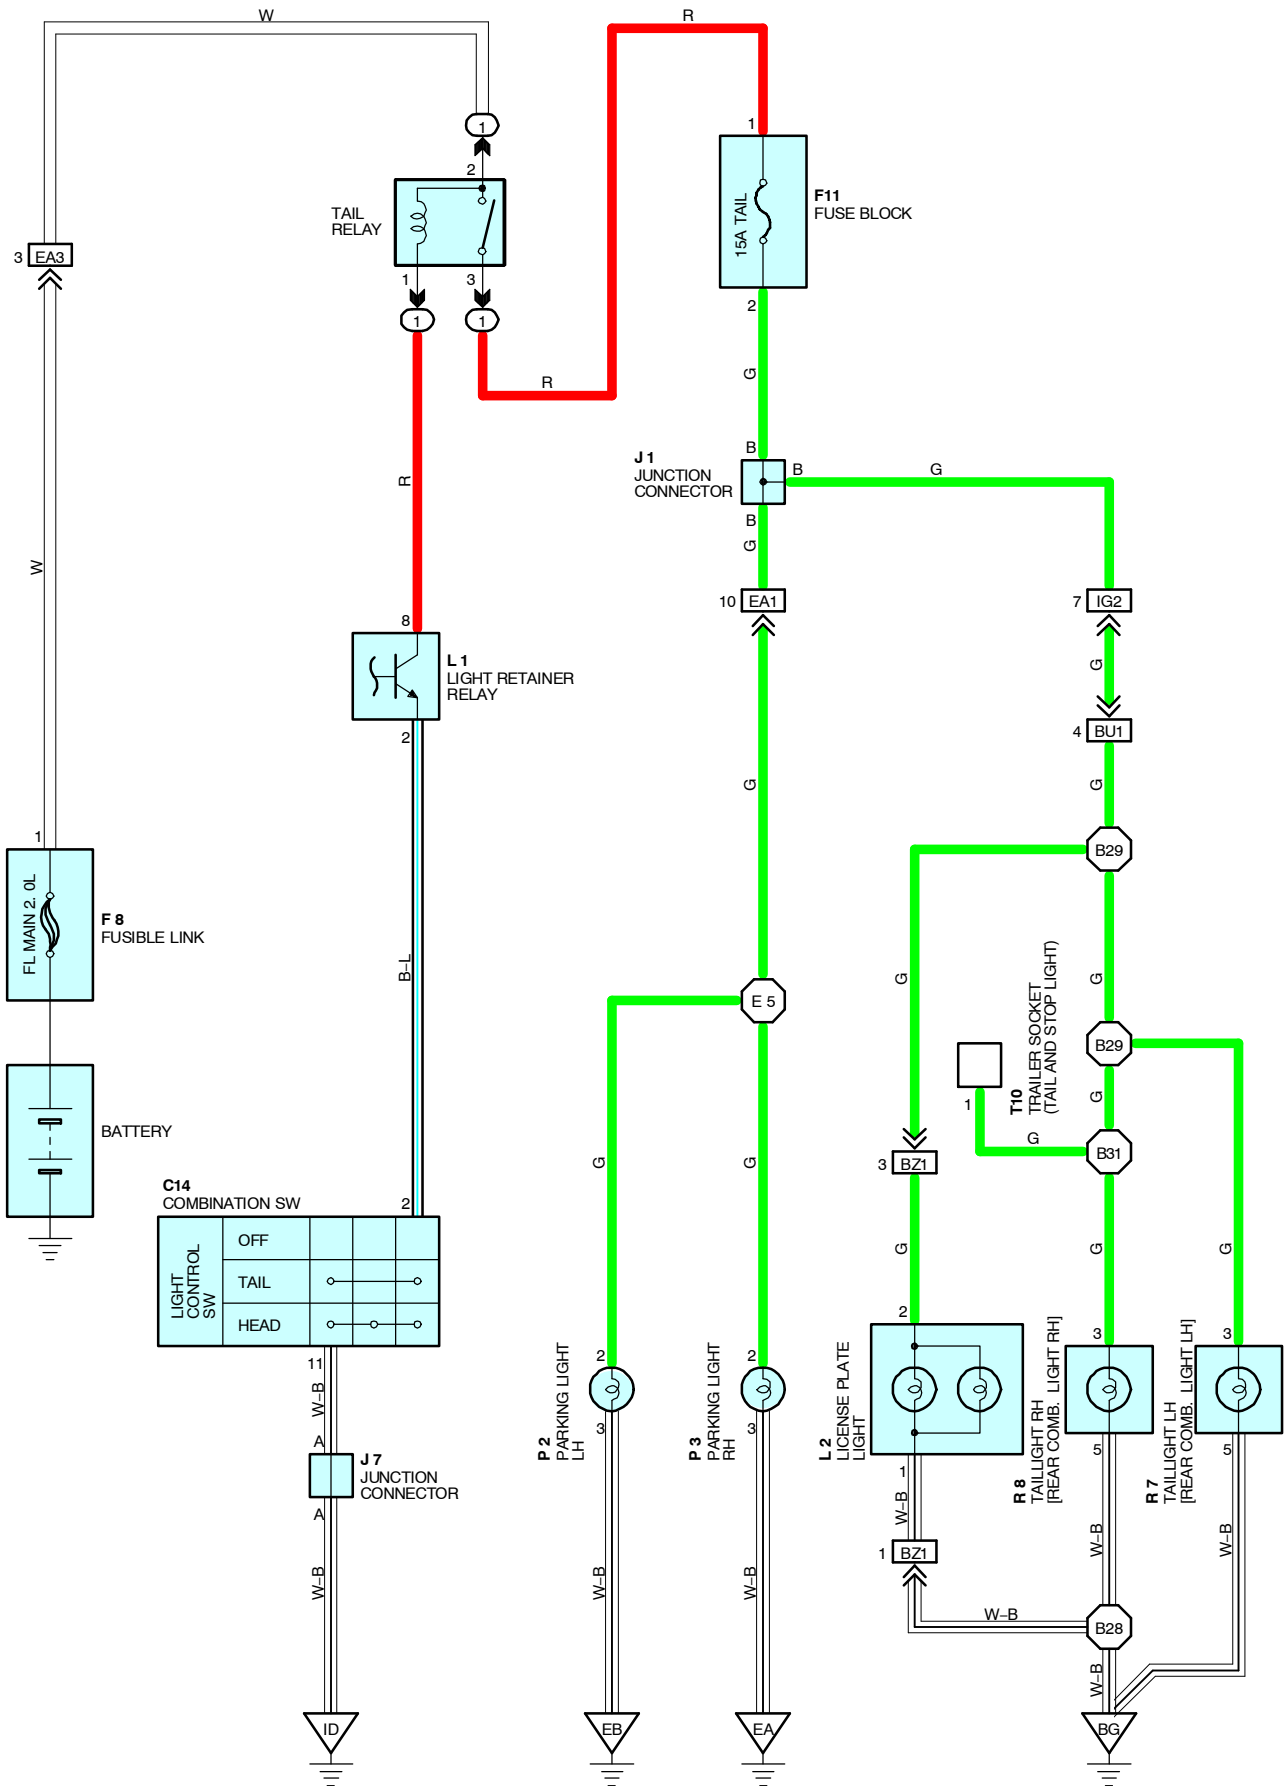

TAILLIGHT



SERVICE HINTS

TAIL RELAY

(1) 2- (1) 3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C14	24	J 7	25	P 3	23
F 8	22	L 1	25	R 7	27
F11	25	L 2	26	R 8	27
J 1	25	P 2	23	T10	27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO.1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
BU1	36	FLOOR NO.3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BZ1	38	LUGGAGE ROOM NO.3 WIRE AND FLOOR NO.3 WIRE (UNDER THE LOWER BACK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
ID	32	LEFT KICK PANEL
BG	36	LOWER BACK PANEL CENTER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5	30	ENGINE ROOM MAIN WIRE	B29	38	FLOOR NO. 3 WIRE
B28	38	FLOOR NO. 3 WIRE	B31		

C14 BLACK

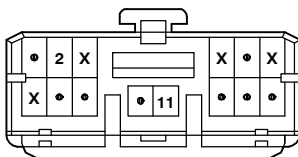


F 8

 

F11


(SEE PAGE 20)

J 1

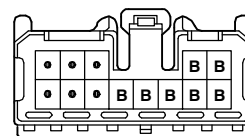


(HINT : SEE PAGE 7)

 J 7 BLUE



(HINT : SEE PAGE 7)

 
L 1




L 2



 P 2, P 3 GRAY



R 7, R 8

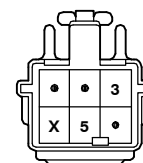

T10 BLACK

