




TURN SIGNAL AND HAZARD WARNING LIGHT

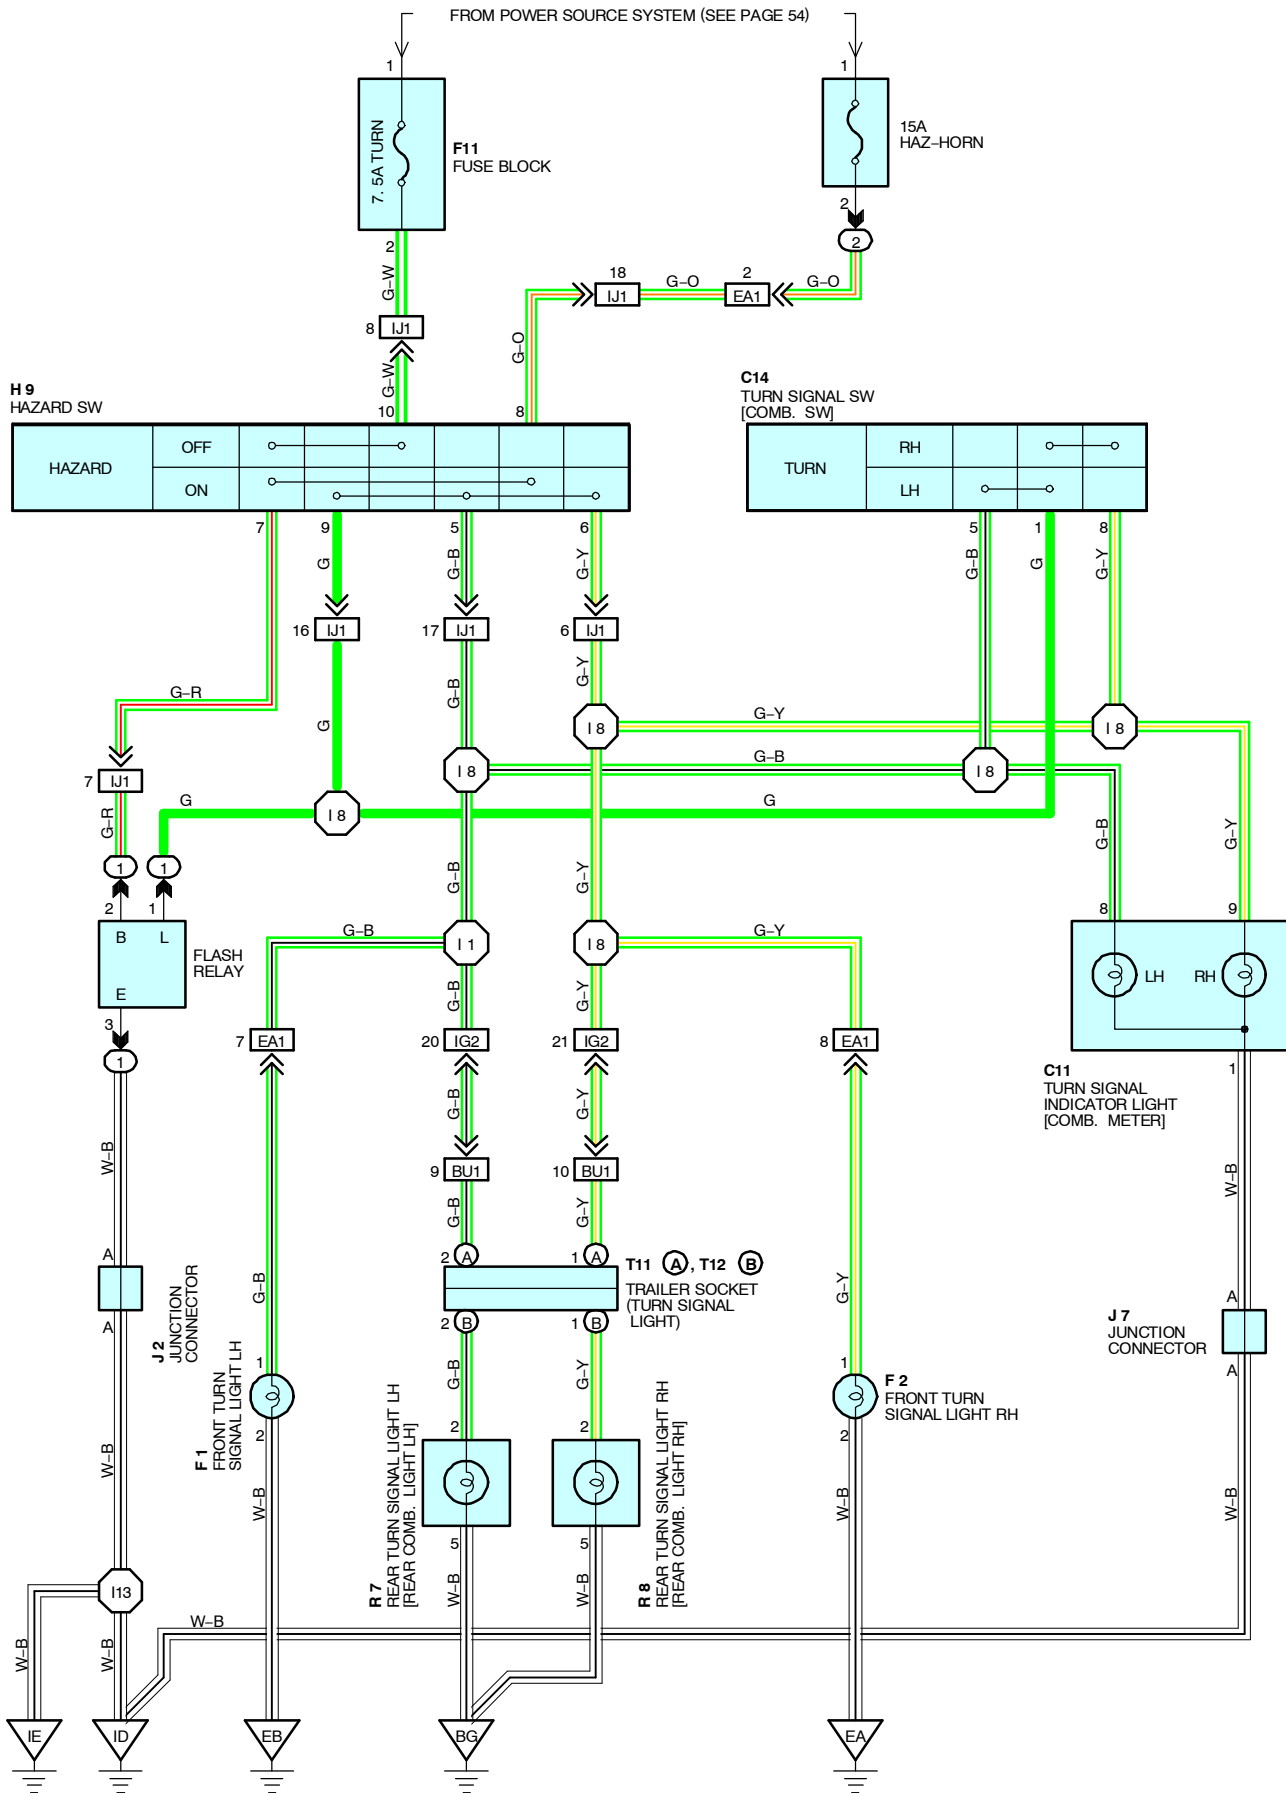

SERVICE HINTS

FLASH RELAY

- (1) 2-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW ON OR THE HAZARD SW ON
- (1) 1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH THE IGNITION SW ON THE TURN SIGNAL SW LEFT OR RIGHT POSITION, AND WITH THE HAZARD SW ON
- (1) 3-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	24	F11	25	R 7	27
C14	24	H 9	25	R 8	27
F 1	22	J 2	25	T11	A 27
F 2	22	J 7	25	T12	B 27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	21	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IJ1	34	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
BU1	36	FLOOR NO. 3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BG	36	LOWER BACK PANEL CENTER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 1			I13	34	COWL WIRE
I 8	34	COWL WIRE			

 
C11 BLUE



C14 BLACK

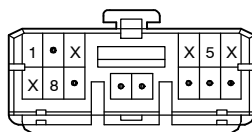


F 1, F 2 GRAY

 


F11

(SEE PAGE 20)

 H 9 BLACK




J 2 BLUE

 


(HINT : SEE PAGE 7)

 J 7 BLUE



(HINT : SEE PAGE 7)

 R 7, R 8



T11 (A) BLACK



T12 (B) BLACK

