


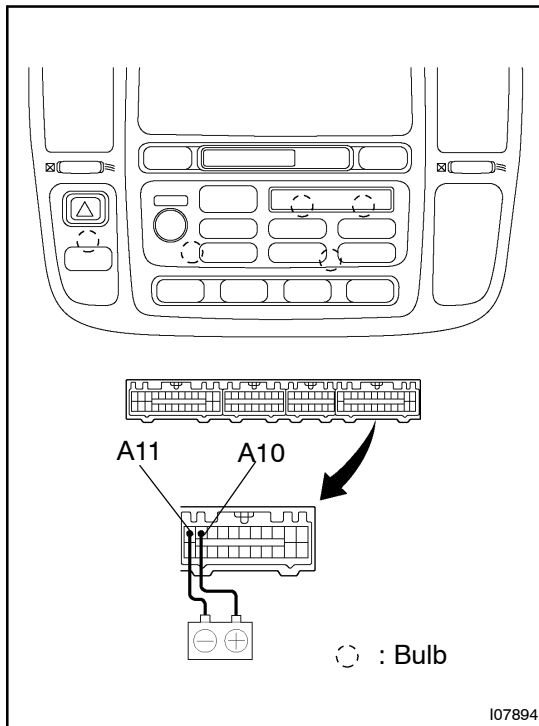


INSPECTION

1. INSPECT ILLUMINATION OPERATION

- (a) Connect the positive (+) lead from the battery to terminal A-10 and negative (-) lead to terminal A-11 then check that the illuminations lights up.

If operation is not as specified, check the faulty bulb.


- (b) Remove the bulb (See page [AC-109](#)).

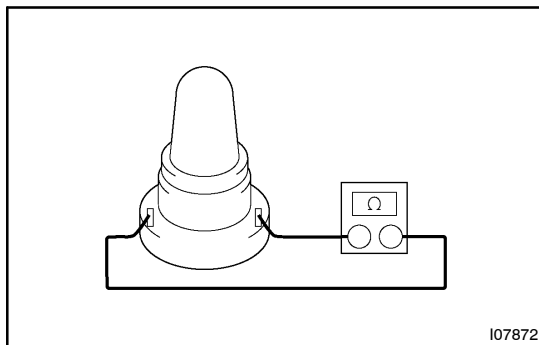

- (c) Apply the tester as shown in the illustration to the test for continuity.

If continuity exists, replace the heater control.

If no continuity exists, replace the bulb.

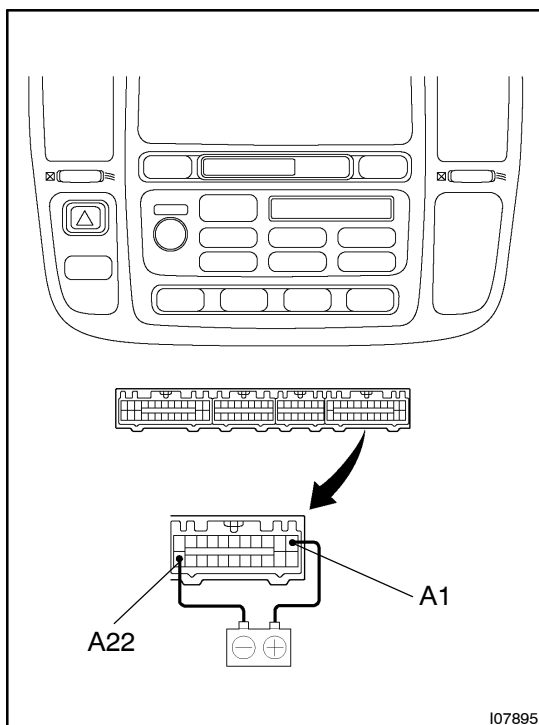

2. INSPECT INDICATORS OPERATION

- (a) Connect the positive (+) lead from the battery to terminal A-1 and negative (-) lead to terminal A-22.
- (b) Check that the indicators light up while operate the switches.

If operation is not as specified, replace the heater control.

3. INSPECT A/C CONTROL ASSEMBLY CIRCUIT (See page [DI-765](#))